



# SINGLE-ZONE ART COOL™ MIRROR WALL MOUNT ENGINEERING MANUAL

Single-Zone Art Cool Mirror Systems  
3/4 to 2 Tons



Models:

LA090HSV5

LA120HSV5

LA180HSV5

LA240HSV3

## **PROPRIETARY DATA NOTICE**

**This document, as well as all reports, illustrations, data, information, and other materials are the property of LG Electronics U.S.A., Inc., and are disclosed by LG Electronics U.S.A., Inc. only in confidence.  
This document is for design purposes only.**





A summary list of safety precautions is on page 3.

**For more technical materials such as submittals, catalogs, installation, owner's, and service manuals, visit [www.lghvac.com](http://www.lghvac.com).**

# TABLE OF CONTENTS


<b>Unit Nomenclature</b> .....	<b>4</b>
<b>LG Air Conditioner Technical Solution (LATS)</b> .....	<b>5-6</b>
<b>Art Cool Mirror Product Data</b> .....	<b>7-42</b>
<i>Mechanical Specifications</i> .....	8
<i>General Data</i> .....	9
<i>Electrical Data</i> .....	11
<i>Functions, Controls, and Options</i> .....	12
<i>Dimensions</i> .....	13-19
<i>Acoustic Data</i> .....	19-23
<i>Refrigerant Flow Diagrams</i> .....	24-26
<i>Wiring Diagrams</i> .....	27-31
<i>Electrical Connections</i> .....	32-35
<i>Air Flow and Temperature Distribution</i> .....	36-40
<i>Accessories</i> .....	41-42
<b>Art Cool Mirror Performance Data</b> .....	<b>43-51</b>
<i>Cooling Capacity Data</i> .....	44-45
<i>Heating Capacity Data</i> .....	46-47
<i>Maximum Heating Capacity Data</i> .....	48-49
<i>Equipment Selection Procedure</i> .....	50-51
<b>Art Cool Mirror Application Guidelines</b> .....	<b>52-61</b>
<i>Placement Considerations</i> .....	53-57
<i>Installing Outdoor Unit Indoors</i> .....	58-60
<i>Refrigerant Piping Design</i> .....	61

## TABLE OF SYMBOLS

 <b>DANGER</b>	<i>This symbol indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.</i>
 <b>WARNING</b>	<i>This symbol indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.</i>
 <b>CAUTION</b>	<i>This symbol indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.</i>
<b>Note:</b>	<i>This symbol indicates situations that may result in equipment or property damage accidents only.</i>
	<i>This symbol indicates an action that must not be performed.</i>

# UNIT NOMENCLATURE

## Indoor Units and Outdoor Units

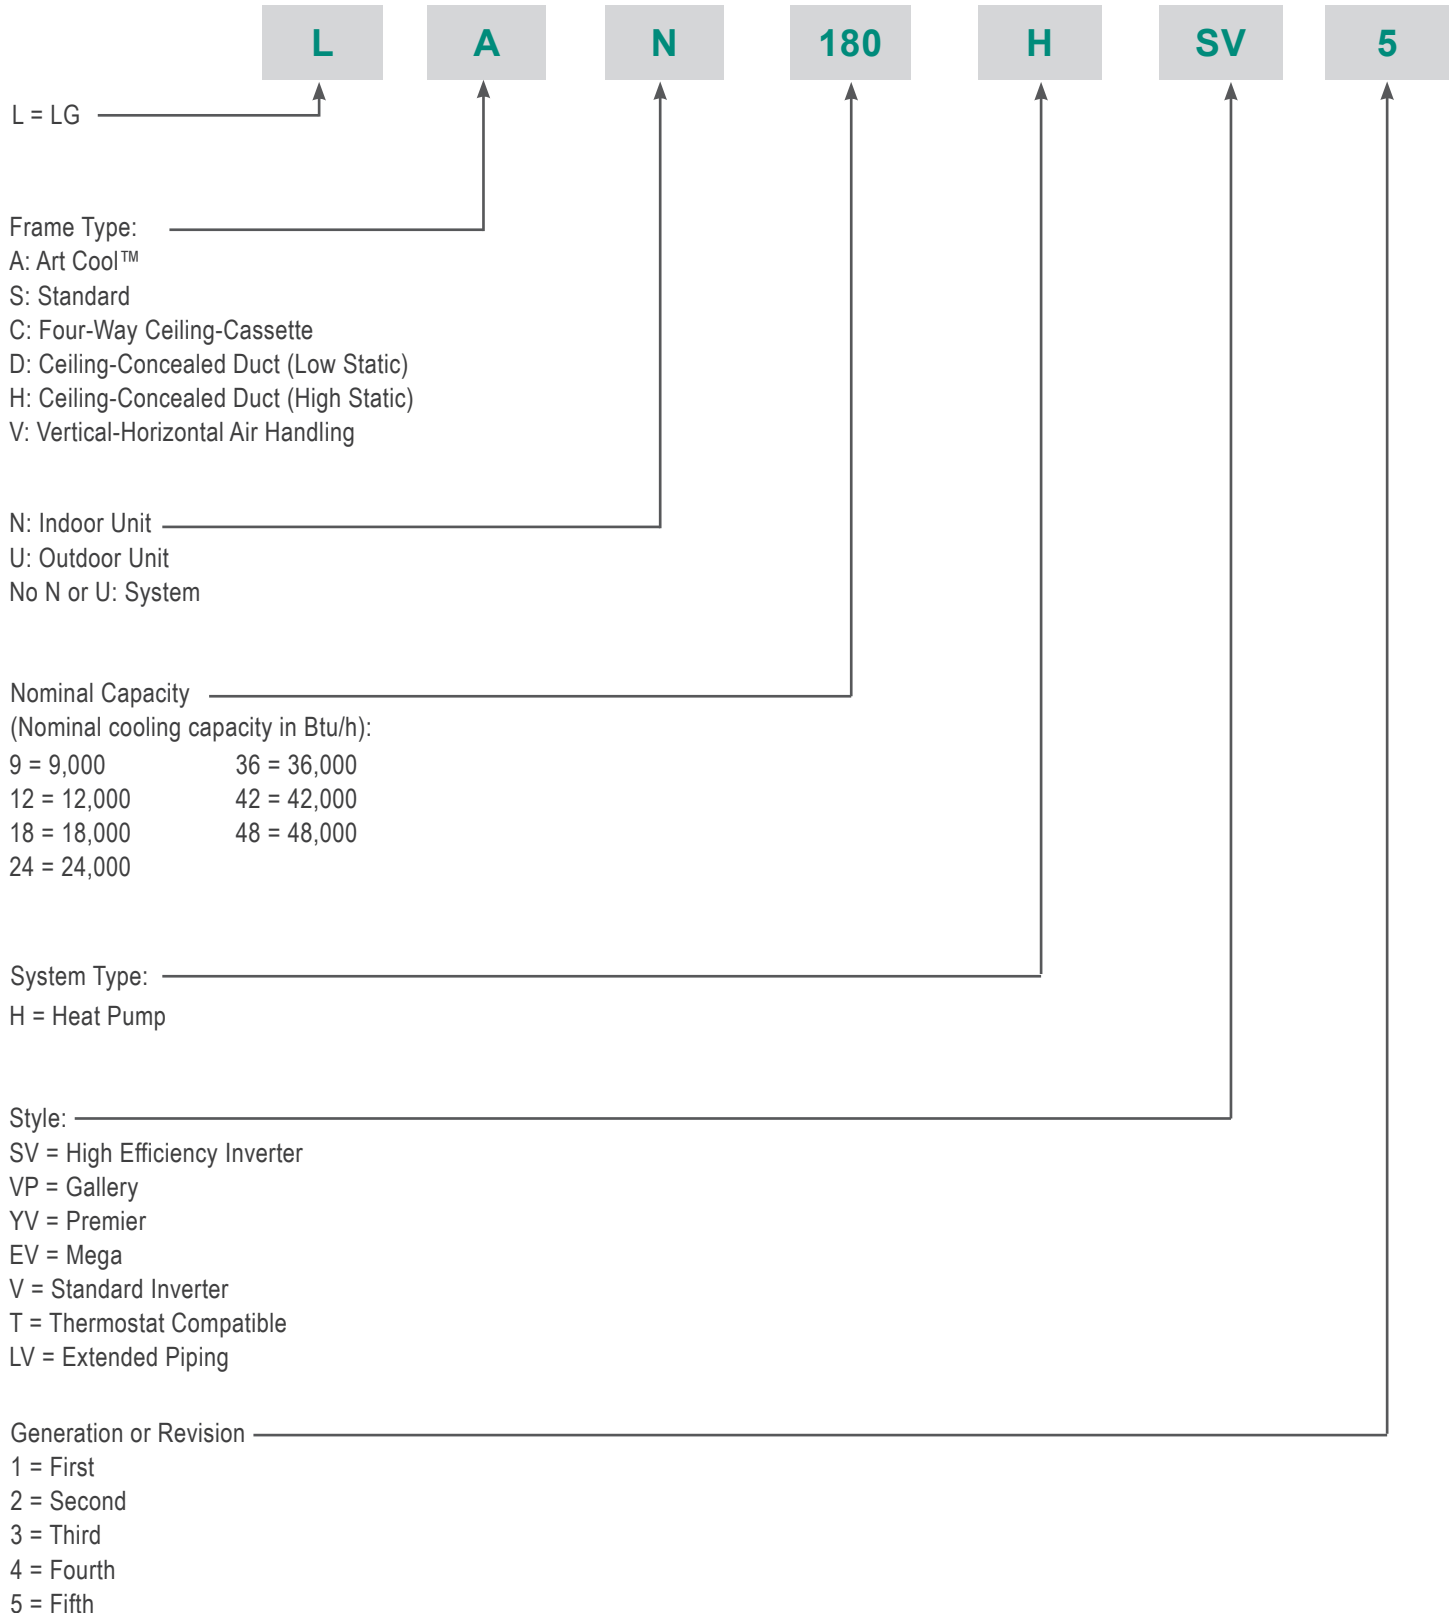

# LG AIR CONDITIONER TECHNICAL SOLUTION (LATS)

## LG Air Conditioner Technical Solution (LATS) Software

A properly designed and installed refrigerant piping system is critical to the optimal performance of LG air-conditioning systems. To assist engineers, LG offers, free of charge, LG Air Conditioner Technical Solution (LATS) software—a total design solution for LG air conditioning systems. Contact your LG Rep for the best software program for your application.

### Note:

To reduce the risk of designing an improper applied system or one that will not operate correctly, LG requires that LATS software be used on all projects.

### Formats

LATS is available to LG customers in three user interfaces: LATS HVAC, LATS CAD2, and LATS Revit. All three LATS formats are available through [www.myLGHVAC.com](http://www.myLGHVAC.com), or contact an LG Sales Representative.

**LATS HVAC** is a Windows®-based application that aids engineers in designing LG Variable Refrigerant Flow (VRF), Multi F / Multi F MAX, Single-Zone, and Energy Recovery Ventilator (ERV) systems.

\*Windows® is a registered mark of Microsoft® Corporation.

**LATS CAD2** combines the LG LATS program with AutoCAD® software\*\*. It permits engineers to layout and validate LG Multi V Variable Refrigerant Flow (VRF), Multi F / Multi F MAX, Single-Zone, and Energy Recovery Ventilator (ERV) systems directly into CAD drawings.

**LATS Revit** integrates the LG LATS program with Revit® software\*\*. It permits engineers to layout and validate Multi V VRF systems directly into Revit drawings.

\*\*AutoCAD® and Revit® are both registered marks of Autodesk, Inc.

### Features

All LG product design criteria have been loaded into the program, making LATS simple to use: double click or drag and drop the component choices. Build systems in Tree Mode where the refrigerant system can be viewed. Switch to a Schematic diagram to see the electrical and communications wiring.

LATS software permits the user to input region data, indoor and outdoor design temperatures, modify humidity default values, zoning, specify type and size of outdoor units and indoor units, and input air flow and external static pressure (ESP) for ducted indoor units.

The program can also:

- Import building loads from a separate Excel file.
- Present options for outdoor unit auto selection.
- Automatically calculate component capacity based on design conditions for the chosen region.
- Verify if the height differences between the various system components are within system limits.
- Provide the correct size of each refrigerant piping segment and LG Y-Branches and Headers.
- Adjust overall piping system length when elbows are added.
- Check for component piping limitations and flag if any parameters are broken.
- Factor operation and capacity for defrost operation.
- Calculate refrigerant charge, noting any additional trim charge.
- Suggest accessories for indoor units and outdoor units.
- Run system simulation.

### Note:

Features depend on which LATS program is being used, and the type of system being designed.

Figure 1: Example of LATS CAD2.



# LG AIR CONDITIONER TECHNICAL SOLUTION (LATS)

## LATS Generates a Complete Project Report

LATS software also generates a report containing project design parameters, cooling and heating design data, system component performance, and capacity data. The report includes system combination ratio and refrigerant charge calculations; and provides detailed bill of material, including outdoor units, indoor units, control devices, accessories, refrigerant pipe sizes segregated by building, by system, by pipe size, and by pipe segments. LATS can generate an Excel GERP report that can imported into the LG SOPS pricing and ordering system.

## Proper Design to Install Procedure

LG encourages a two report design-to-install-procedure. After the design engineer determines building / zone loads and other details, the engineer opens the LATS program and inputs the project's information. When the design is complete, the "Auto Piping" and "System Check" functions must be used to verify piping sizes, limitations, and if any design errors are present. If errors are found, engineers must adjust the design, and run Auto Piping and System Check again. When the design passes the checks, then the engineer prints out a project "Shop Drawing" (LATS Tree Diagram) and provides it to the installing contractor. The contractor must follow the LATS Tree Diagram when building the piping system, but oftentimes the design changes on the building site:


- Architect has changed location and/or purpose of room(s).
- Outdoor unit cannot be placed where originally intended.
- Structural elements prevent routing the piping as planned.
- Air conditioning system conflicts with other building systems (plumbing, gas lines, etc.).

The contractor must mark any deviation from the design on the Shop Drawing, including as-built straight lines and elbows. This "Mark Up" drawing must be returned to the design engineer or Rep, who must input contractor changes into the LATS file. (Copy the original LATS software file, save and rename as a separate file, and modify all piping lengths by double-clicking on each length and editing information.) Like the shop drawing, the Auto Piping and System Check must also be run on this new "As Built" drawing. The design engineer or Rep must then provide the final As Built file to the contractor. The Mark Up version must be compared to the As Built version for the following:

- Differences in pipe diameter(s). If incorrect diameters have been installed, the piping must be changed out. If pipe diameters have changed, check to see if Y-Branches will also need to be changed.
- Changes to outdoor unit and indoor unit capacities. Capacities changes may impact line length changes.
- Additional refrigerant charge quantity ("Trim Charge"). Trim charge will change if piping lengths and diameters change. The As Built version must reflect installed piping lengths to ensure correct trim charge.

All documents submitted by the contractor, as well as the Shop Drawing and the As Built Drawing files must be provided for commissioning purposes. Model and serial numbers for all system components must also be submitted. If the steps previously detailed are not followed, and all documents are not provided to the LG trained Commissioner, the project runs the risk of not being commissioned and voiding any limited warranty LG offers on the equipment.

Figure 2: Example of a LATS Tree Diagram.

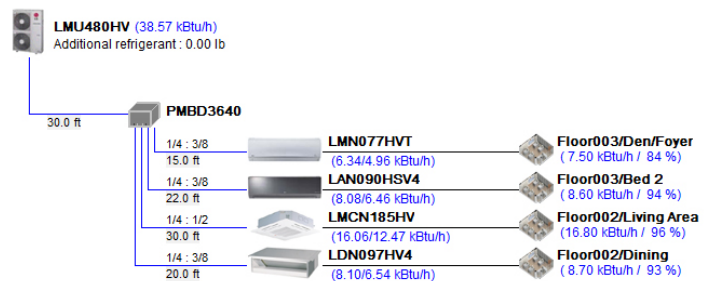

# ART COOL™ MIRROR PRODUCT DATA

**“Mechanical Specifications” on page 8**

**“General Data” on page 9**

**“Electrical Data” on page 11**

**“Functions, Controls, and Options” on page 12**

**“Dimensions” on page 13**

**“Acoustic Data” on page 20**

**“Refrigerant Flow Diagrams” on page 24**

**“Wiring Diagrams” on page 27**

**“Electrical Connections” on page 32**

**“Airflow and Temperature Distribution” on page 36**

**“Accessories” on page 41**

# MECHANICAL SPECIFICATIONS

## General

LG Single Zone Art Cool Mirror Wall Mount systems are comprised of a single outdoor unit connected to a single indoor unit with a single refrigerant circuit.

These single zone systems can operate in either cooling or heating mode. These systems are capable of changing mode within a maximum time of three (3) minutes to ensure temperature can be properly maintained.

LG Single Zone Art Cool Mirror systems are manufactured in a facility registered to ISO 9001 and ISO 14001, which is a set of standards applying to environmental protection set by the International Organization for Standardization (ISO). The units are listed by Intertek Electrical Testing Laboratories (ETL) and bear the ETL label. Wiring in these units are in accordance with the National Electrical Code (NEC).

## Temperature Ranges

### Outdoor Unit

Operating ranges for outdoor units of 14°F to 118°F DB for cooling and -4°F to +65°F WB for heating.

### Indoor Unit

Operating ranges for indoor units of 53°F to 75°F WB for cooling and 60°F to 86°F DB for heating.

Installing an optional Low Ambient Wind Baffle Kit will allow operation down to 0°F in cooling mode for these single zone systems.

## Casing / Frame

Outdoor unit is constructed with pre-coated metal (PCM). Indoor unit is constructed of heavy duty Acrylonitrile Butadiene Styrene (ABS) and High Impact Polystyrene (HIPS) plastic.

## Refrigerant System

The refrigeration system consists of a single refrigeration circuit and uses R410A refrigerant. The outdoor unit is provided with factory installed components, including a refrigerant strainer, four-way reversing valve, electronic controlled expansion valve (EEV), high and low side charging ports, service valves, and interconnecting piping.

## Refrigeration Oil Control

Heat pump outdoor units have a centrifugal oil separator and controls to ensure sufficient oil supply is maintained, and that oil does not travel with the refrigerant.

Figure 3: Single Zone Art Cool Mirror Wall Mount Indoor Unit.



## Compressors

The outdoor unit is equipped with one hermetic digitally controlled inverter driven twin rotary compressor to modulate capacity (modulation in 1 Hz increments). Frequency ranges for the outdoor units are:

- LSU090HSV5 = 10-84 Hz
- LSU120HSV5 = 10-92 Hz
- LSU180HSV5 = 10-93 Hz
- LAU240HSV3 = 10-100 Hz

Overcurrent protection and vibration isolation are integrated with the compressor.

## Outdoor Unit Coil

Heat pump outdoor unit coils are made of a nonferrous construction with louvered fins on copper tubing, and are protected with an integral coil guard. Coil fans have a factory applied corrosion resistant GoldFin™ material with hydrophilic coating.

Drain pan heaters are also available for the outdoor units. 9,000 and 12,000 Btu/h outdoor units include a factory-installed drain pan heater. The drain pan heater for 18,000 and 24,000 Btu/h outdoor units is offered as an optional accessory.

## Fans and Motors

The outdoor unit includes one direct fan drive, variable speed propeller type fan. The Brushless Digitally Controlled (BLDC) fan motor shall have inherent protection, permanently lubricated bearings, and variable speed with a maximum speed up to 950 rpm. Raised guards are provided to limit contact with moving parts.

The outdoor unit has horizontal discharge airflow.

## Electrical

These units are available in 208-230V, 60 Hz, 1-phase power supply. These units are capable of operating within voltage limits of  $\pm 10\%$  rated voltage, and include overcurrent protection.

## Controls

The indoor unit casing has a factory-standard, integral infrared sensor designed to communicate with the supplied LG wireless handheld remote controller. An optional LG supplied wired controller is available as an additional accessory. Communication between the indoor unit and the outdoor unit is accomplished through 18 AWG, four-core, stranded and shielded power/communication cable.

HSV5 indoor units have built-in Wi-Fi and can be controlled by LG's SmartThinQ™ app on a smartphone. A field-supplied Wi-Fi network and smart device are required. The SmartThinQ app is free and is available for Android™ and iOS.

Android is a trademark of Google LLC.



# GENERAL DATA

## Pairing Table

The following table shows the available outdoor and indoor units, along with the factory provided controller.

Table 1: Single Zone Art Cool Mirror Pairing Table

Outdoor Unit Model	Indoor Unit Model	Controller
<p>LSU090HSV5, LSU120HSV5</p> 	<p>LAN090HSV5, LAN120HSV5</p> 	<p>AKB74955602</p> 
<p>LSU180HSV5</p> 	<p>LAN180HSV5</p> 	<p>AKB74955602</p> 
<p>LAU240HSV3</p> 	<p>LAN240HSV3</p> 	<p>AKB73835320</p> 

# GENERAL DATA / SPECIFICATIONS

Table 2: Single Zone Art Cool Mirror System Specifications.

System Model Number (IDU/ODU)	LA090HSV5 (LAN090HSV5/ LSU090HSV5)	LA120HSV5 (LAN120HSV5/ LSU120HSV5)	LA180HSV5 (LAN180HSV5/ LSU180HSV5)	LA240HSV3 (LAN240HSV3/ LAU240HSV3)
Cooling Capacity (Min/Rated/Max) (Btu/h)	1,023 ~ 9,000 ~ 12,625	1,023 ~ 12,000 ~ 13,785	3,070 ~ 18,000 ~ 29,515	3,070 ~ 22,000 ~ 30,030
Cooling Power Input <sup>1</sup> (kW)	0.20 ~ 0.62 ~ 0.87	0.20 ~ 0.96 ~ 1.35	0.30 ~ 1.43 ~ 2.00	2.04
Heating Capacity (Min/Rated/Max) (Btu/h)	1,023 ~ 10,900 ~ 17,061	1,023 ~ 13,600 ~ 22,178	3,070 ~ 21,600 ~ 38,898	3,070 ~ 27,600 ~ 38,898
Heating Power Input <sup>1</sup> (kW)	0.20 ~ 0.71 ~ 1.89	0.20 ~ 1.04 ~ 1.97	0.66 ~ 1.73 ~ 3.98	2.67
COP	4.50	3.83	3.66	3.03
<b>Maximum Heating Capacity (Btu/h)</b>				
Outdoor 17°F (WB)/Indoor 70°F (DB)	11,080 (102%)	13,810 (102%)	22,340 (103%)	28,020 (102%)
Outdoor 5°F (WB)/Indoor 70°F (DB)	9,570 (88%)	11,930 (88%)	19,300 (89%)	24,220 (88%)
Outdoor -4 °F (WB)/Indoor 70°F (DB)	8,310 (76%)	10,360 (76%)	16,760 (77%)	21,030 (76%)
EER	14.52	12.50	12.58	10.78
SEER	23.50	22.70	21.50	20.0
HSPF	11.3	11.4	10.2	10.0
Power Supply (V/Hz/Ø)	208-230/60/1			
<b>Outdoor Unit Operating Range<sup>2</sup></b>				
Cooling (°F DB)	14 to 118			
Heating (°F WB)	-4 to 65			
<b>Indoor Unit Operating Range</b>				
Cooling (°F WB)	53 to 75			
Heating (°F DB)	60 to 86			
<b>Indoor Temperature Setting Range</b>				
Cooling (°F)	64 to 86			
Heating (°F)	60 to 86			
<b>Unit Data</b>				
Refrigerant Type <sup>3</sup>	R410A			
Refrigerant Control	EEV			
IDU Sound Pressure <sup>4</sup> dB(A) (H/M/L/Sleep)	39 / 33 / 23 / 19	39 / 33 / 23 / 19	45 / 40 / 35 / 29	45/40/35/29
ODU Sound Pressure <sup>4</sup> dB(A) (Cool/Heat)	45 / 48	45 / 48	53 / 53	53 / 53
<b>Unit Weight (lbs)</b>				
IDU (Net/Shipping)	20.5/ 25.6	20.5/ 25.6	29.8/36.4	32/39
ODU (Net/Shipping)	74.1 / 78.9	74.1 / 78.9	116.8 / 126.5	121/131
Power/Communication Cable <sup>5</sup> (No. x AWG)	4 x 18			
<b>Compressor</b>				
Compressor Type (Qty)	Twin Rotary (1)	Twin Rotary (1)	Twin Rotary (1)	Twin Rotary (1)
<b>Fan</b>				
IDU Type (Qty)	Cross Flow (1)			
ODU Type (Qty)	Propeller (1)			
Motor/Drive	Brushless Digitally Controlled/Direct			
<b>Airflow Rate</b>				
IDU Cooling (Max /H /M /L [CFM])	459 / 338 / 317 / 194	459 / 338 / 317 / 194	706 / 530 / 477 / 371	735 / 622 / 509 / 339
IDU Heating (Max /H /M /L [CFM])	459 / 338 / 317 / 229	459 / 338 / 317 / 229	706 / 547 / 494 / 371	735 / 622 / 509 / 339
ODU Max (CFM)	1,165	1,165	2,119	2,119
<b>Piping</b>				
Liquid Line (in, OD)	ø1/4	ø1/4	ø3/8	3/8
Vapor Line (in, OD)	ø3/8	ø3/8	ø5/8	5/8
Condensation Line (OD, ID)	27/32, 5/8	27/32, 5/8	27/32, 5/8	27/32, 5/8
Additional Refrigerant Charge (oz/ft)	0.22	0.22	0.38	0.38
Pipe Length <sup>6</sup> (Min./Std./Max.) (ft.)	9.8 / 24.6 / 82	9.8 / 24.6 / 82	9.8 / 24.6 / 114.8	9.8 / 24.6 / 98.4
Piping Length <sup>6</sup> (no add'l refrigerant, ft)	41.0	41.0	24.6	24.6
Max Elevation Difference (ft)	49.2	49.2	49.2	49.2

EEV: Electronic Expansion Valve IDU: Indoor Unit ODU: Outdoor Unit

This unit comes with a dry helium charge.

This data is rated 0 ft above sea level, with 24.6 ft of refrigerant line per indoor unit and a 0 ft level difference between outdoor and indoor units.

Cooling capacity rating obtained with air entering the indoor coil at 80°F dry bulb (DB) and 67°F wet bulb (WB); and outdoor ambient conditions of 95°F dry bulb (DB) and 75°F wet bulb (WB). Heating capacity rating obtained with air entering the indoor unit at 70°F dry bulb (DB) and 60°F wet bulb (WB); and outdoor ambient conditions of 47°F dry bulb (DB) and 43°F wet bulb (WB).

<sup>1</sup> Power Input is rated at high speed.

<sup>2</sup> Optional low Ambient Wind Baffle Kit allows operation down to 0°F in cooling mode.

<sup>3</sup> Take appropriate actions at the end of HVAC equipment life to recover, recycle, reclaim or destroy R410A refrigerant according to applicable regulations (40 CFR Part 82, Subpart F) under section 608 of CAA.

<sup>4</sup> Sound pressure levels are tested in an anechoic chamber under ISO Standard 1996.

<sup>5</sup> All communication / connection (power) cable from the outdoor unit to the indoor unit are field supplied and is to be minimum four-conductor, 18 AWG, stranded, shielded or unshielded (if shielded, it must be grounded to the chassis of the outdoor unit only), and must comply with applicable local and national codes.

<sup>6</sup> Piping lengths are equivalent.

# ELECTRICAL DATA

## Electrical Data

Table 3: Single Zone Art Cool Mirror Wall Mount Electrical Data.

Indoor Unit	Outdoor Unit	Hertz	Voltage	Voltage Range (Min. to Max.)	MCA	MOP	Compressor Quantity	Compressor Motor RLA		Outdoor Fan Motor		Indoor Fan Motor	
								Cooling	Heating	W	FLA	W	FLA
LAN090HSV5	LSU090HSV5	60	208 - 230	187 - 253	10.0	15.0	1	7.0	7.0	43	0.4	30	0.4
LAN120HSV5	LSU120HSV5				10.0	15.0	1	7.0	7.0	43	0.4	30	0.4
LAN180HSV5	LSU180HSV5				13.0	20.0	1	9.6	9.6	124	0.25	70	0.4
LAN240HSV3	LAU240HSV3				19.0	25.0	1	14.6	14.6	124	0.25	30	0.4

Voltage tolerance is  $\pm 10\%$ .

Maximum allowable voltage unbalance is 2%.

MCA = Minimum Circuit Ampacity.

Maximum Overcurrent Protection (MOP) is calculated as follows: (Largest motor FLA x 2.25) + (Sum of other motor

FLA) rounded down to the nearest standard fuse size.

RLA = Rated Load Amps.

FLA = Full Load Amps.

W: Fan Motor Rated Output (W).

# FUNCTIONS, CONTROLS, AND OPTIONS

## Indoor Unit

Table 4: Indoor Unit—Functions, Controls and Options.

Indoor Unit Type		LA090HSV5	LA120HSV5	LA180HSV5	LA240HSV3
Airflow	Air Supply Outlet	1	1	1	1
	Airflow Direction Control (Left / Right)	5 Steps	5 Steps	5 Steps	5 Steps
	Airflow Direction Control (Up / Down)	6 Steps	6 Steps	6 Steps	6 Steps
	Auto Swing (Left / Right)	√	√	√	√
	Auto Swing (Up / Down)	√	√	√	√
	Fan Speed Airflow Steps (Fan / Cool / Heat)	6 / 6 / 6	6 / 6 / 6	6 / 6 / 6	6 / 6 / 6
	Natural Wind (Auto Wind)	√	√	√	√
	Jet Cool / Jet Heat (Power Wind)	√ / √	√ / √	√ / √	√ / √
	Comfort Air	√	√	√	√
Air Purifying	Prefilter (Washable / Anti-fungal <sup>1</sup> )	√	√	√	√
	3M Micro Dust Filter	√	√	√	√
Functions	Hot Start	√	√	√	√
	Self Diagnostics	√	√	√	√
	Defrost	√	√	√	√
	Dry (Dehumidification) Operation	√	√	√	√
	Auto Changeover	√	√	√	√
	Auto Cleaning (Coil Dry)	√	√	√	√
	Auto Restart Operation	√	√	√	√
	Child Lock <sup>1</sup>	√	√	√	√
	Forced Operation	√	√	√	√
	Sleep Mode	7 Hour	7 Hour	7 Hour	7 Hour
	Timer (24 Hour On / Off)	√	√	√	√
	Weekly Timer <sup>1</sup>	√	√	√	√
	Two Thermistor Control <sup>1</sup>	√	√	√	√
	Low Ambient Operation	√	√	√	√
	Overheat Protection	√	√	√	√
	Smart Diagnosis	√	√	√	√
	Indoor Unit Display Type	Number Display	Number Display	Number Display	Number Display
	Indoor Unit Display Light	On / Off	On / Off	On / Off	On / Off
	Energy Saving	√	√	√	√
Mode Lock	Cooling Only	Cooling Only	Cooling Only	Cooling Only	
Central Controllers	AC Smart IV	PACS4B000	PACS4B000	PACS4B000	PACS4B000
	ACP IV	PACP4B000	PACP4B000	PACP4B000	PACP4B000
	PI-485	PMNFP14A1	PMNFP14A1	PMNFP14A1	PMNFP14A1
Remote Controllers	MultiSITE™ CRC1	PREMTBVC0	PREMTBVC0	PREMTBVC0	PREMTBVC0
	MultiSITE CRC1+	PREMTBVC1	PREMTBVC1	PREMTBVC1	PREMTBVC1
Integration Solution	MultiSITE Communications Manager	PBACNBTR0A	PBACNBTR0A	PBACNBTR0A	PBACNBTR0A
Building Network Unit	LonWorks® Gateway	PLNWKB100	PLNWKB100	PLNWKB100	PLNWKB100
	AC Smart IV BACnet® Gateway	PBACNA000	PBACNA000	PBACNA000	PBACNA000
	ACP IV BACnet Gateway	PQNFB17C2	PQNFB17C2	PQNFB17C2	PQNFB17C2
Other	Dry Contact	PDRYCB100, PDRYCB300, PDRYCB400			
	Wind Baffle Kit	ZLABGP01A	ZLABGP01A	ZLABGP02A	ZLABGP02A
	Wi-Fi <sup>2</sup>	√	√	√	X
	Water Level Sensor Connection (for optional AG-9300-LG)	√	√	√	√
	Base Pan Heater	√	√	PQSH1201	PQSH1201
	Smart Inverter Monitoring System (SIMS)	√	√	√	√

√ = Standard feature  
X = Not available

<sup>1</sup>Function can operate only when a wired remote controller is connected.

<sup>2</sup>Wi-Fi is only compatible with 2.4 GHz band, and cannot be used when dry contact mode is active. When changing from Wi-Fi mode to dry contact mode, normal operation resumes in approximately 3 minutes.


LonWorks® is a trademark of Echelon Corporation; BACnet® is a registered trademark of ASHRAE.

# INDOOR UNIT DIMENSIONS

## LAN090HSV5, LAN120HSV5

### Dimensions for LAN090HSV5, LAN120HSV5

Figure 4: LAN090HSV5 LAN120HSV5 Unit Dimensions.

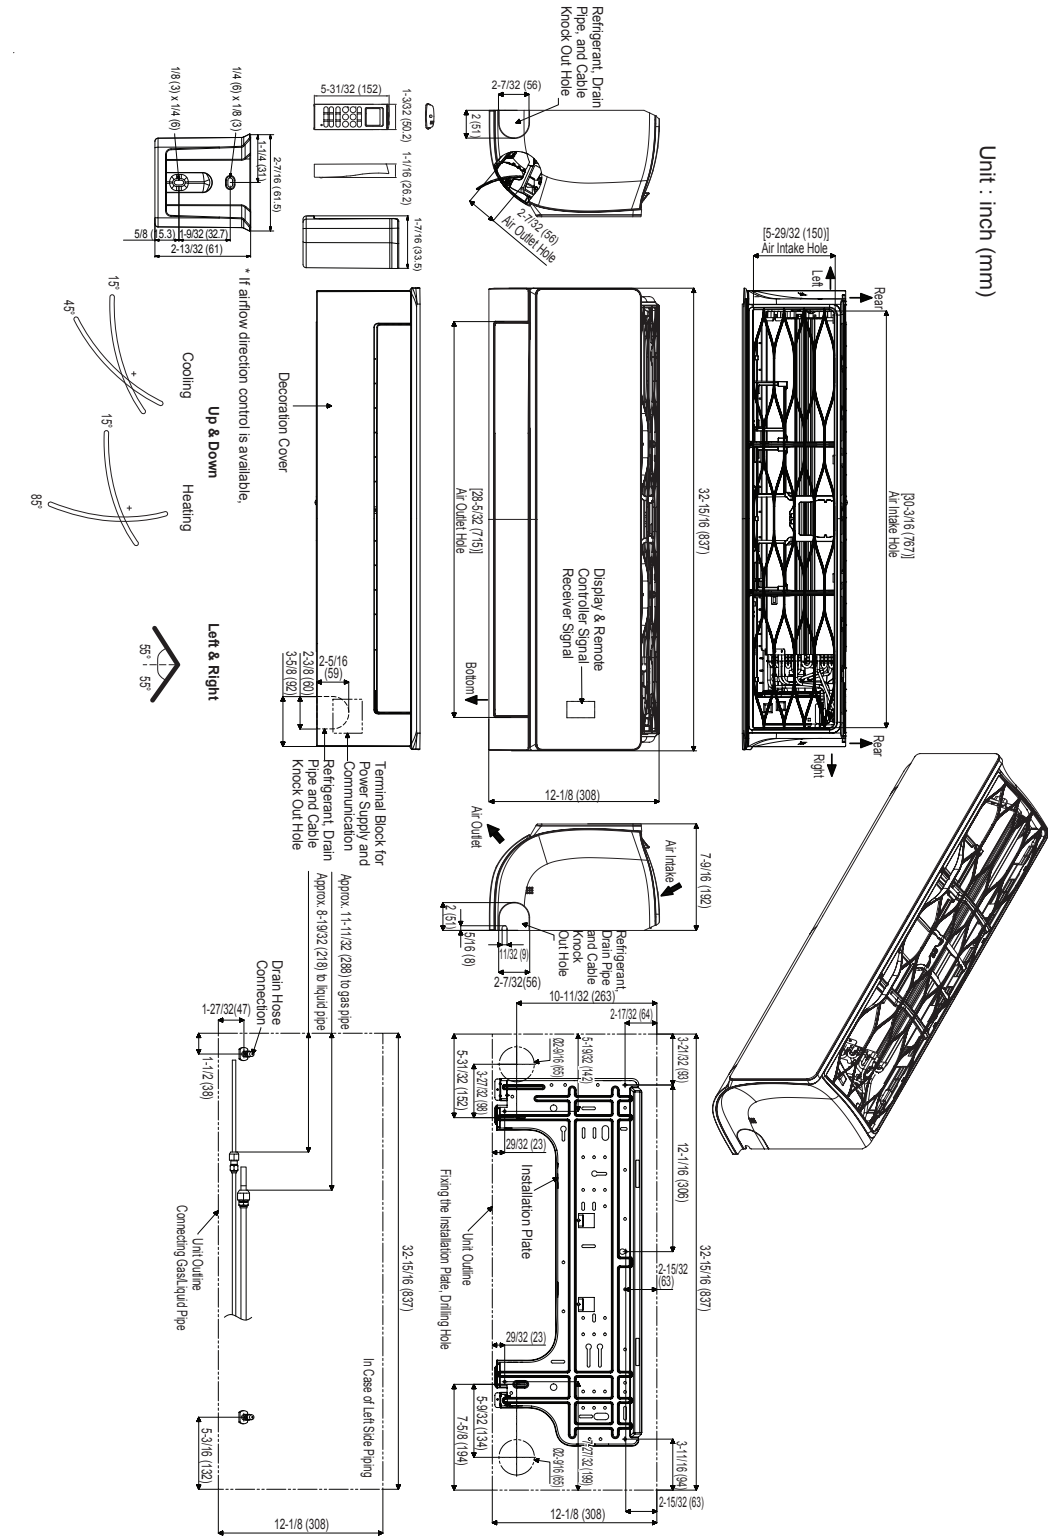

Product Data




# INDOOR UNIT DIMENSIONS

## LAN180HSV5

### Dimensions for LAN180HSV5

Figure 5: LAN180HSV5 Unit Dimensions.

Unit : inch (mm)

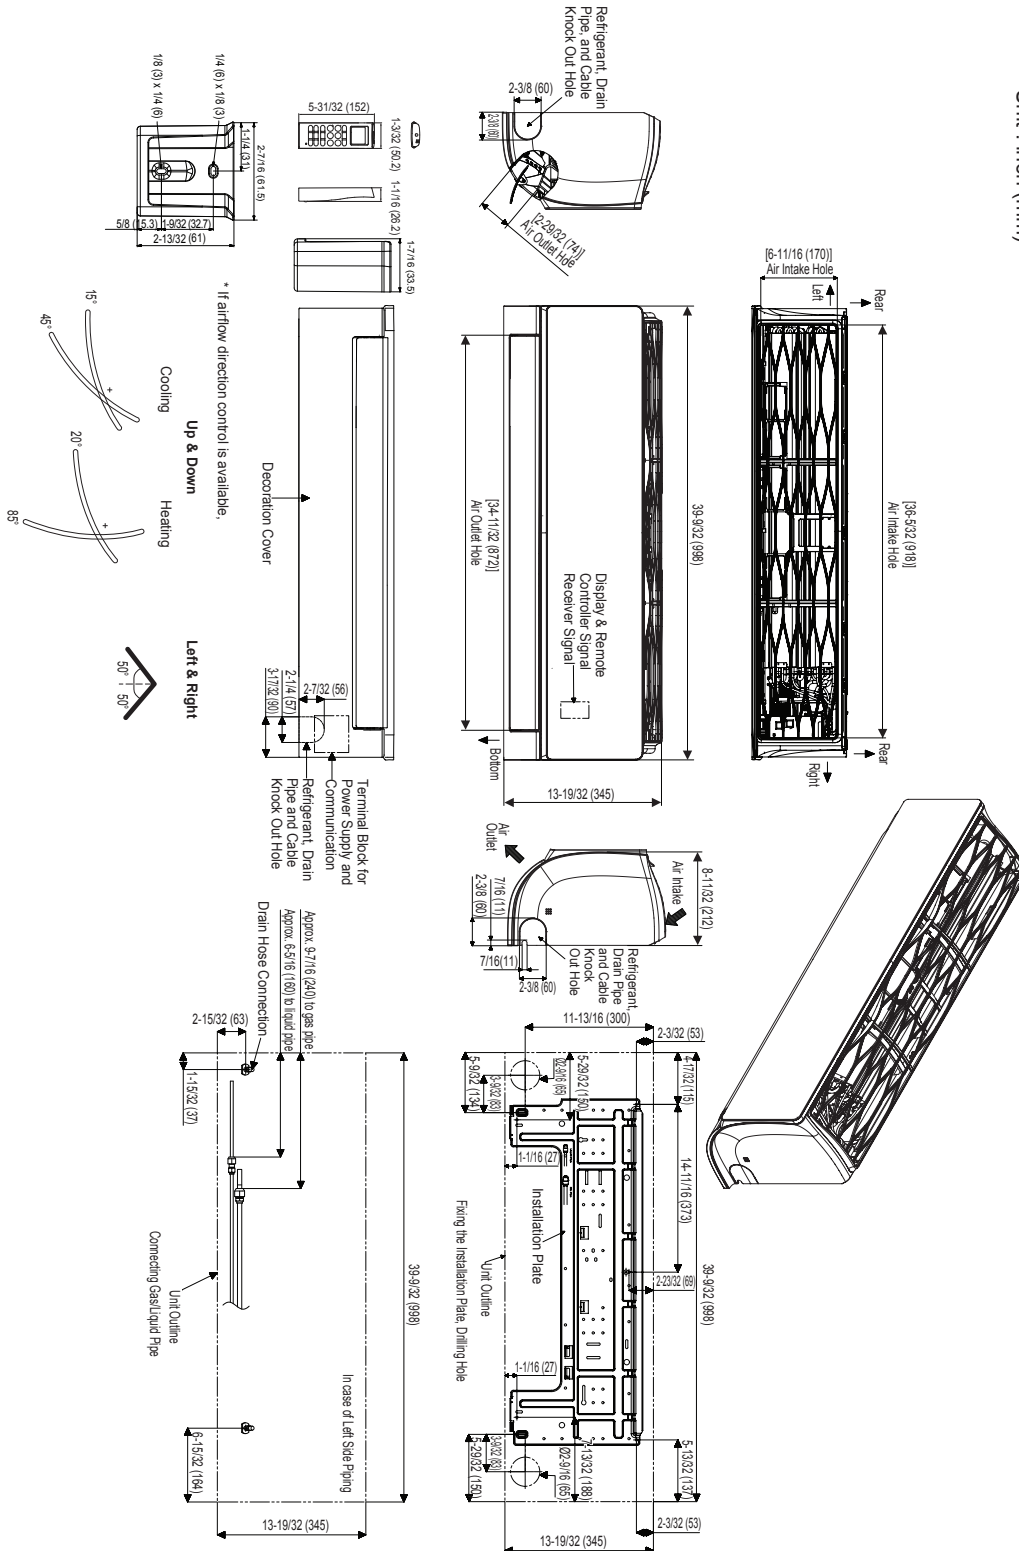


# INDOOR UNIT DIMENSIONS

## LAN240HSV3

### Dimensions for LAN240HSV3

Figure 6: LAN240HSV3 Unit Dimensions.

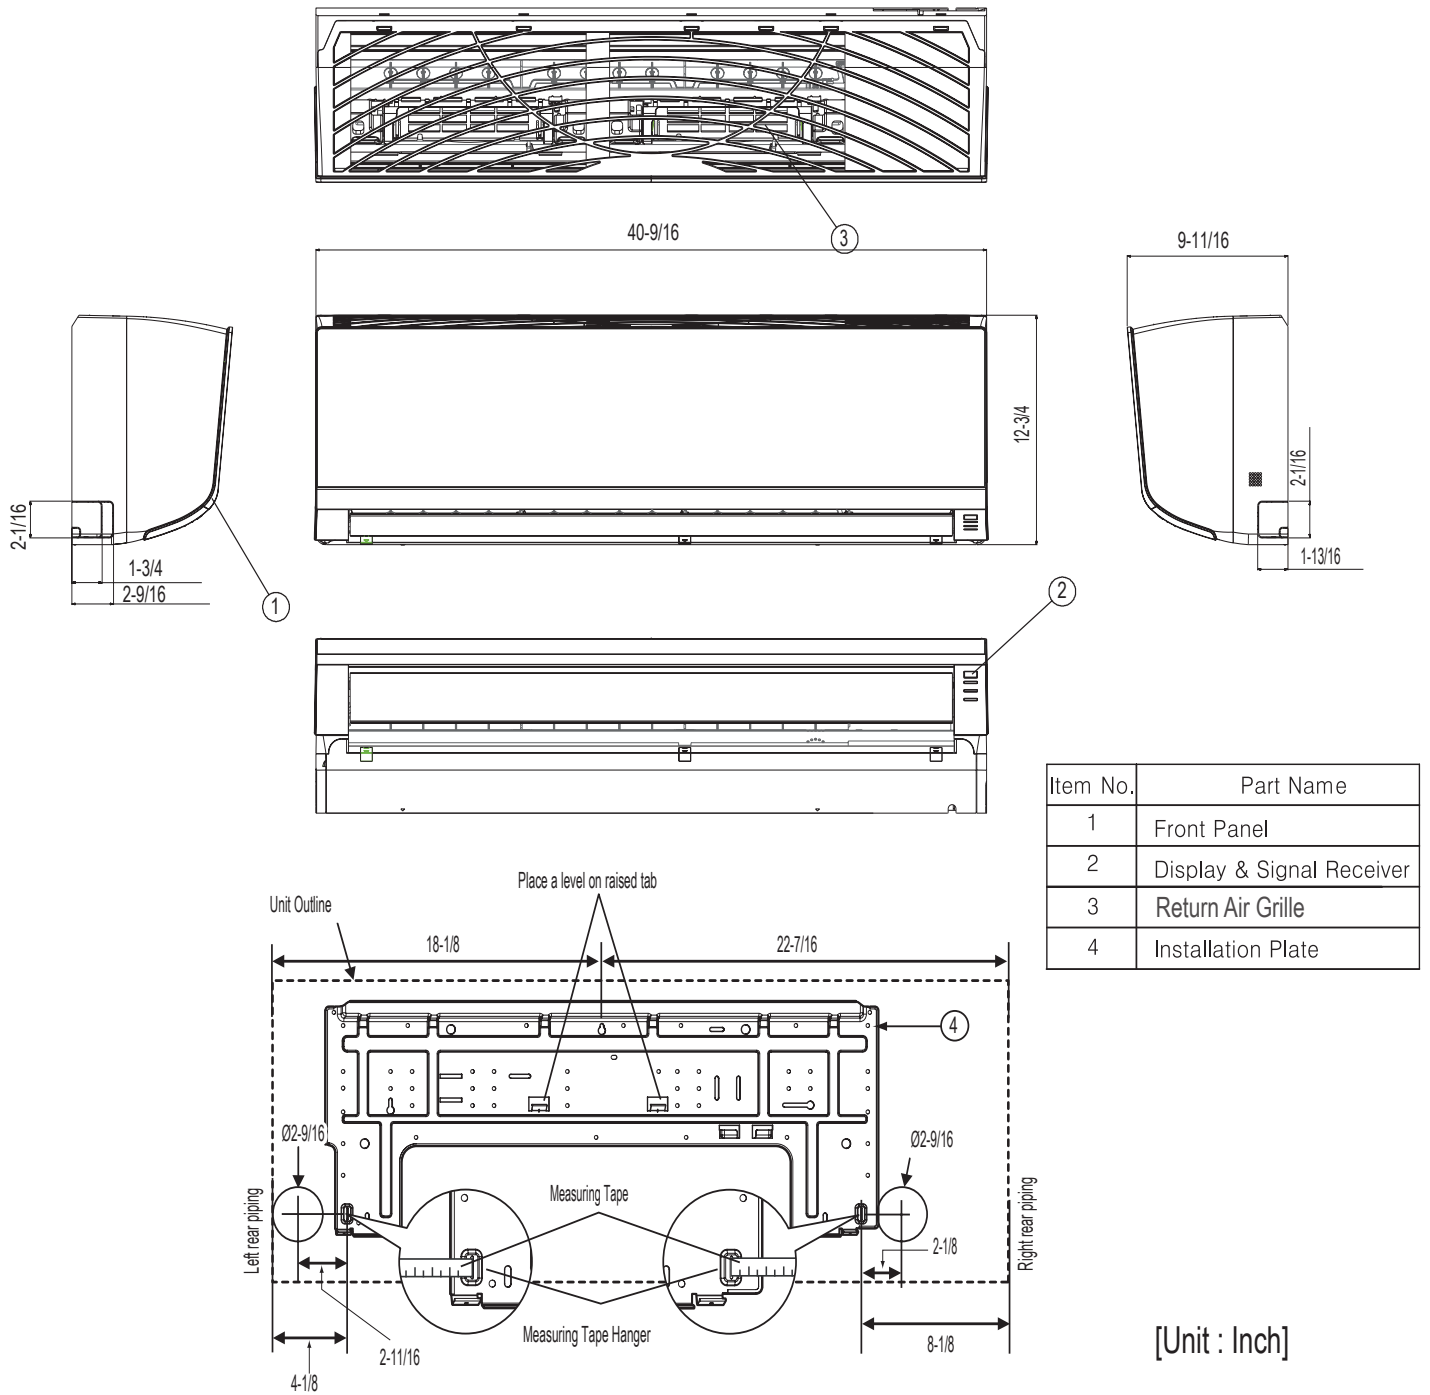


Product Data

# OUTDOOR UNIT DIMENSIONS

LSU090HSV5, LSU120HSV5

## Dimensions for LSU090HSV5, LSU120HSV5

Figure 7: LSU090HSV5, LSU120HSV5 Outdoor Unit Dimensions.

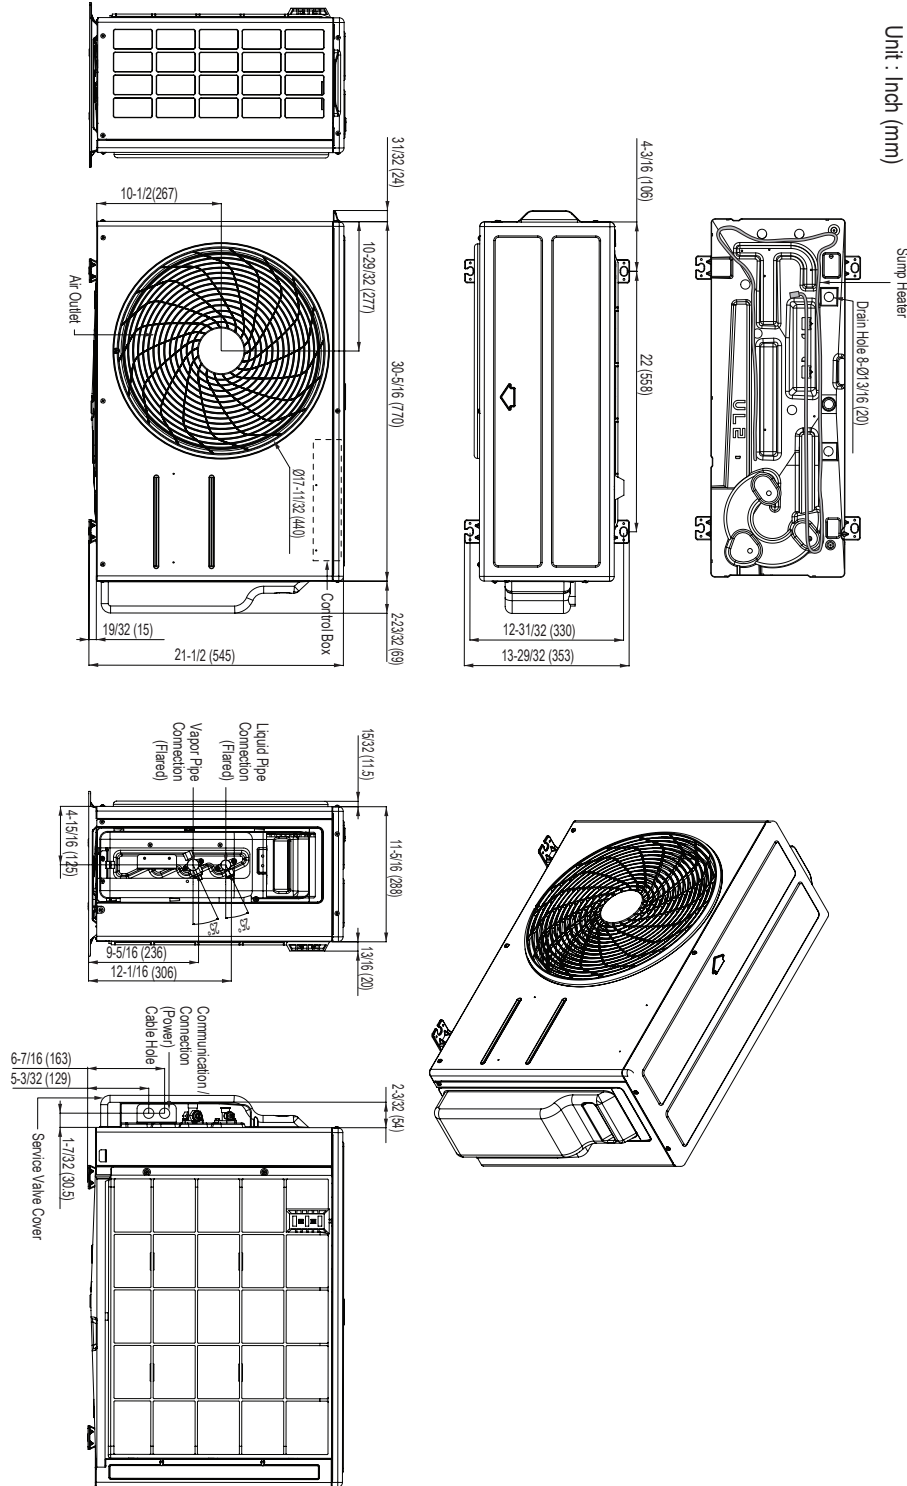




# OUTDOOR UNIT DIMENSIONS

## LSU180HSV5

### Dimensions for LSU180HSV5

Figure 8: LSU180HSV5 Outdoor Unit Dimensions.

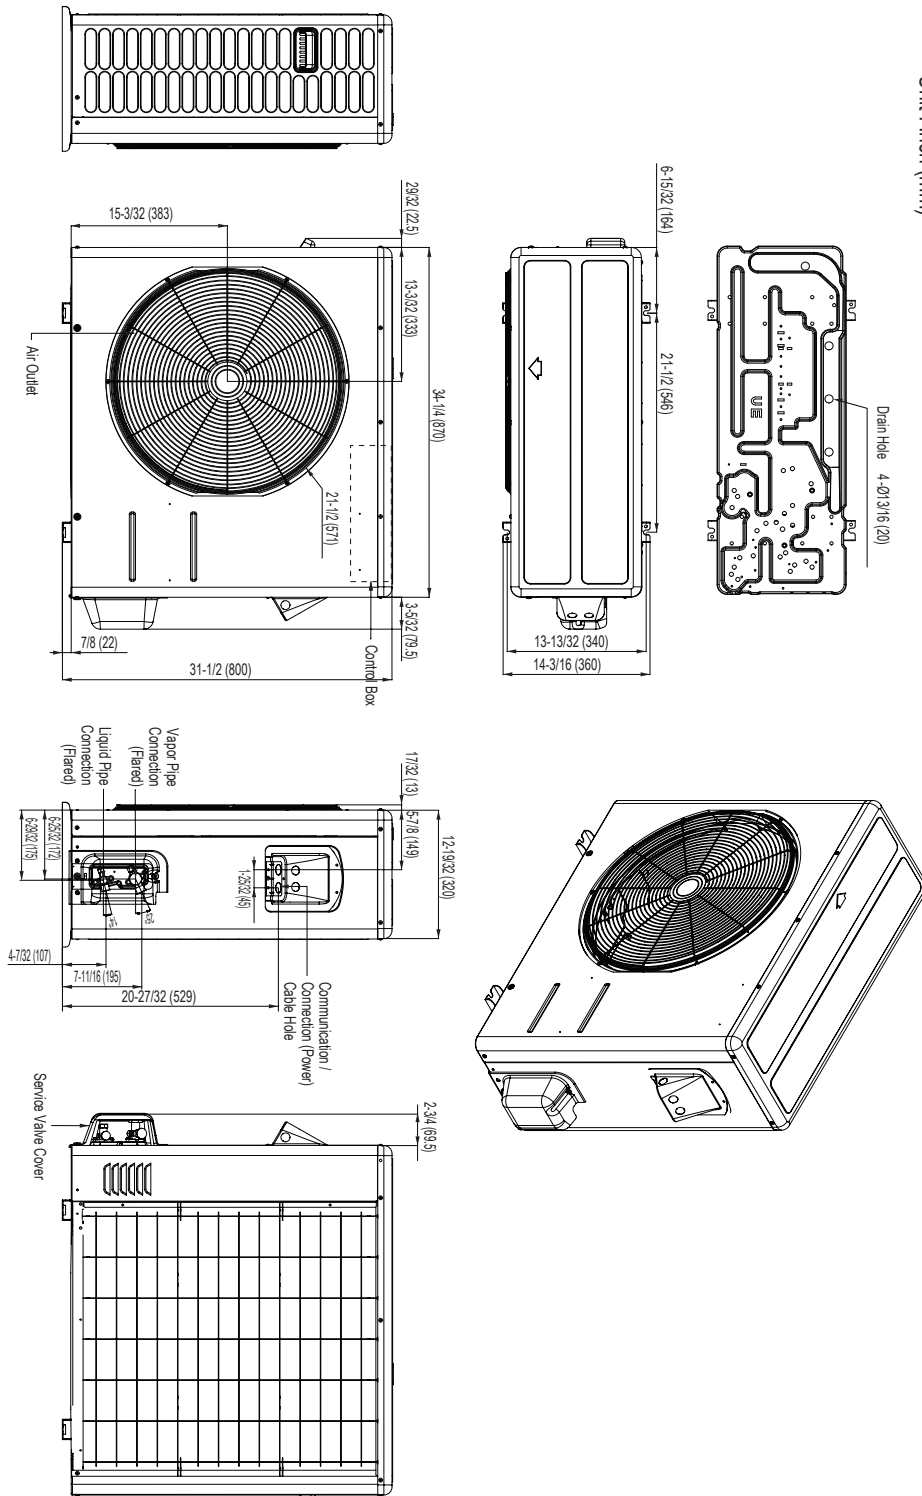


# OUTDOOR UNIT DIMENSIONS

## LAU240HSV3

### Dimensions for LAU240HSV3

Figure 9: LAU240HSV3 Unit Dimensions.

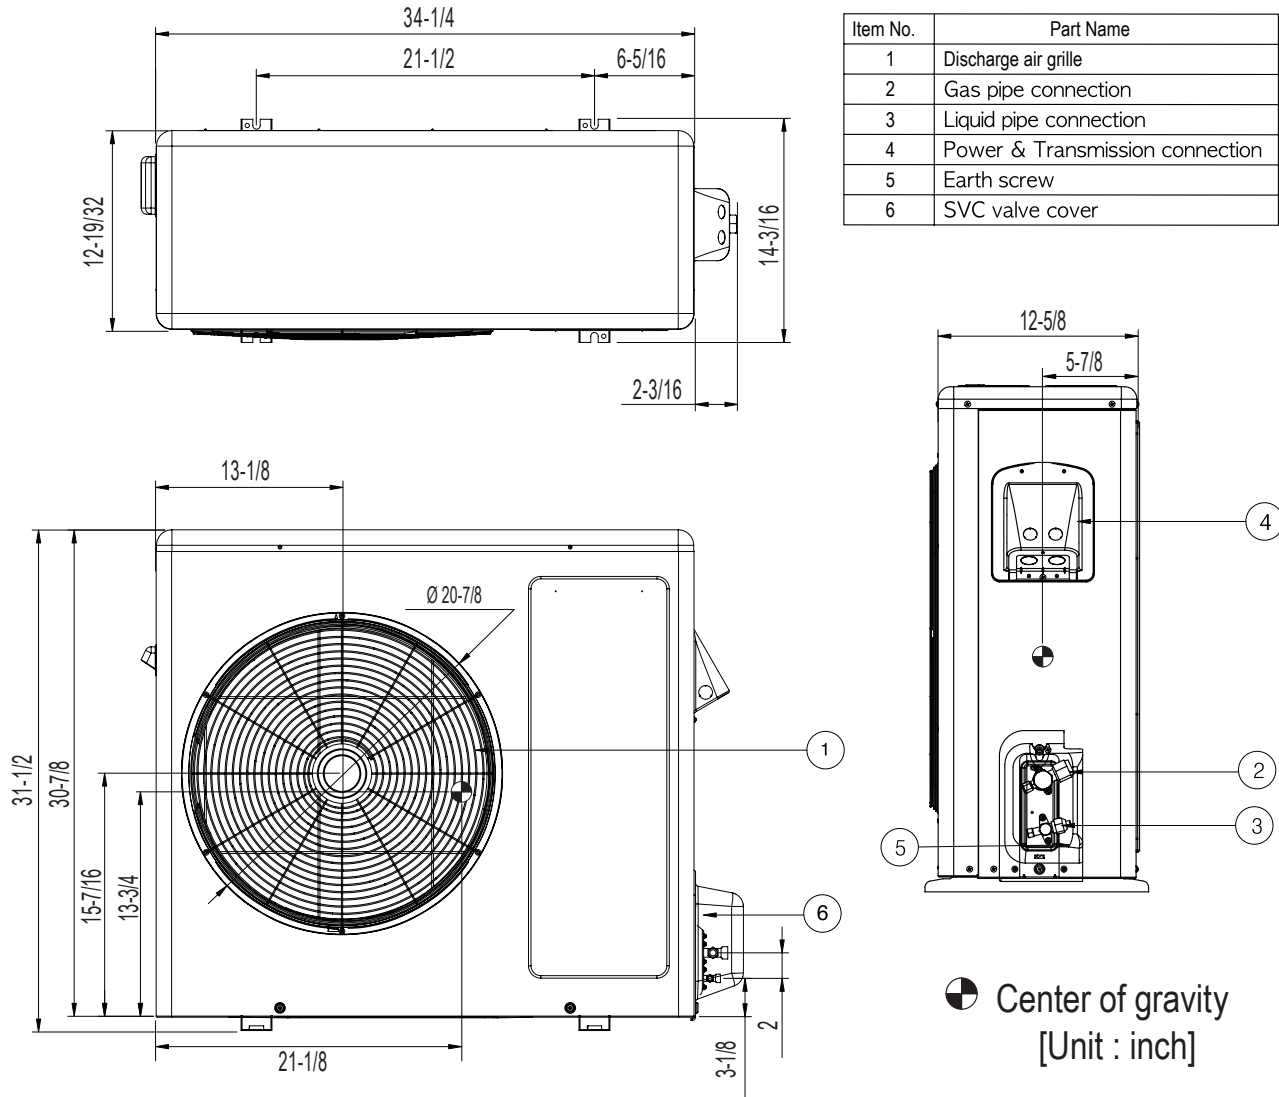

# OUTDOOR UNIT CORNER WEIGHT AND CENTER OF GRAVITY DIMENSIONS

Figure 10: LSU090-120-180HSV5 Outdoor Unit Corner Weight and Center of Gravity Dimensions.

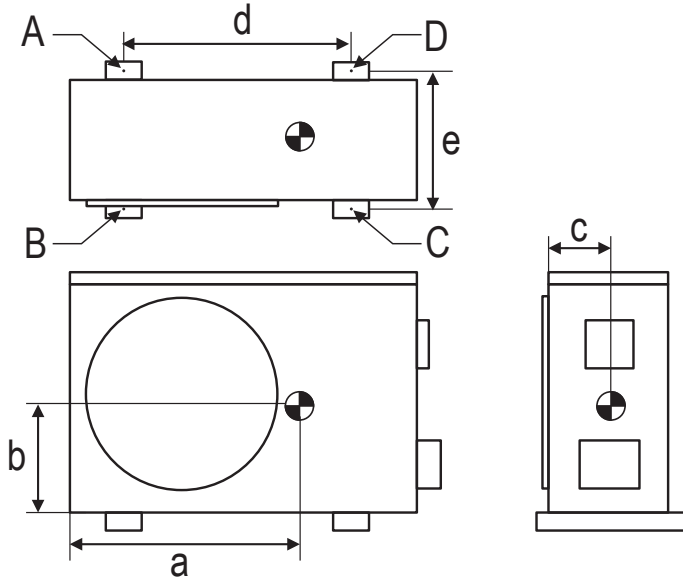


Table 5: LSU090-120-180HSV5 Outdoor Unit Corner Weight and Center of Gravity Dimensions.


Model No.	Weight (lb.)		Center of Gravity (in.)			Leg (in.)		Corner Weight (lb.)			
	Shipping	Net	a	b	c	d	e	A	B	C	D
LSU090HSV5, LSU120HSV5	78.9	74.1	19-31/32	9-11/32	5-21/32	22	12-31/32	9.5	11.0	26.8	26.8
LSU180HSV5	126.5	116.8	21-3/32	13-25/32	6-23/32	21-1/2	13-13/32	21.1	16.4	38.6	40.7
LAU240HSV3	130.1	120.2	21-3/32	13-25/32	6-23/32	21-1/2	13-13/32	20.4	18.2	38.4	43.3

# ACOUSTIC DATA

## Indoor Units

### Indoor Unit Sound Pressure Measurement

Figure 11: Art Cool Mirror Indoor Unit Sound Level Measurement.

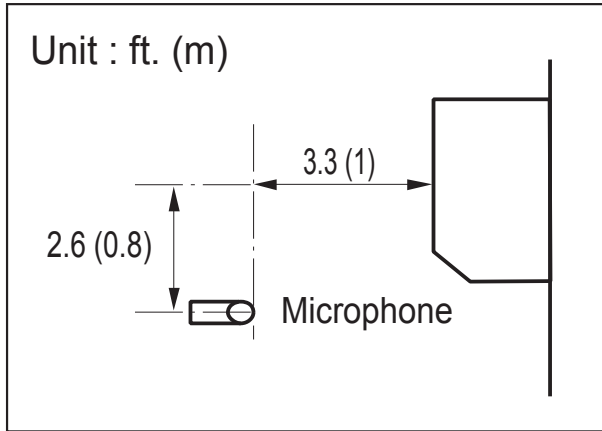

- Measurements are taken 3.3 ft away from the front of the unit.
- Sound pressure levels are measured in dB(A) with a tolerance of  $\pm 3$ .
- Data is valid at nominal operation conditions. Operating conditions are assumed to be standard.
- Reference acoustic pressure 0dB=20 $\mu$ Pa
- Sound pressure levels are tested in an anechoic chamber under ISO Standard 3745, and may be different according to the test condition or equipment.
- Sound level will vary depending on a range of factors including the construction (acoustic absorption coefficient) of a particular room in which the unit was installed.

### Indoor Unit Sound Pressure Levels

Table 6: Art Cool Mirror Indoor Unit Acoustic Data

Model	Sound Pressure Levels (dB[A])					
	Cooling			Heating		
	H	M	L	H	M	L
LAN090HSV5	39	33	23	39	33	23
LAN120HSV5	39	33	23	39	33	23
LAN180HSV5	45	40	35	45	40	35
LAN240HSV3	45	40	35	45	40	35

### LAN090HSV5/LAN120HSV5 Cooling and Heating Sound Pressure Diagrams

Figure 12: LAN090/120HSV5 Cooling Sound Pressure Level Diagram.


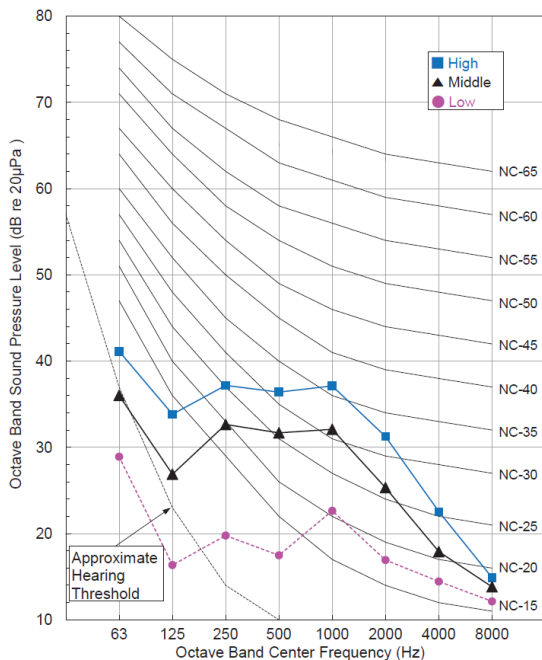


Figure 13: LAN090/120HSV5 Heating Sound Pressure Level Diagram.

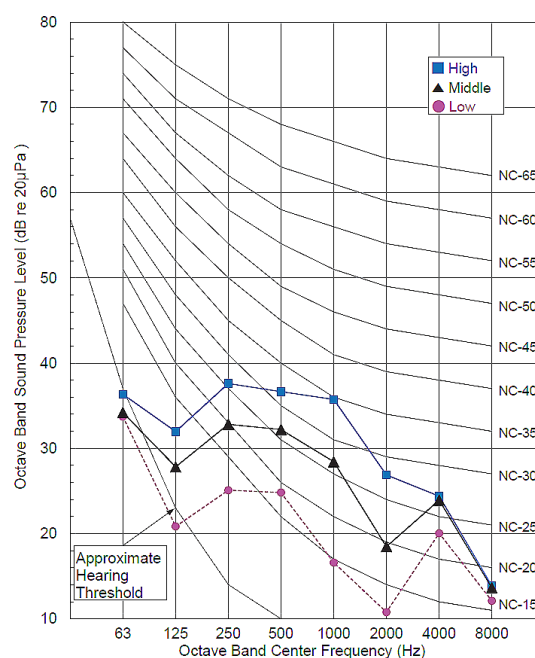

## LAN180HSV5 Cooling and Heating Sound Pressure Diagrams

Figure 14: LAN180HSV5 Cooling Sound Pressure Level Diagram.


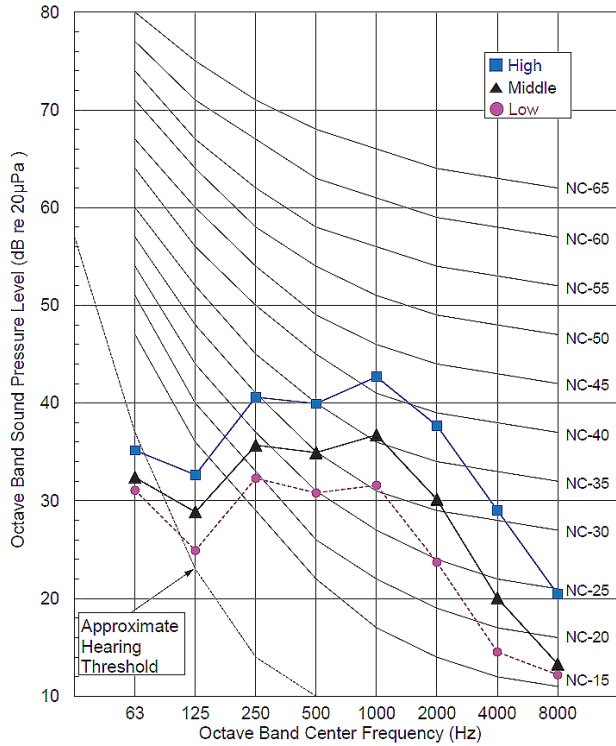



Figure 15: LAN180HSV5 Heating Sound Pressure Level Diagram.

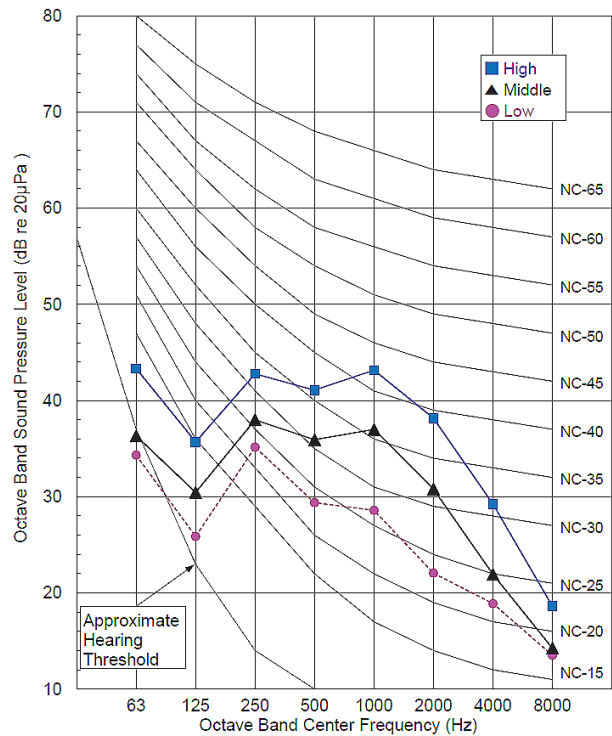

## LAN240HSV3 Sound Pressure Diagrams

Figure 16: Sound Pressure Levels for LAN240HSV3 Indoor Units.

### LAN240HSV3

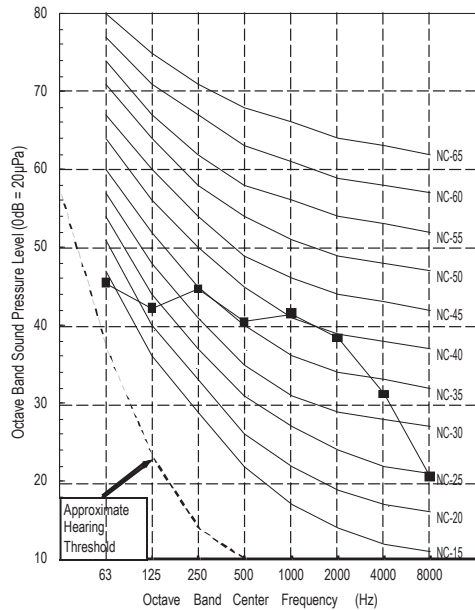


# ACOUSTIC DATA

## Outdoor Units

### Outdoor Unit Sound Pressure Level Measurement

Figure 17: Outdoor Unit Sound Level Measurement.

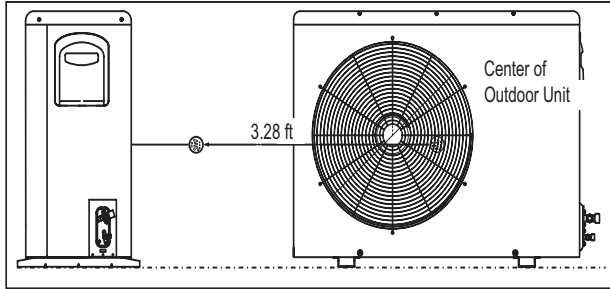

- Measurements are taken 3.3 ft away from the front of the unit.
- Sound pressure levels are measured in dB(A) with a tolerance of  $\pm 3$ .
- Data is valid at nominal operation conditions. Operating conditions are assumed to be standard.
- Reference acoustic pressure  $0\text{dB}=20\mu\text{Pa}$
- Sound pressure levels are tested in an anechoic chamber under ISO Standard 3745, and may be different according to the test condition or equipment.
- Sound level will vary depending on a range of factors including the construction (acoustic absorption coefficient) of a particular room in which the unit was installed.

### Outdoor Unit Sound Pressure Levels

Table 7: Art Cool Mirror Outdoor Unit Acoustic Data

Model	Sound Pressure Levels (dB[A])	
	Cooling (Max)	Heating (Max.)
LSU090HSV5	45	48
LSU120HSV5	45	48
LSU180HSV5	53	53
LAU240HSV3	53	53

### LSU090HSV5/ LSU120HSV5 Cooling and Heating Sound Pressure Diagrams

Figure 18: LSU090/120HSV5 Cooling Sound Pressure Level Diagram.


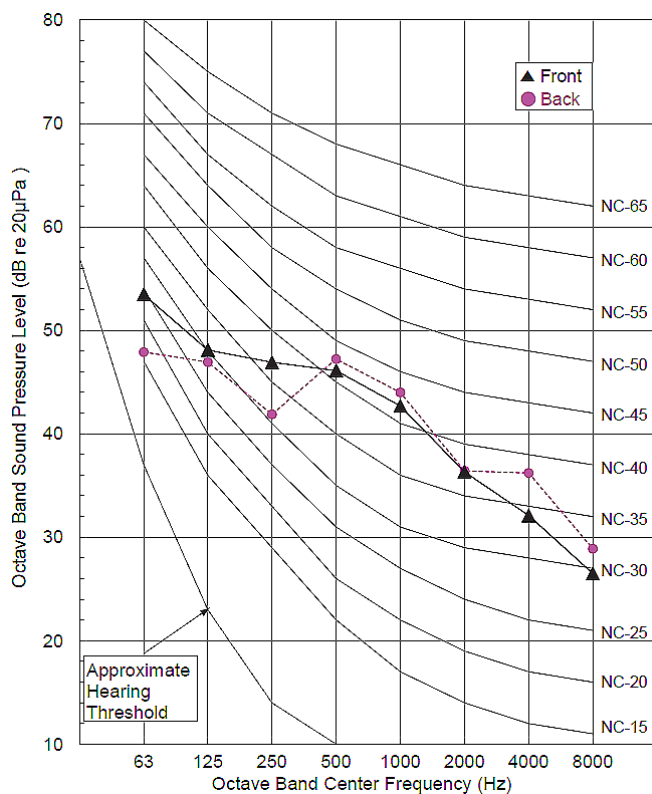


Figure 19: LSU090/120HSV5 Heating Sound Pressure Level Diagram.

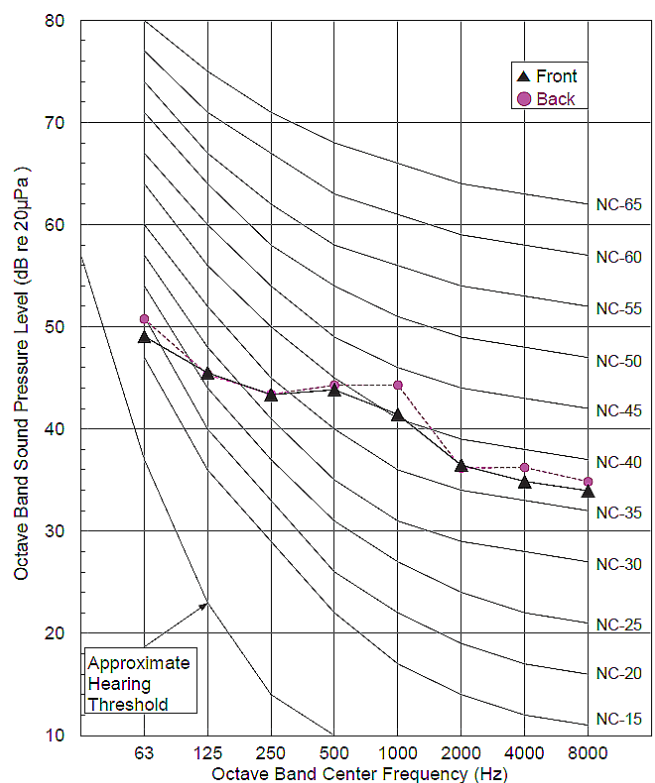

### LSU180HSV5 Cooling and Heating Sound Pressure Diagrams

Figure 20: LSU180HSV5 Cooling Sound Pressure Level Diagram.


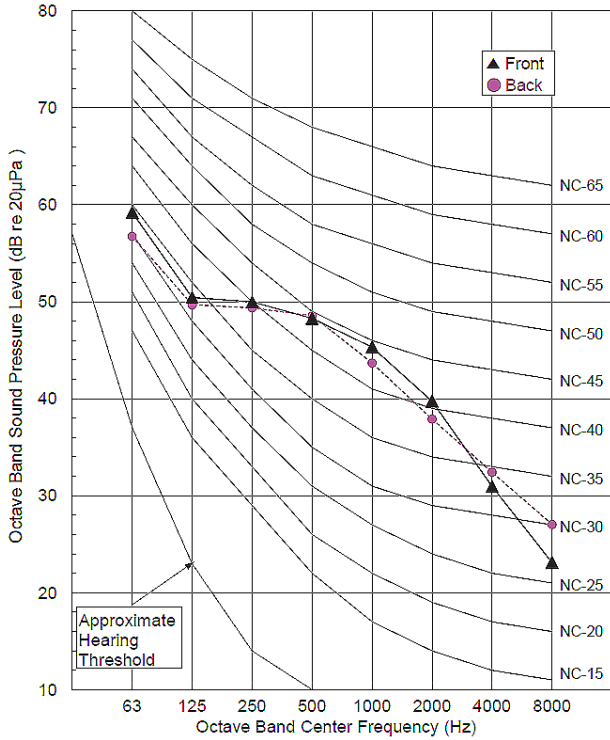



Figure 21: LSU180HSV5 Heating Sound Pressure Level Diagram.

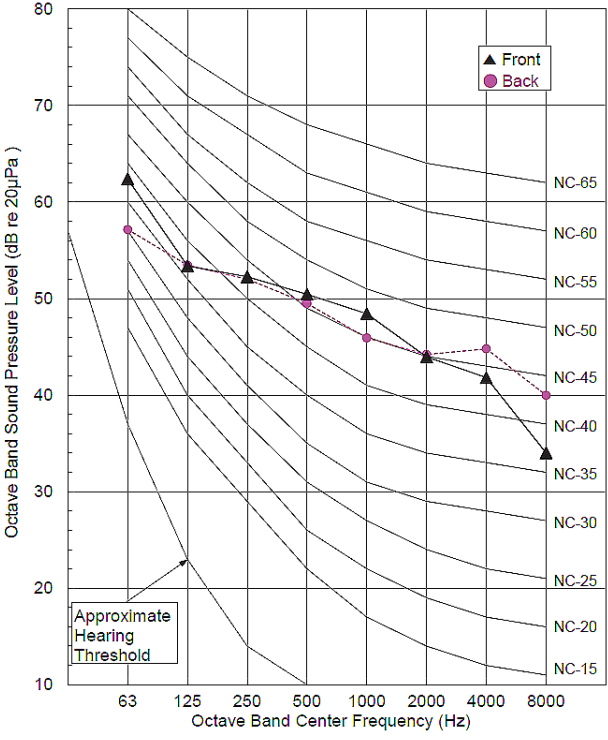

### LAU240HSV3 Sound Pressure Diagrams

Figure 22: LAU240HSV3 Sound Pressure Level Diagram.

#### LAU240HSV3

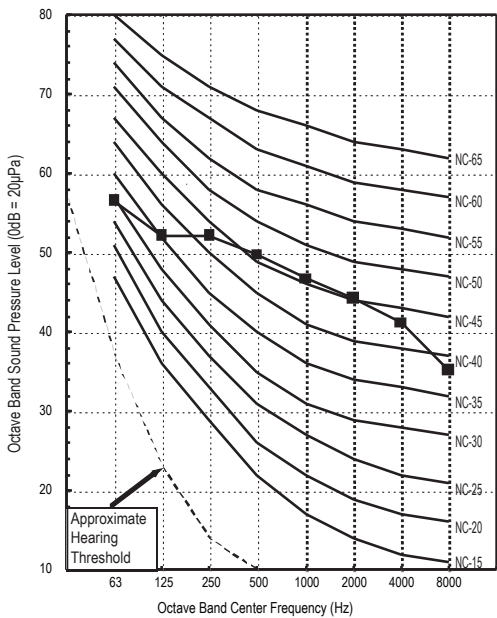

# REFRIGERANT FLOW DIAGRAMS

## Refrigerant Flow Diagram for LAN / LSU090, 120HSV5

Figure 23: Refrigerant Flow Diagram for LA090HSV5, LA120HSV5 Units.

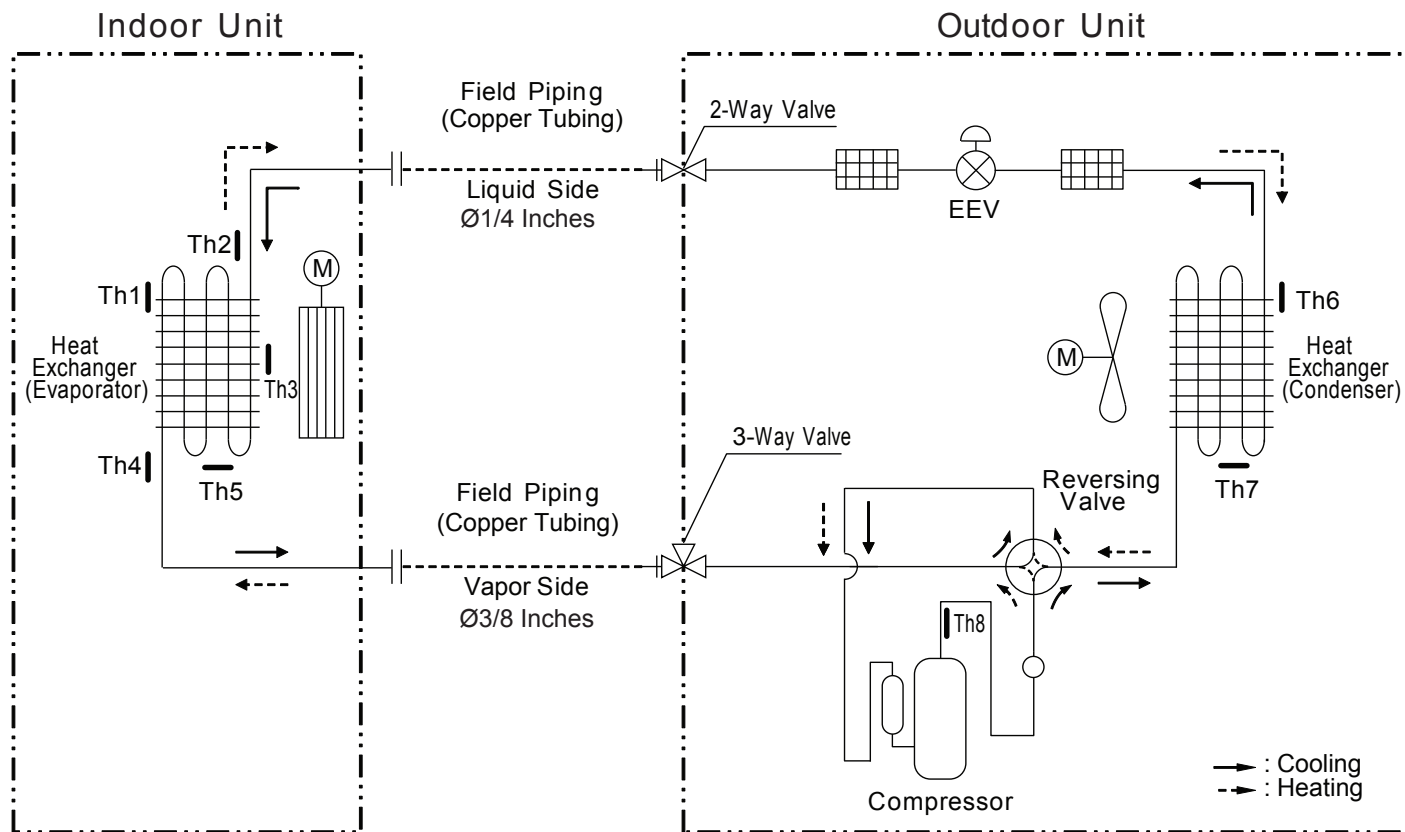


Table 8: Single Zone Art Cool Mirror Wall Mount LA090HSV5, LA120HSV5 Thermistor Details.

Thermistor	Description	PCB Connector
TH1	Indoor air temperature thermistor	CN-TH1 (Indoor)
TH2	Evaporator inlet temperature thermistor	
TH3	Evaporator middle temperature thermistor	CN-TH3 (Indoor)
TH4	Evaporator outlet temperature thermistor	CN-TH2 (Indoor)
TH5	Water level sensor (optional)	
TH6	Outdoor air temperature thermistor	C_PIPE/AIR (Outdoor)
TH7	Condensing temperature thermistor	
TH8	Discharge pipe temperature thermistor	D_PIPE (Outdoor)

### Refrigerant Pipe Connection Port Diameters for LA090HSV5, LA120HSV5.

Table 9: Refrigerant Pipe Connection Port Diameters for LA090HSV5, LA120HSV5.


Model	Vapor (inch)	Liquid (inch)
LA090HSV5, LA120HSV5	Ø 3/8	Ø 1/4



# REFRIGERANT FLOW DIAGRAMS

## Refrigerant Flow Diagrams for LAN / LSU180HSV5

Figure 24: Refrigerant Flow Diagram for LA180HSV5 Units.

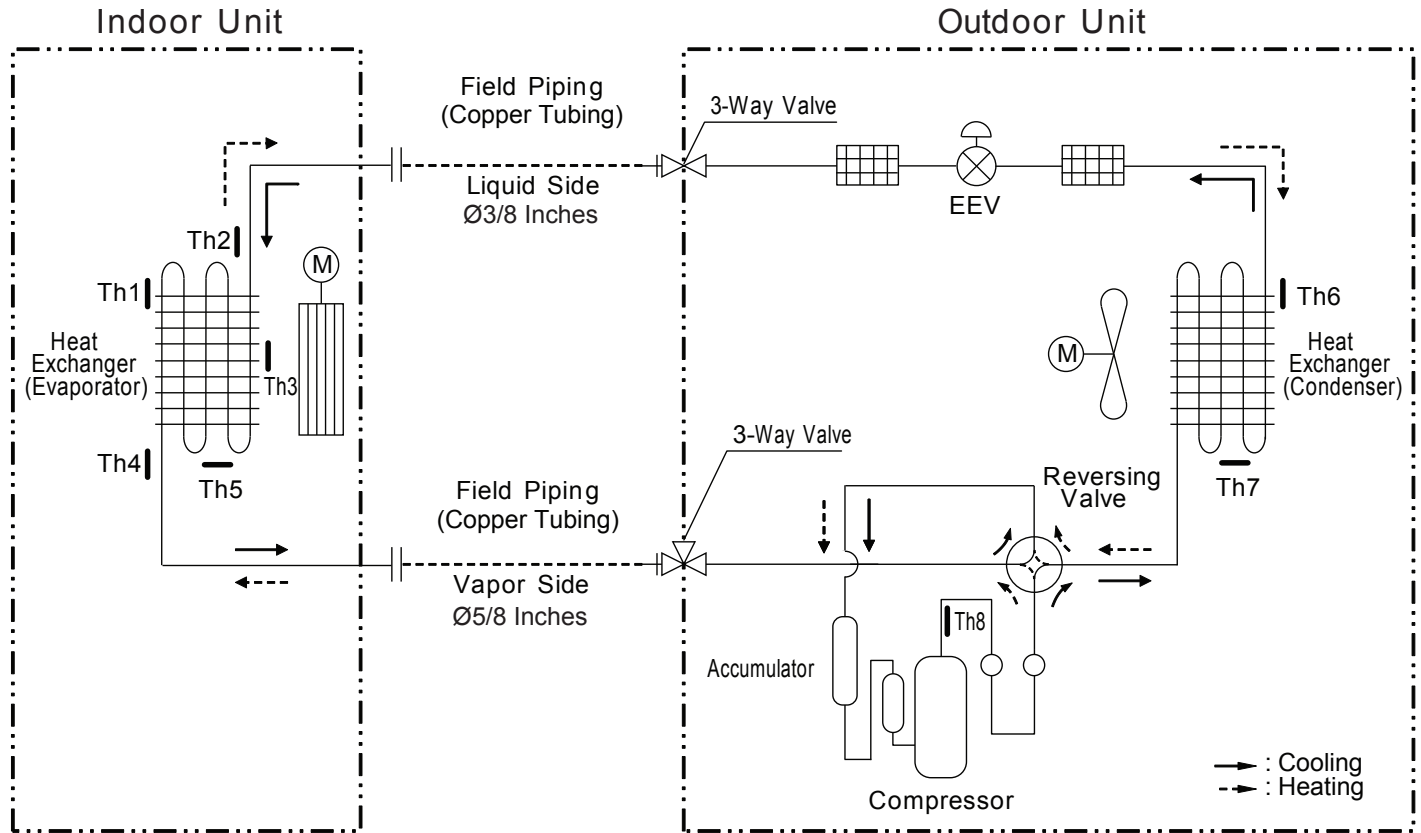

Product Data


Table 10: Single Zone Art Cool Mirror Wall Mount LA180HSV5 Thermistor Details.

Thermistor	Description	PCB Connector
TH1	Indoor air temperature thermistor	CN-TH1 (Indoor)
TH2	Evaporator inlet temperature thermistor	
TH3	Evaporator middle temperature thermistor	CN-TH3 (Indoor)
TH4	Evaporator outlet temperature thermistor	CN-TH2 (Indoor)
TH5	Water level sensor (optional)	
TH6	Outdoor air temperature thermistor	CN-TH1 (Outdoor)
TH7	Condensing temperature thermistor	
TH8	Discharge pipe temperature thermistor	CN-TH2 (Outdoor)

# REFRIGERANT FLOW DIAGRAMS

## Refrigerant Flow Diagrams for LAN / LAU240HSV3

Figure 25: Refrigerant Flow Diagram for LA240HSV3 Units.

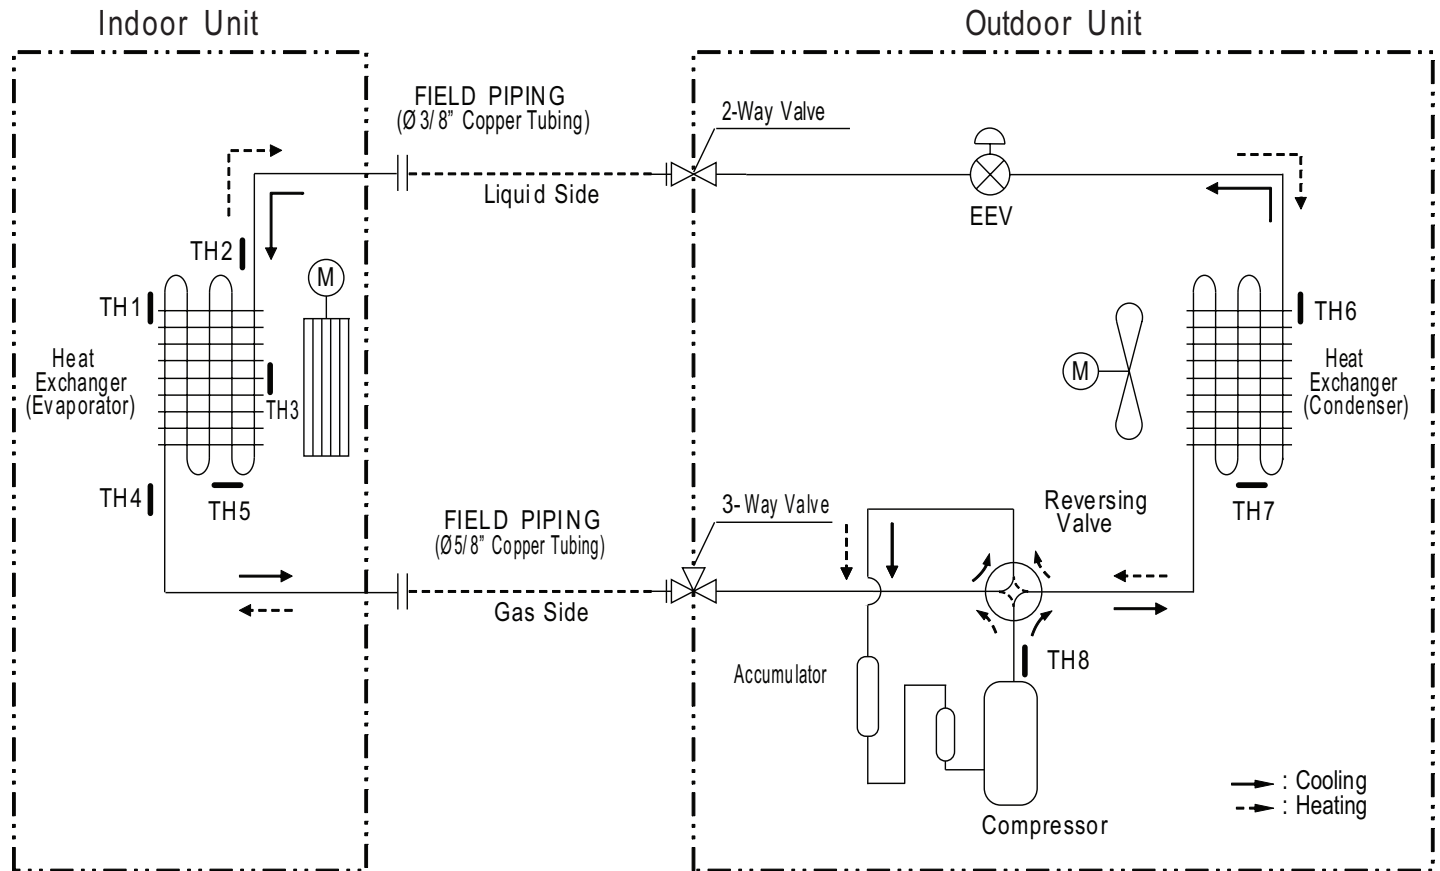


Thermistor	Description	PCB Connector
TH1	Indoor air temperature thermistor	CN-TH1 (Indoor)
TH2	Evaporator inlet temperature thermistor	
TH3	Evaporator middle temperature thermistor	
TH4	Evaporator outlet temperature thermistor	CN-TH2 (Indoor)
TH5	Water level sensor (optional)	CN-TH3 (Indoor)
TH6	Outdoor air temperature thermistor	CN-TH2 (Outdoor)
TH7	Condensing temperature thermistor	
TH8	Discharge pipe temperature thermistor	CN-TH3 (Outdoor)

# INDOOR UNIT WIRING DIAGRAM

LAN090HSV5, LAN120HSV5, LAN180HSV5

## Wiring Diagram for LAN090HSV5, LAN120HSV5, LAN180HSV5

Figure 26: Wiring Diagram for LAN090HSV5, LAN120HSV5, LAN180HSV5 Units.

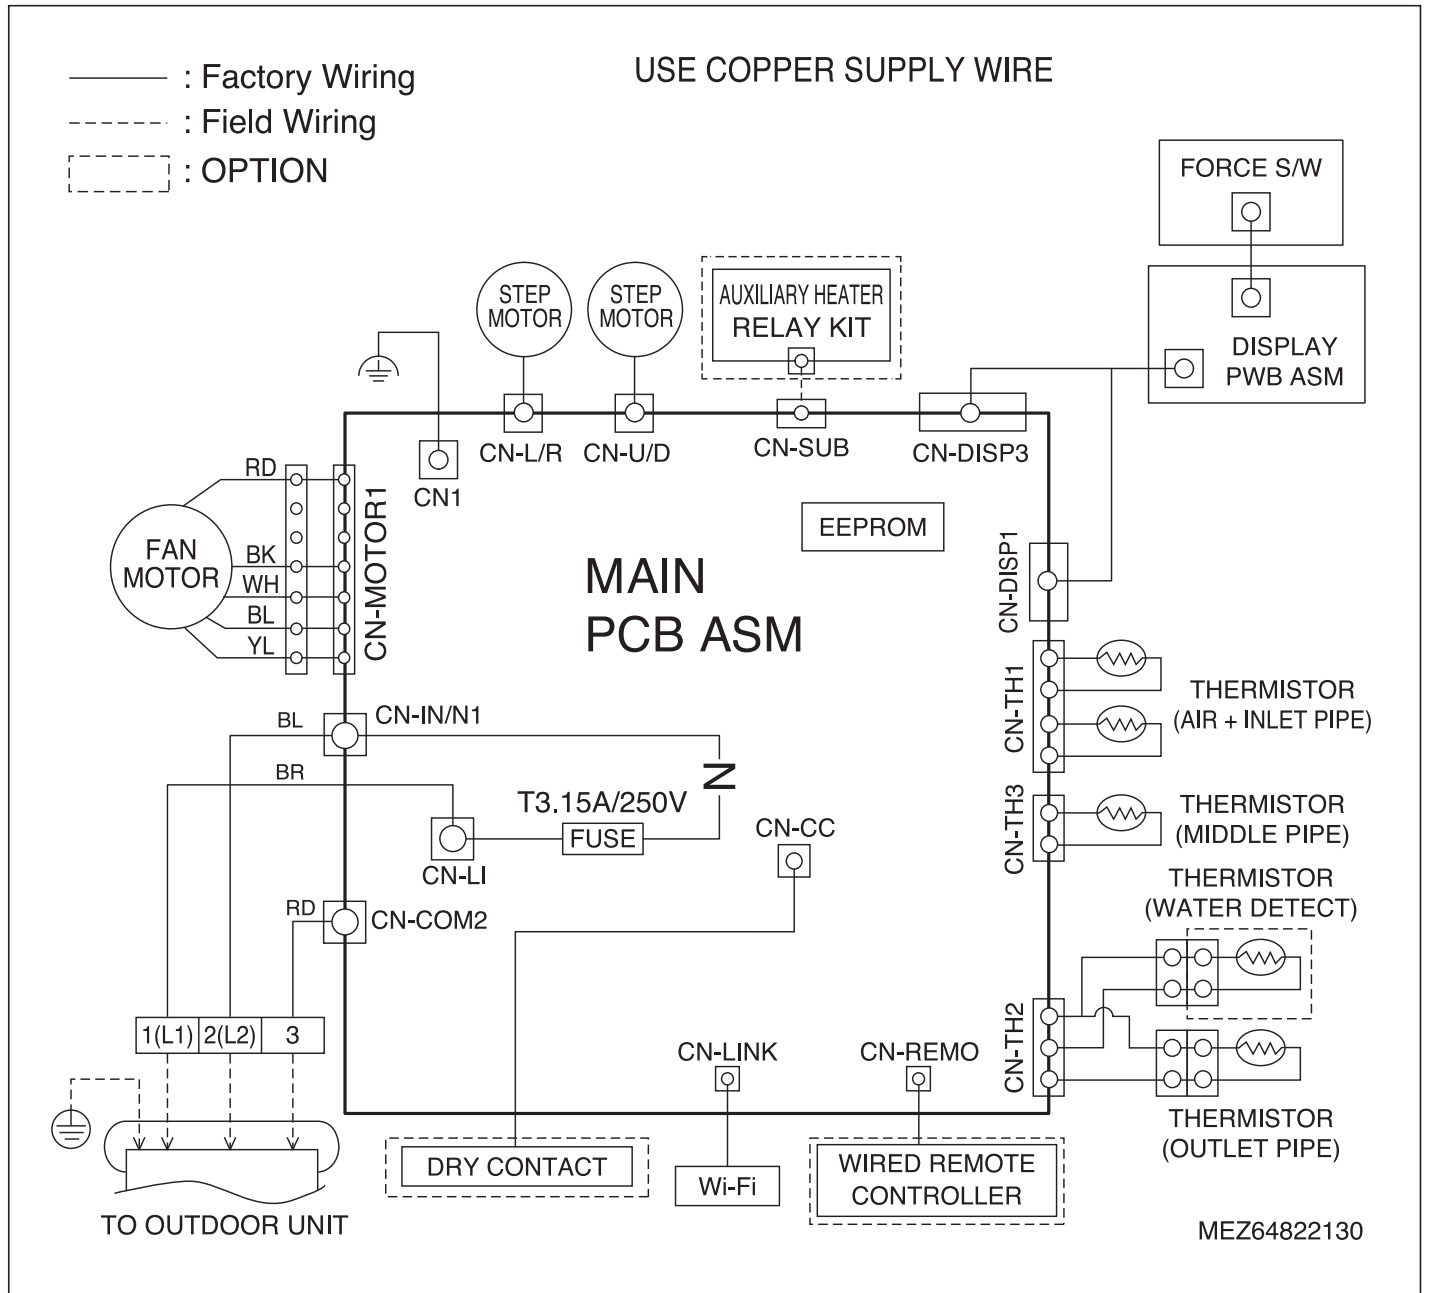


Product Data

# INDOOR UNIT WIRING DIAGRAM

LAN240HSV3

## Wiring Diagram for LAN240HSV3

Figure 27: Wiring Diagram for LAN240HSV3 Units.

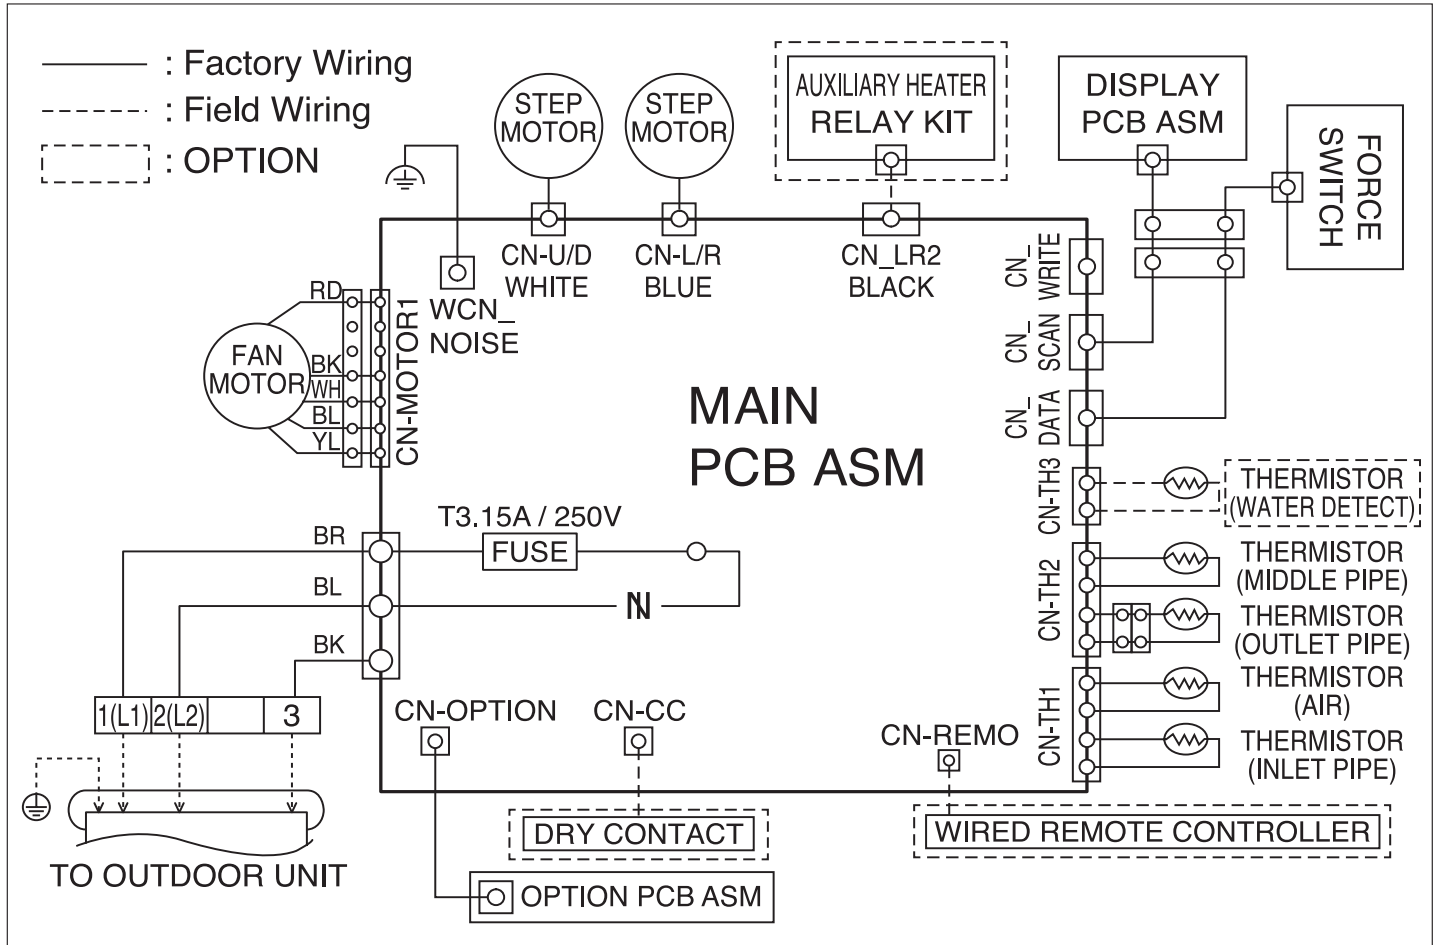


\* Auxiliary heater relay kit is not available on single-zone wall-mounted indoor units connected to a single-zone outdoor unit.

# OUTDOOR UNIT WIRING DIAGRAM

LSU090HSV5, LSU120HSV5

## Wiring Diagram for LSU090,120HSV5

Figure 28: Wiring Diagram for LSU090HSV5, LSU120HSV5 Units.

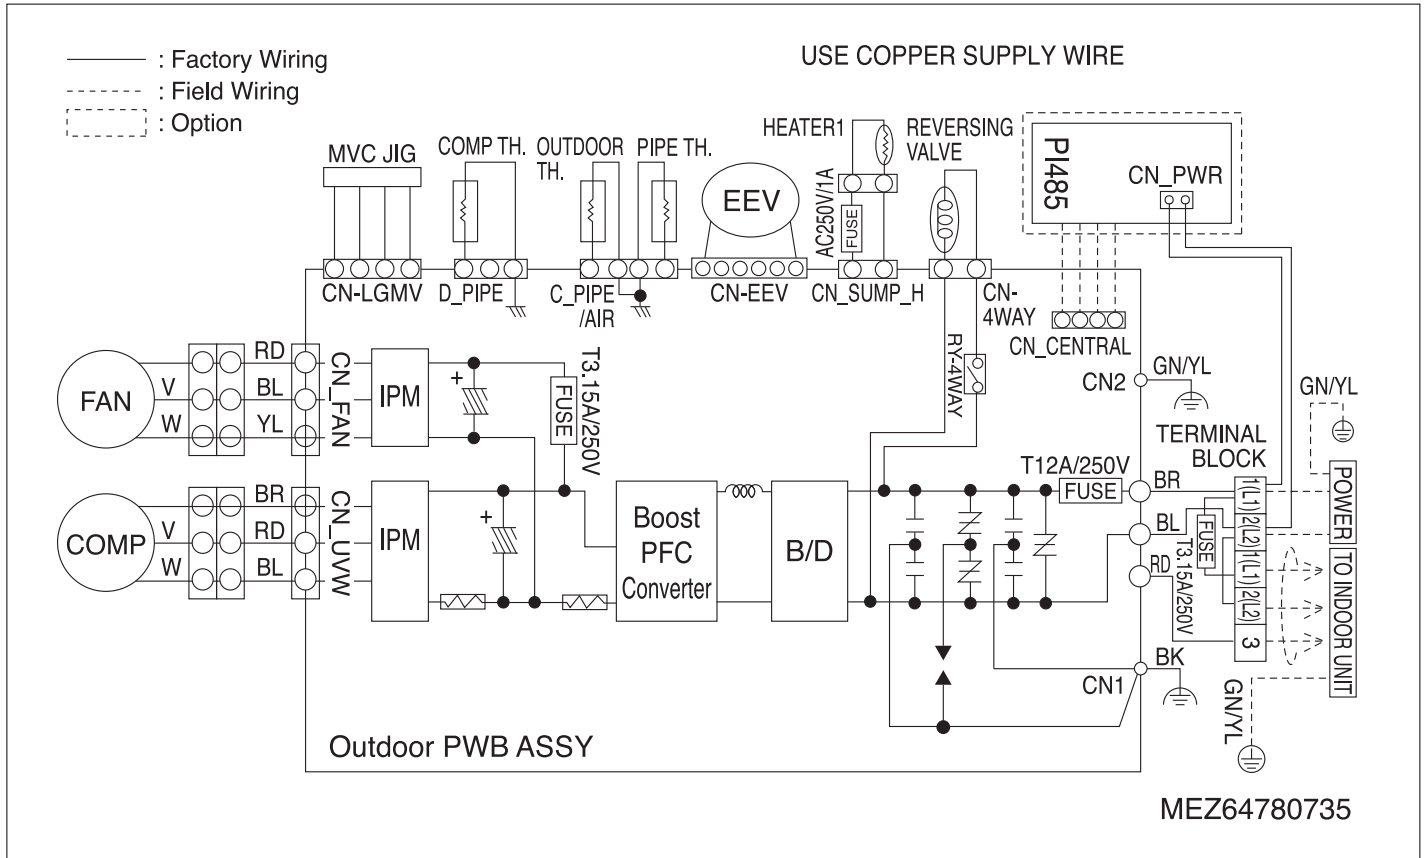


Product Data

# OUTDOOR UNIT WIRING DIAGRAM

LSU180HSV5

## Wiring Diagram for LSU180HSV5

Figure 29: Wiring Diagram for LSU180HSV5 Units.

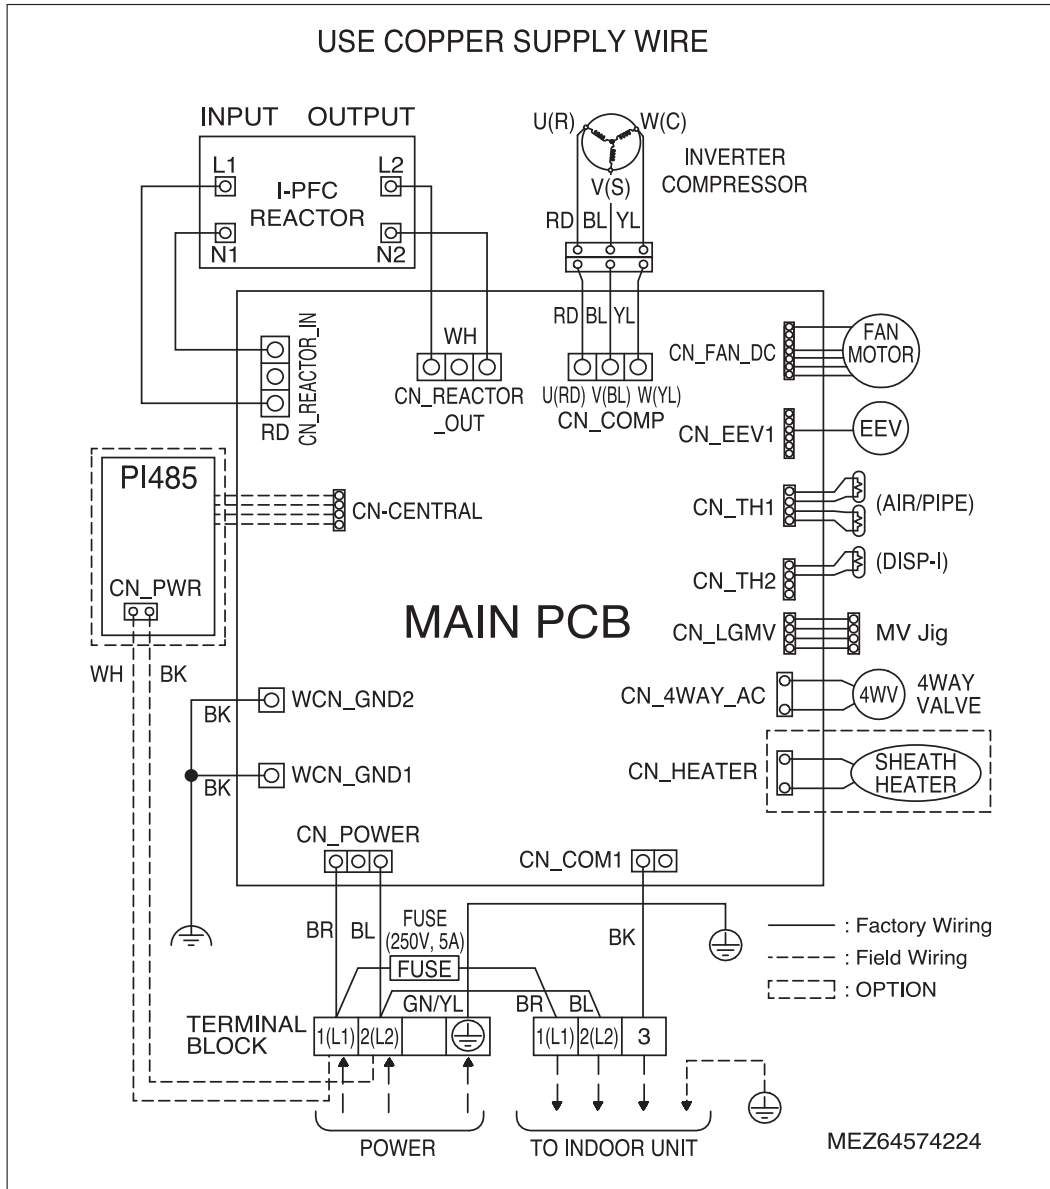


Single Zone Art Cool™ Mirror Wall Mount Engineering Manual

# OUTDOOR UNIT WIRING DIAGRAM

## LAU240HSV3

### Wiring Diagram for LAU240HSV3

Figure 30: Wiring Diagram for LAU240HSV3 Units.

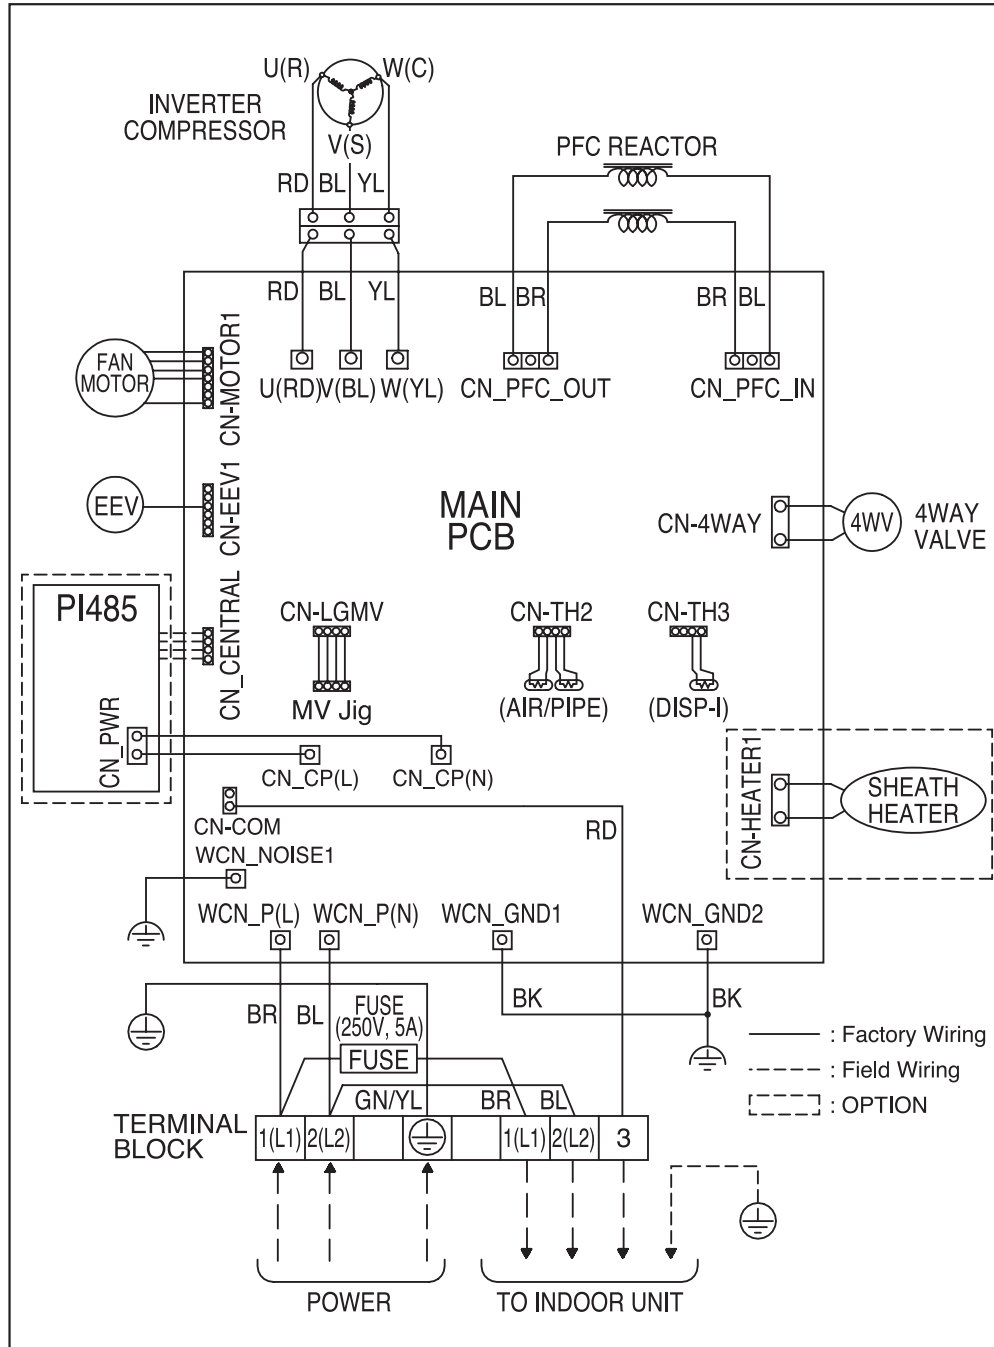

Product Data

# ELECTRICAL CONNECTIONS

## General Power Wiring / Communications Cable Guidelines

- Follow manufacturer's circuit diagrams displayed on the inside of the control box cover.
- Have a separate power supply for the indoor units.
- Provide a circuit breaker switch between the power source and the indoor unit.
- Confirm power source specifications.
- Properly ground the outdoor unit and the indoor unit per NEC and local codes.
- Connect the wiring firmly so that the wires cannot be easily pulled out.
- Confirm that the electrical capacity is sufficient.
- Power supply to the outdoor unit must be selected based on NEC and local codes. Maximum allowable voltage fluctuation  $\pm 10\%$  or name-plate rated value.
- It is recommended that a circuit breaker is installed, especially if conditions could become wet or moist.
- Include a disconnect in the power wiring system. Add an air gap contact separation of at least 1/8 inch in each active (phase) conductor.
- Any openings where the field wiring enters the cabinet must be completely sealed.

⊘ Do not install power wiring to the outdoor unit and the communication / connection (power) cable to the indoor unit in the same conduit. Use separate conduits.

## Power Wiring / Communications Cable Specifications

- Power wiring to the outdoor unit must be solid or stranded, and must comply with the applicable local and national electric codes.
- Communication cable from the outdoor unit to the indoor unit must be a minimum of 18 AWG, four (4) conductor, shielded or unshielded (if shielded, must be grounded to chassis at ODU only) and must comply with applicable local and national codes.
- Communication cable from indoor unit to remote controller(s) is to be 22 AWG, 3-conductor, twisted, stranded, unshielded. Wiring must comply with all applicable local and national codes.

### **WARNING**

- Terminal screws may become loose during transport. Properly tighten the terminal connections during installation or risk electric shock, physical injury, or death.
- Loose wiring may cause unit to malfunction, overheat, and catch fire, resulting in severe injury or death.

### **Note:**

- Terminal screws may loosen during transport. Properly tighten the terminal connections during installation or risk equipment malfunction or property damage.
- Loose wiring may cause unit malfunction, the wires to burnout or the terminal to overheat and catch fire. There is a risk of equipment malfunction or property damage.

A voltage drop may cause the following problems:

- Magnetic switch vibration, fuse breaks, or disturbance to the normal function of an overload protection device.
- Compressor will not receive the proper starting current.



# ELECTRICAL CONNECTIONS

Figure 31: LA90HSV5 and LA120HSV5 General Power / Communications System Schematic.


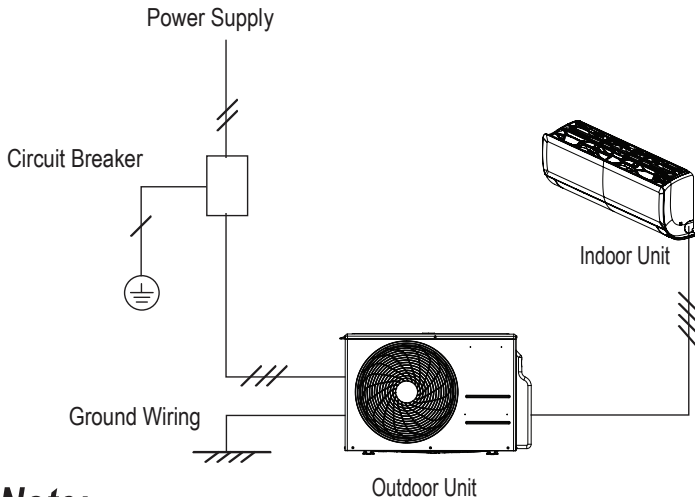


Figure 32: LA180HSV5 General Power / Communications System Schematic.

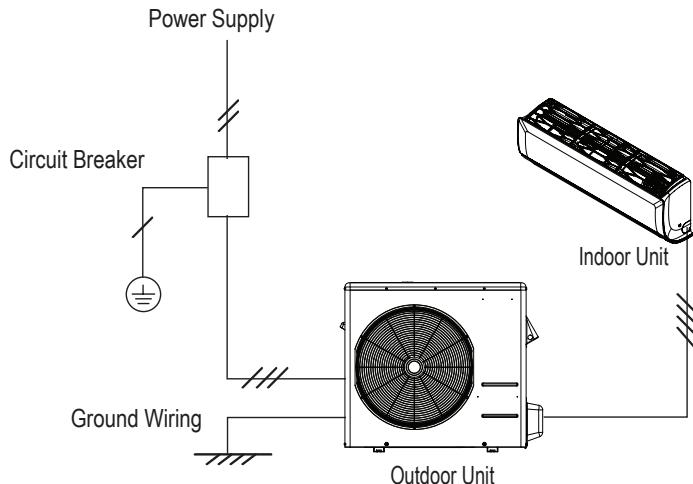

**Note:**

- Use a conduit for the communications cable / power wiring from the outdoor unit to the indoor units.
- Make sure the communications cable / power wiring from the outdoor units to the indoor units, and the power wiring to the outdoor unit are separate, otherwise, the outdoor unit operation may be affected by electrical noise and will malfunction or fail.

Figure 33: LA090-120HSV5 System Electrical Connections.

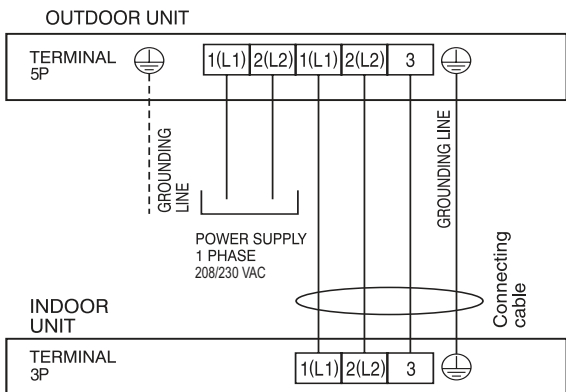


Figure 34: LA180HSV5 System Electrical Connections.


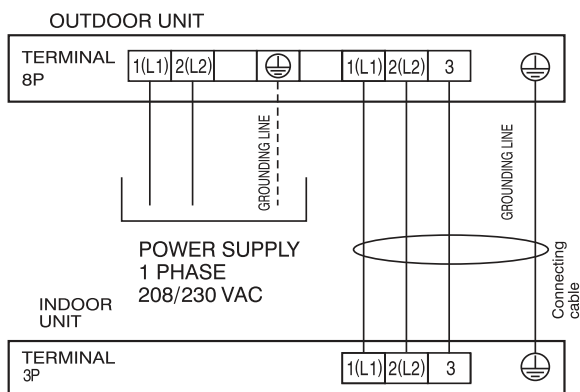


Figure 35: LA240HSV3 System Electrical Connections.

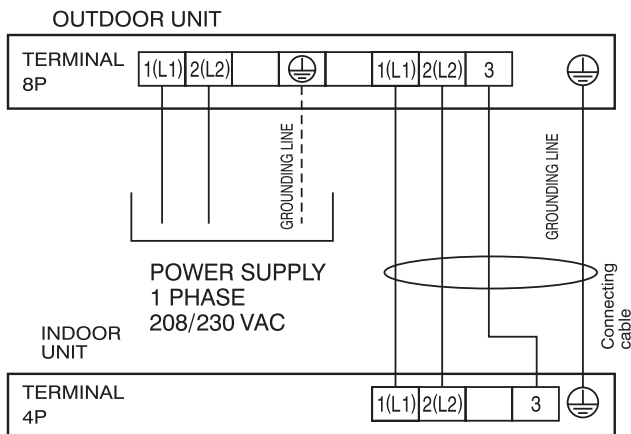

# ELECTRICAL CONNECTIONS

## Controller Options

Single Zone Art Cool Mirror Wall Mount systems include a wireless handheld remote controller (Model No. AKB74955602), but optional LG-supplied wired controllers are available. See “Functions, Controls, Options”, or contact an LG representative for more information.

### Wireless Handheld Remote Controller features:

- Display Panel: Displays operation conditions.
- On / Off Button: Turns system operation on and off.
- Mode Button: Selects the operation mode: Cooling, Heating, Auto, Dry (Dehumidification), or Fan.
- Temp Up / Down Buttons: Adjusts the desired room temperature in the different modes.
- Fan Speed Button: Sets desired fan speed.
- Reset: Initializes the handheld remote control settings.

### Wired Controller Connections

Optional controllers (see “Functions, Controls, Options”, or contact an LG representative for more information) can connect to the Single Zone Art Cool Mirror Wall Mount indoor unit in one of two different ways.

1. LG Wired Remote Extension Cable with Molex plug (PZCWRC1; sold separately) that connects to the CN-REMO terminal on the indoor unit PCB.
2. Field-supplied controller cable that connects to the indoor unit terminal block (must be at least UL2547 or UL1007, and at least FT-6 rated if local electric and building codes require plenum cable usage). Communication cable from indoor unit to remote controller(s) is to be 22 AWG, 3-conductor, twisted, stranded, unshielded. Wiring must comply with all applicable local and national codes.

Figure 37: PZCWRC1 LG Wired Remote Extension Cable


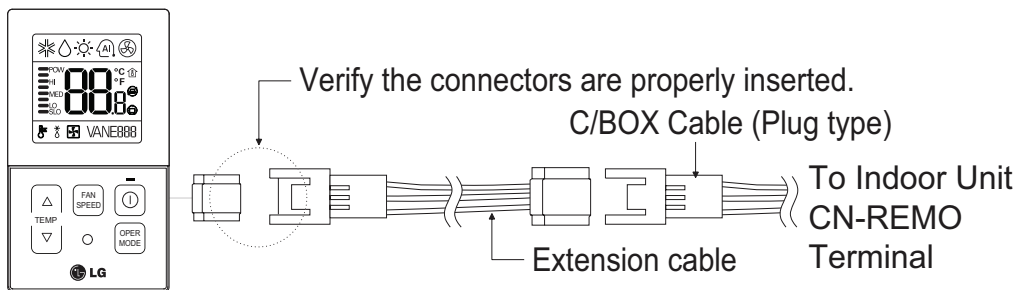



Figure 38: Wired Controller Connection on the Indoor Unit Terminal Block.

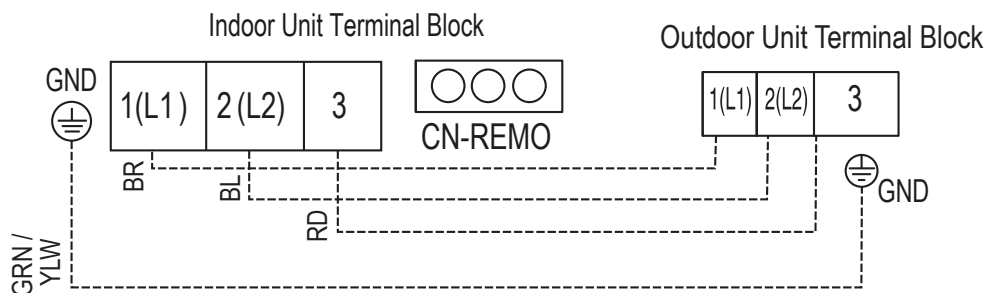

### Note:

When using field-supplied controller cable, make sure to connect the yellow to yellow (communications wire), red to red (12V power wire), and black to black (ground wire) terminals from the remote controller to the indoor unit terminal blocks.

Figure 36: AKB74955602 Wireless Handheld Remote Controller. Buttons may differ depending on model type.

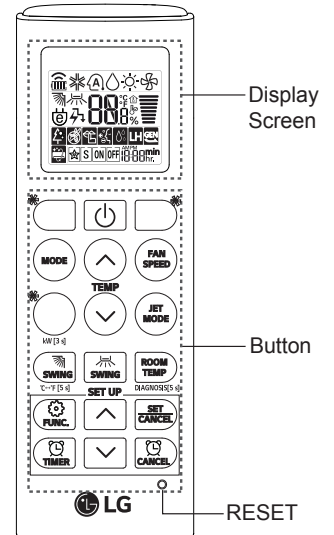

# ELECTRICAL CONNECTIONS


## Wired Controller Placement

Wired controllers include a sensor to detect room temperature. To maintain comfort levels in the conditioned space, the wired controller must be installed in a location away from direct sunlight, high humidity, and where it could be directly exposed to cold air. Controller must be installed four (4) to five (5) feet above the floor where its LED display can be read easily, in an area with good air circulation, and where it can detect an average room temperature.

⊘ Do not install the wired controller near or in:

- Drafts or dead spots behind doors and in corners.
- Hot or cold air from ducts.
- Radiant heat from the sun or appliances.
- Concealed pipes and chimneys.
- An area where temperatures are uncontrolled, such as an outside wall.

Figure 39: Proper Location for the Wired Controller.

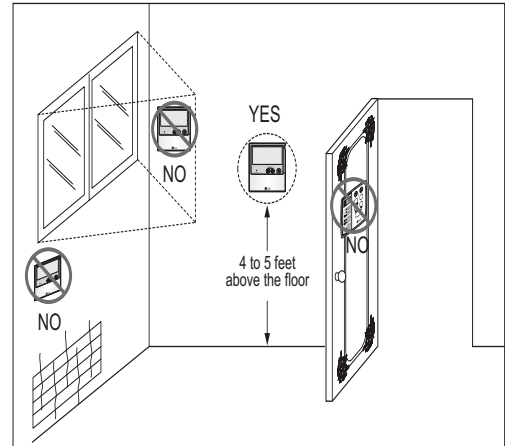

## Assigning the Thermistor for Temperature Detection

Each indoor unit includes a return air thermistor assigned to sense the temperature. If a wired controller is installed, there is a choice of sensing temperature with either the indoor unit return air thermistor or the thermistor in the wired controller. It is also an option to set both thermistors to sense temperature so that indoor unit bases its operation on the first thermistor to reach the designated temperature differential.


# AIRFLOW AND TEMPERATURE DISTRIBUTION

Table 11: Art Cool Mirror Wall Mount Outdoor Unit Air Flow Rate and Static Pressure.

Model No.	Air Flow Rate (CFM)	Static Pressure (in. WG)
LSU090HSV5, LSU120HSV5	1,165	0.0329
LSU180HSV5, LA240HSV3	2,119	0.0384

## LAN090HSV5 and LAN120HSV5

### Cooling

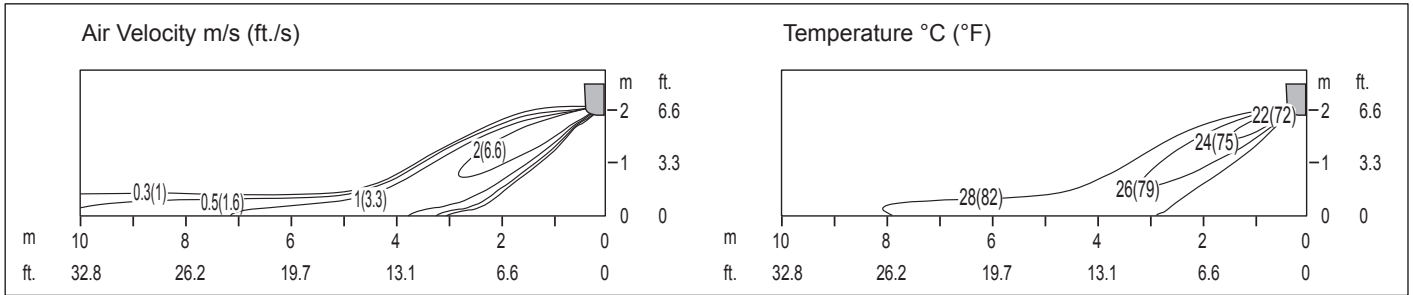


### Side View

Discharge Angle : 35° (From the floor ▾ )

Vertical Louver : Center

Fan Speed : Power

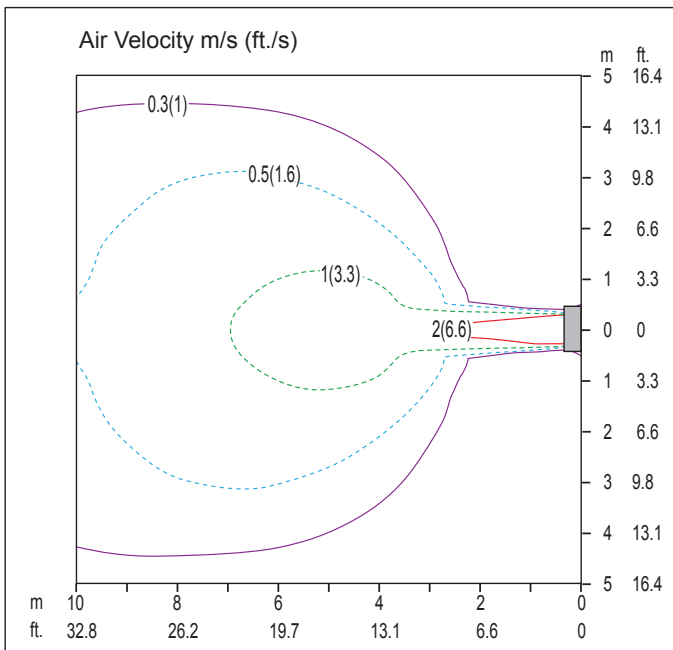


### Top View

Discharge Angle : 35° (From the floor ▾ )

Vertical Louver : Center

Fan Speed : Power

Air Speed 0.3 m/s (1 ft./s) Range : 13.0 m (42.7 ft.)

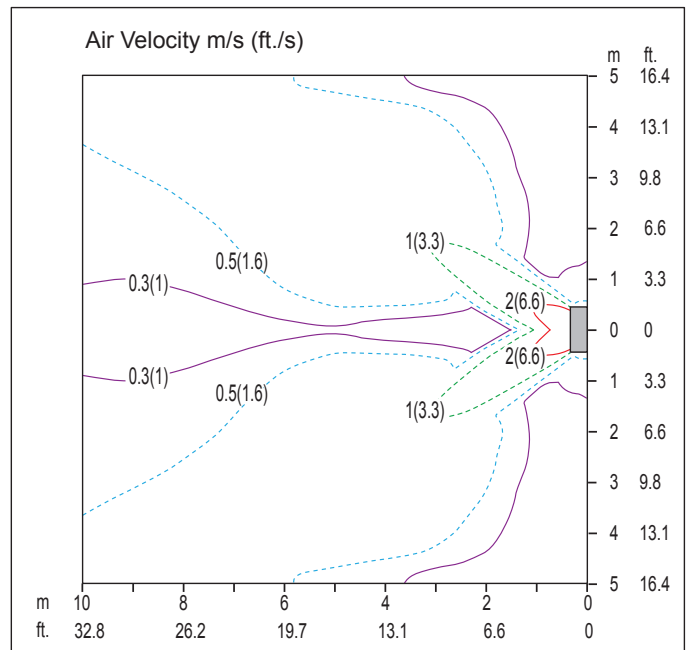

### Top View

Discharge Angle : 35° (From the floor ▾ )


Vertical Louver : Left & Right

Fan Speed : Power

# AIRFLOW AND TEMPERATURE DISTRIBUTION

## LAN090HSV5 and LAN120HSV5, continued.

### Heating

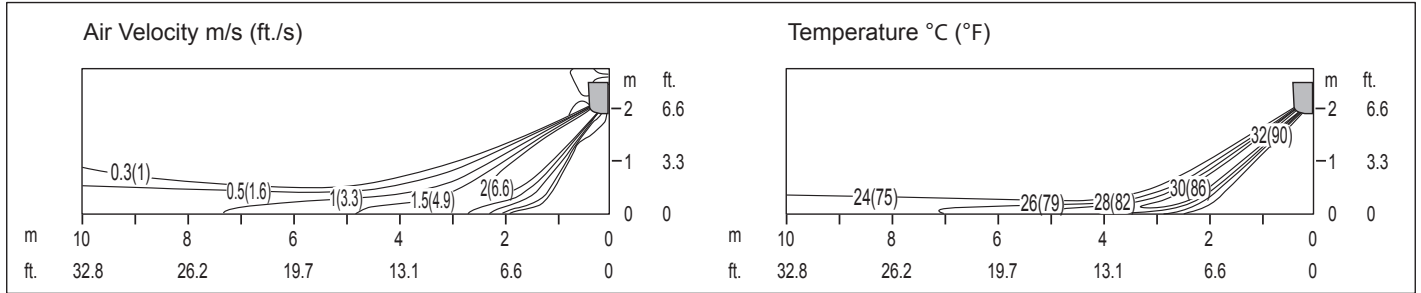


### Side View

Discharge Angle : 55° (From the floor ▼)

Vertical Louver : Center

Fan Speed : Power

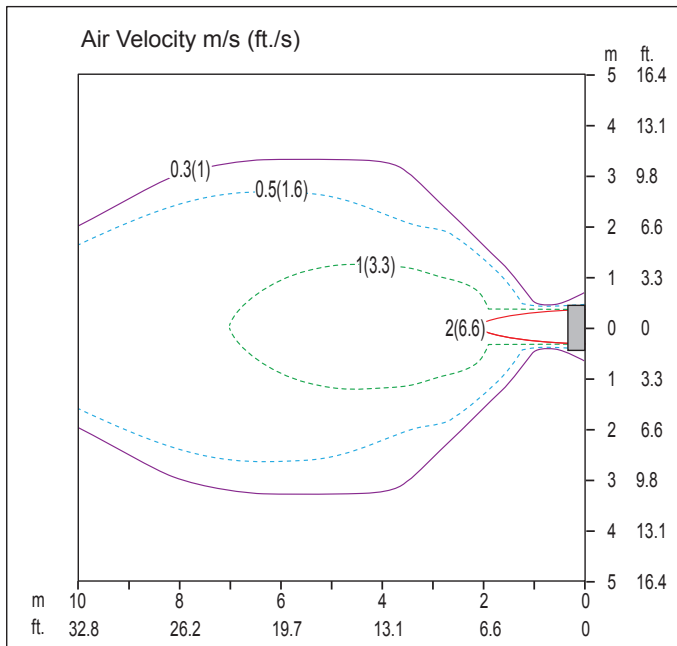


### Top View

Discharge Angle : 55° (From the floor ▼)

Vertical Louver : Center

Fan Speed : Power

Air Speed 0.3 m/s (1 ft./s) Range : 13.5 m (44.3 ft.)

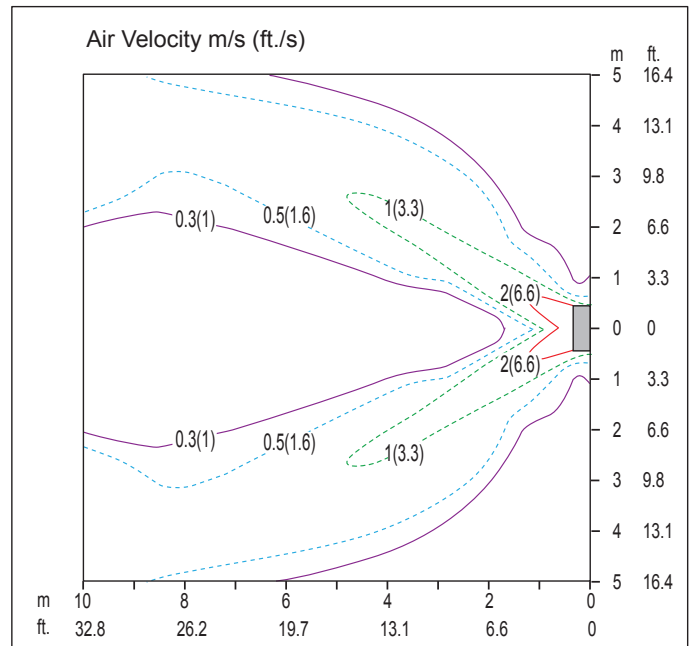

### Top View

Discharge Angle : 55° (From the floor ▼)


Vertical Louver : Left & Right

Fan Speed : Power

# AIRFLOW AND TEMPERATURE DISTRIBUTION

## LAN180HSV5

### Cooling

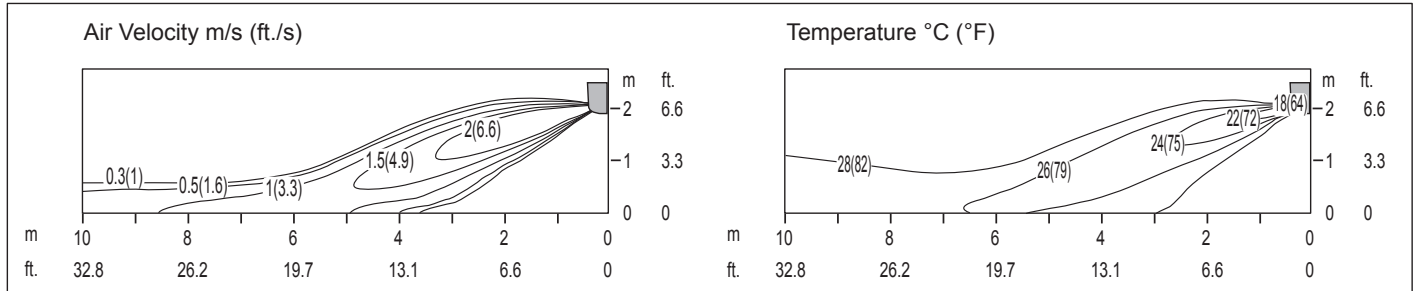


### Side View

Discharge Angle : 25° (From the floor ▾ )

Vertical Louver : Center

Fan Speed : Power

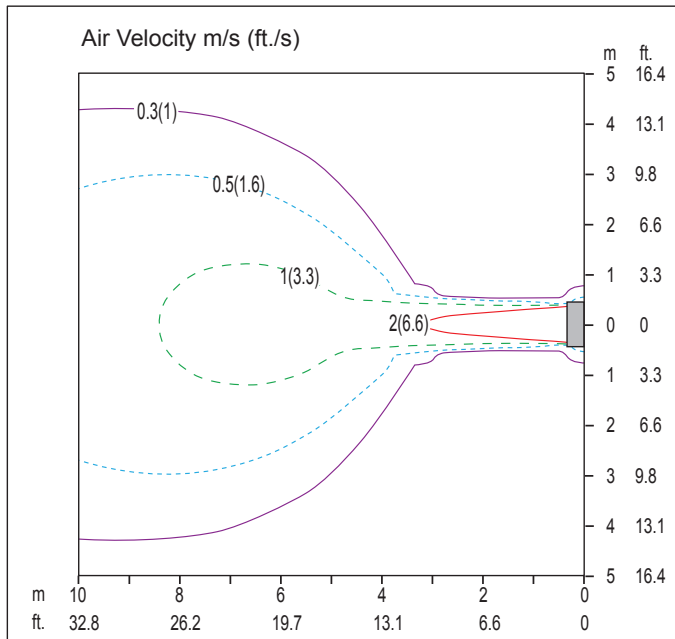


### Top View

Discharge Angle : 25° (From the floor ▾ )

Vertical Louver : Center

Fan Speed : Power

Air Speed 0.3 m/s (1 ft./s) Range : 15.7 m (51.5 ft.)

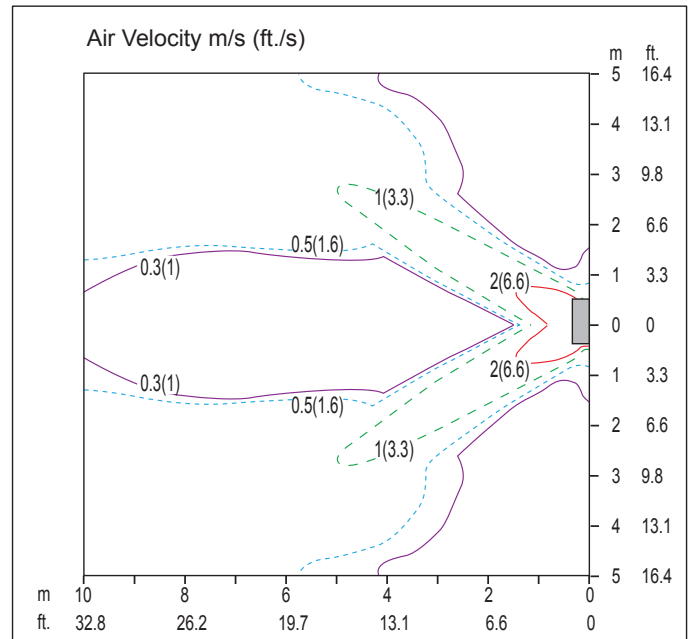

### Top View

Discharge Angle : 25° (From the floor ▾ )


Vertical Louver : Left & Right

Fan Speed : Power

# AIR FLOW AND TEMPERATURE DISTRIBUTION

## LAN180HSV5, continued.

### Heating

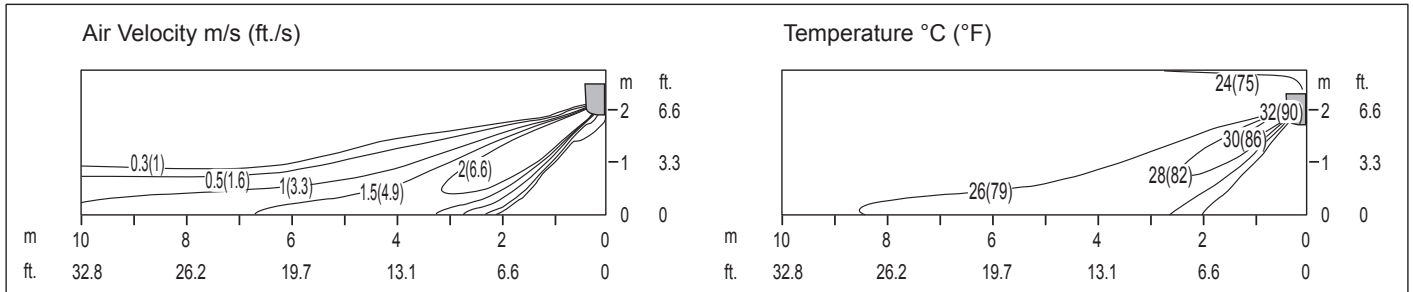


### Side View

Discharge Angle : 45° (From the floor ▾ )

Vertical Louver : Center

Fan Speed : Power

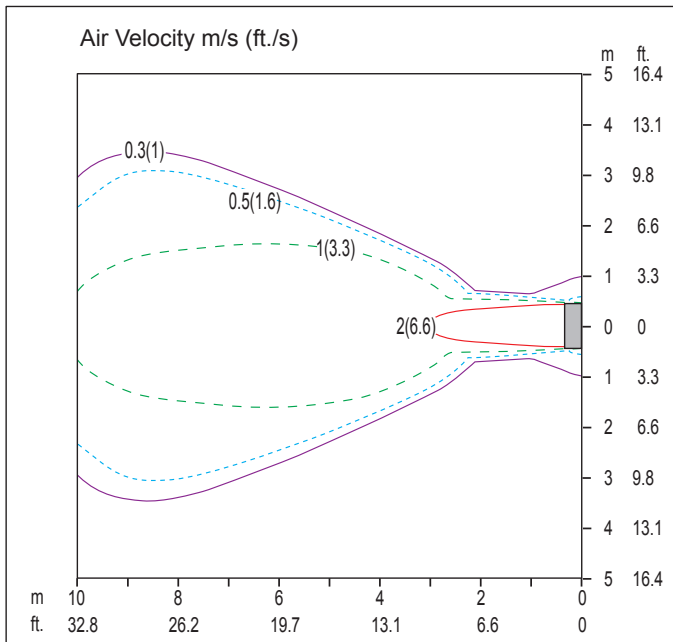


### Top View

Discharge Angle : 45° (From the floor ▾ )

Vertical Louver : Center

Fan Speed : Power

Air Speed 0.3 m/s (1 ft./s) Range : 18.3 m (60.0 ft.)

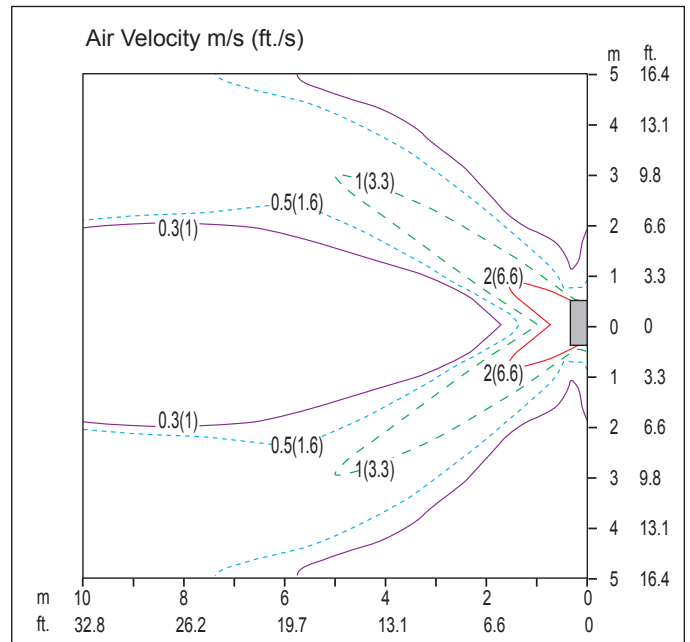

### Top View

Discharge Angle : 45° (From the floor ▾ )

Vertical Louver : Left & Right


Fan Speed : Power

# AIRFLOW AND TEMPERATURE DISTRIBUTION

## LAN240HSV3 Cooling and Heating


Cooling

Discharge angle:45°

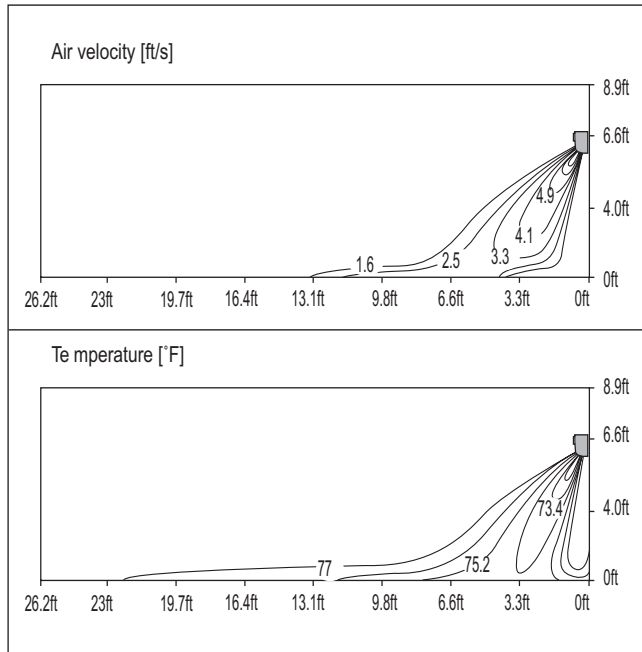

Heating

Discharge angle:50°

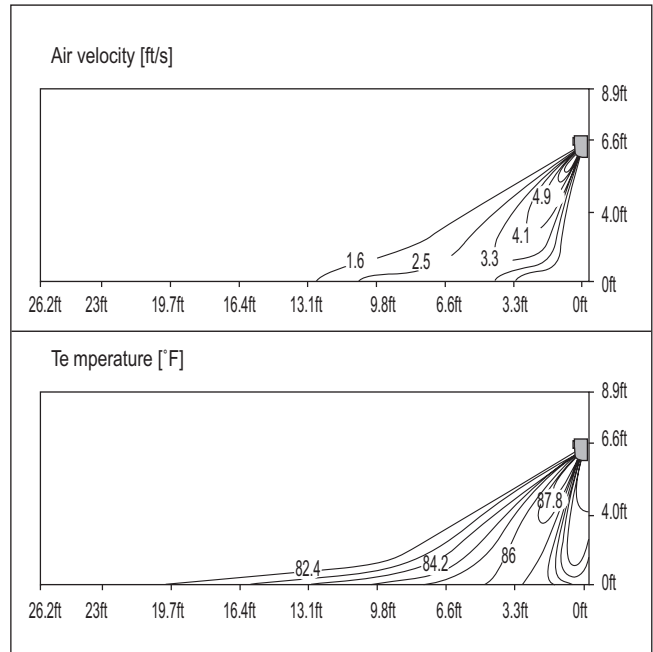

\* Based on maximum air flow.



## LG Monitoring View (LGMV) Diagnostic Software and Cable

LGMV software allows the service technician or commissioning agent to connect a computer USB port to the outdoor unit main printed circuit board (PCB) using an accessory cable without the need for a separate interface device. The main screen for LGMV allows user to view the following real time data on one screen:


- Actual inverter compressor speed
- Target inverter compressor speed
- Actual outdoor fan speed
- Target outdoor unit fan speed
- Actual superheat
- Target superheat
- Actual subcooler circuit superheat
- Target subcooler circuit superheat
- Main EEV position
- Subcooling EEV position
- Inverter compressor current transducer value
- Outdoor air temperature
- Actual high pressure/saturation temperature
- Actual low pressure/saturation temperature
- Suction temperature
- Inverter compressor discharge temperature
- Constant speed compressor discharge temperature
- Front outdoor coil pipe temperature
- Back outdoor coil pipe temperature
- Liquid line pipe temperature
- Subcooler inlet temperature
- Subcooler outlet temperature
- Average indoor unit (IDU) pipe temperature
- Inverter compressor operation indicator light
- Four-way reversing valve operation indicator light
- Pressure graph showing actual low pressure and actual high pressure levels
- Error code display
- Operating mode indicator
- Target high pressure
- Target low pressure
- PCB (printed circuit board) version
- Software version
- Installer name
- Model no. of outdoor units
- Site name
- Total number of connected indoor units
- Communication indicator lights
- Indoor unit capacity
- Indoor unit operating mode
- Indoor unit fan speed
- Indoor unit EEV position
- Indoor unit room temperature
- Indoor unit inlet pipe temperature
- Indoor unit outlet pipe temperature
- Indoor unit error code



Additional screens can be accessed by tabs on the main screen:

1. Cycleview: Graphic of internal components including:
  - Compressors showing actual speeds
  - EEVs
  - Indoor Units
  - Liquid injection valves
  - Temperature and pressure sensors
  - Four-way reversing valve
  - Outdoor fans showing status and speeds
2. Graph: Full screen graph of actual high and low pressures and high and low pressure limits. A sliding bar enables user to go back in time and view data.
3. Control IDU: Enables user to turn on all IDU's default setpoints of 86°F in heat mode or 64°F in cool mode.
4. Setting: Converts metric values to imperial values.
5. Making Data: Recording of real time data to a separate file created to be stored on the user's computer.
6. Loading Data: Recorded data from a saved ".CSV" file can be loaded to create an LGMV session.
7. Electrical Data: The lower half of main screen is changed to show the following:
  - Inverter compressor
    - Amps
    - Volts
    - Power Hz
    - Inverter control board fan Hz
  - Constant compressor
    - Current transducer value
    - Phase

Figure 40: Sample Cycleview.

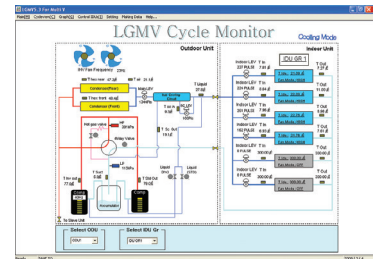

In lieu of connecting to the outdoor unit, user has the option to connect to the indoor unit with the use of a USB to RS-485 connector kit. When connected through the indoor unit, user will not be able to record data.

This software can be used to both commission new systems and troubleshoot existing systems. LGMV data can be recorded to a ".CSV" file and emailed to an LG representative to assist with diagnostic evaluations.

### Recommended Minimum PC Configuration:

- CPU: Pentium® IV 1.6 GHz
- Operating System: Windows® NT/2000/XP/Vista
- Main Memory: 256 MB
- Hard Disk: 600 MB when operating
- Web Browser: Internet Explorer® 5.0

**LGMV is available in different formats, including Mobile LGMV, which is a app for use on wireless devices. Contact your LG Sales Representative for more information.**



# ACCESSORIES

## LG Smart Inverter Monitoring System (SIMS)

SIMS can be used to display and graph operational data for single zone systems and respective components (indoor unit and outdoor unit). SIMS also displays error codes and a troubleshooting guide. SIMS consists of a hardware Wireless Local Area Network (WLAN) module, an interface cable, and a free downloadable application (app) for iOS® or Android™. The user must supply either an Apple® or an Android smart phone; SIMS is not optimized for tablets, and only be used with LG single zone and Multi F systems.

Only trained HVAC service technicians familiar with variable refrigerant flow (VRF) systems in general and with LG's DFS products can use SIMS. The technician must understand inverter air conditioning operation cycles, the meaning of the data displayed by SIMS, and how to use the data to troubleshoot the system.

*iOS is a registered trademark of Cisco in the U.S. and other countries. Android is a trademark of Google Inc. Apple is a trademark of Apple Inc., registered in the U.S. and other countries.*

**Contact your LG Sales Representative for system requirements, the latest version of SIMS, how to download the app, or other information.**

## LG Smart ThinQ

LG Smart ThinQ is a built-in Wi-Fi module, along with a free smart phone app that provides monitoring and remote control capabilities for certain LG single zone systems. The app has the following features and benefits:

- Sign in to the app using LG credentials, or using Google® or Facebook® login credentials. Users only have to log in to the app once; the app remembers login details for subsequent logins.
- View current temperature settings of the air conditioning unit and change temperature, fan speed, and air flow direction from anywhere in the house or at a remote location (through the use of wireless connection). Multiple users can control the household air conditioning unit remotely.
- Monitor filter usage of the unit.
- Set up weekly schedules to start and stop air conditioner activity.
- Set up the unit to run in different Modes, depending on the user's schedule. Set up specific temperatures for when the user is home, away on vacation, or sleeping.
- Troubleshoot problems, and view tips on general maintenance of the system using the Smart Diagnosis function.


*\*Google is a registered trademark of Google Inc.; Facebook is a registered trademark of Facebook.*

**Contact your LG Sales Representative or visit [www.lg-dfs.com](http://www.lg-dfs.com) for system requirements, how to download the app, a user's manual, or other information.**

Figure 41: LG SIMS WLAN Module.



Figure 42: Example of an LG Smart ThinQ Screen (appearance may differ depending on version of software).

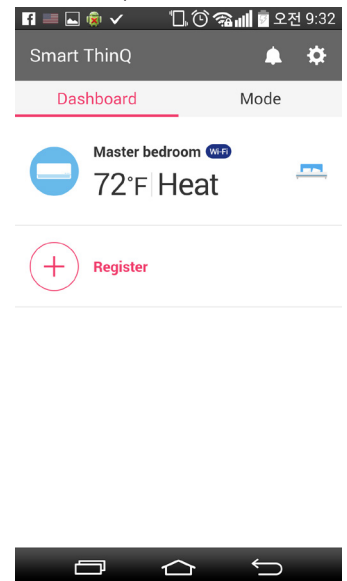

# ART COOL™ MIRROR PERFORMANCE DATA

[“Cooling Capacity Data” on page 44](#)

[“Heating Capacity Data” on page 46](#)

[“Maximum Heating Capacity Data” on page 48](#)

[“Equipment Selection Procedure” on page 50](#)





# PERFORMANCE DATA

## Heating Capacity

### LA090HSV5, LA120HSV5

## Heating Capacity Table for LA090HSV5 (LAU090HSV5 + LAN090HSV5)

Table 16: LAU090HSV5 / LAN 090HSV5 Heating Capacities.

Outdoor Air Temp.		Indoor Air Temperature (°F DB / °F WB)													
		60		64		68		70		72		75		86	
°FDB	°FWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
-3	-4	5.56	0.47	5.39	0.47	5.34	0.47	5.28	0.46	5.24	0.46	5.14	0.46	5.02	0.46
0	-1	6.05	0.52	5.87	0.51	5.81	0.51	5.75	0.51	5.71	0.51	5.59	0.50	5.46	0.50
1	0	6.13	0.53	5.94	0.52	5.88	0.52	5.83	0.51	5.78	0.51	5.66	0.51	5.53	0.51
6	5	6.40	0.54	6.21	0.54	6.15	0.54	6.09	0.53	6.04	0.53	5.92	0.53	5.78	0.53
10	9	6.69	0.56	6.48	0.56	6.42	0.56	6.35	0.55	6.31	0.55	6.18	0.54	6.03	0.54
16	14	6.90	0.57	6.69	0.56	6.62	0.56	6.55	0.56	6.50	0.56	6.37	0.55	6.22	0.55
17	15	6.94	0.57	6.73	0.57	6.67	0.57	6.60	0.56	6.55	0.56	6.42	0.56	6.26	0.56
19	17	7.04	0.58	6.82	0.58	6.76	0.58	6.69	0.57	6.64	0.57	6.50	0.57	6.35	0.57
24	23	7.72	0.61	7.49	0.60	7.41	0.60	7.34	0.59	7.28	0.59	7.13	0.59	6.96	0.59
32	30	9.25	0.65	8.97	0.65	8.88	0.65	8.79	0.64	8.73	0.64	8.55	0.64	8.35	0.64
41	38	10.62	0.70	10.30	0.69	10.19	0.69	10.09	0.68	10.01	0.68	9.81	0.68	9.58	0.68
43	40	10.96	0.71	10.63	0.70	10.52	0.70	10.41	0.69	10.33	0.69	10.13	0.69	9.89	0.69
47	43	11.47	0.72	11.12	0.72	11.01	0.72	10.90	0.71	10.82	0.71	10.60	0.70	10.35	0.70
53	50	11.58	0.73	11.23	0.72	11.12	0.72	11.01	0.72	10.92	0.72	10.71	0.71	10.45	0.71
59	53	11.85	0.74	11.49	0.73	11.37	0.73	11.26	0.72	11.17	0.72	10.95	0.72	10.69	0.72
64	57	12.10	0.75	11.73	0.75	11.61	0.75	11.50	0.74	11.41	0.74	11.18	0.73	10.92	0.73
70	61	12.33	0.76	11.96	0.76	11.83	0.76	11.72	0.75	11.63	0.75	11.39	0.74	11.12	0.74
75	65	12.50	0.77	12.12	0.77	12.00	0.77	11.88	0.76	11.79	0.76	11.55	0.75	11.28	0.75

## Heating Capacity Table for LA120HSV5 (LAU120HSV5 + LAN120HSV5)

Table 17: LAU120HSV5 / LAN120HSV5 Heating Capacities.

Outdoor Air Temp.		Indoor Air Temperature (°F DB / °F WB)													
		60		64		68		70		72		75		86	
°FDB	°FWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
-3	-4	6.94	0.71	6.73	0.70	6.66	0.70	6.59	0.69	6.54	0.69	6.41	0.69	6.26	0.69
0	-1	7.55	0.78	7.32	0.77	7.25	0.77	7.18	0.76	7.12	0.76	6.98	0.75	6.81	0.75
1	0	7.65	0.78	7.42	0.78	7.34	0.78	7.27	0.77	7.21	0.77	7.07	0.76	6.90	0.76
6	5	7.99	0.81	7.75	0.80	7.67	0.80	7.59	0.80	7.54	0.80	7.38	0.79	7.21	0.79
10	9	8.34	0.84	8.09	0.83	8.01	0.83	7.93	0.82	7.87	0.82	7.71	0.81	7.53	0.81
16	14	8.61	0.85	8.34	0.84	8.26	0.84	8.18	0.83	8.12	0.83	7.95	0.82	7.76	0.82
17	15	8.66	0.85	8.40	0.85	8.32	0.85	8.23	0.84	8.17	0.84	8.01	0.83	7.82	0.83
19	17	8.78	0.87	8.52	0.86	8.43	0.86	8.35	0.86	8.28	0.86	8.12	0.85	7.92	0.85
24	23	9.63	0.90	9.34	0.90	9.25	0.90	9.15	0.89	9.08	0.89	8.90	0.88	8.69	0.88
32	30	11.55	0.98	11.20	0.97	11.08	0.97	10.97	0.96	10.89	0.96	10.67	0.95	10.42	0.95
41	38	13.25	1.04	12.85	1.03	12.72	1.03	12.59	1.02	12.49	1.02	12.24	1.01	11.95	1.01
43	40	13.67	1.06	13.26	1.05	13.12	1.05	12.99	1.04	12.89	1.04	12.64	1.03	12.34	1.03
47	43	14.31	1.08	13.88	1.07	13.74	1.07	13.60	1.04	13.50	1.06	13.23	1.05	12.91	1.05
53	50	14.45	1.09	14.02	1.08	13.87	1.08	13.74	1.07	13.63	1.07	13.36	1.06	13.04	1.06
59	53	14.78	1.10	14.33	1.09	14.19	1.09	14.05	1.08	13.94	1.08	13.66	1.07	13.34	1.07
64	57	15.10	1.12	14.64	1.11	14.49	1.11	14.35	1.10	14.24	1.10	13.95	1.09	13.62	1.09
70	61	15.38	1.14	14.92	1.13	14.77	1.13	14.62	1.12	14.51	1.12	14.22	1.11	13.88	1.11
75	65	15.60	1.16	15.13	1.15	14.97	1.15	14.82	1.13	14.71	1.13	14.42	1.12	14.07	1.12

DB: Dry Bulb Temperature (°F) WB: Wet Bulb Temperature (°F) TC: Total Capacity (kBtu/h)

PI: Power Input (kW) (includes compressor, indoor fan motor, and outdoor fan motor)

1. All capacities are net, evaporator fan motor heat is deducted.

2. Direct interpolation is permissible. ⓧ Do not extrapolate.

Nominal capacity as rated: 0 ft. above sea level with 25 ft. of refrigerant piping.

0 ft. level difference between outdoor and indoor units.

Nominal heating capacity rating obtained with air entering the indoor unit at 70°F dry bulb (DB) and 60°F wet bulb (WB), and outdoor ambient conditions of 47°F dry bulb (DB) and 43°F wet bulb (WB).

# PERFORMANCE DATA

## Heating Capacity

### LA180HSV5, LA240HSV3

## Heating Capacity Table for LA180HSV5 (LAU180HSV5 + LAN180HSV5)

Table 18: LAU180HSV5 / LAN180HSV5 Heating Capacities.

Outdoor Air Temp.		Indoor Air Temperature °F DB / °F WB													
°F DB	°F WB	60		64		68		70		72		75		86	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
-3	-4	11.02	1.15	10.68	1.14	10.58	1.14	10.47	1.13	10.39	1.13	10.18	1.12	9.94	1.12
0	-1	11.99	1.27	11.63	1.25	11.51	1.25	11.40	1.24	11.31	1.24	11.08	1.23	10.82	1.23
1	0	12.15	1.28	11.78	1.27	11.66	1.27	11.54	1.25	11.46	1.25	11.23	1.24	10.96	1.24
6	5	12.69	1.32	12.31	1.31	12.18	1.31	12.06	1.30	11.97	1.30	11.73	1.29	11.45	1.29
10	9	13.25	1.37	12.85	1.35	12.72	1.35	12.59	1.34	12.50	1.34	12.24	1.33	11.95	1.33
16	14	13.67	1.38	13.25	1.37	13.12	1.37	12.99	1.35	12.89	1.35	12.63	1.34	12.33	1.34
17	15	13.76	1.40	13.34	1.38	13.21	1.38	13.08	1.37	12.98	1.37	12.72	1.35	12.41	1.35
19	17	13.95	1.42	13.52	1.41	13.39	1.41	13.25	1.40	13.15	1.40	12.89	1.38	12.58	1.38
24	23	15.30	1.48	14.83	1.46	14.68	1.46	14.54	1.45	14.43	1.45	14.14	1.43	13.80	1.43
32	30	18.34	1.59	17.78	1.58	17.60	1.58	17.43	1.56	17.29	1.56	16.95	1.55	16.54	1.55
41	38	21.04	1.70	20.40	1.68	20.20	1.68	20.00	1.67	19.84	1.67	19.44	1.65	18.98	1.65
43	40	21.72	1.73	21.06	1.71	20.84	1.71	20.64	1.69	20.48	1.69	20.07	1.67	19.59	1.67
47	43	22.73	1.76	22.04	1.75	21.82	1.75	21.60	1.73	21.43	1.73	21.00	1.71	20.51	1.71
53	50	22.96	1.78	22.26	1.76	22.03	1.76	21.82	1.75	21.65	1.75	21.21	1.73	20.71	1.73
59	53	23.48	1.80	22.77	1.78	22.54	1.78	22.31	1.76	22.14	1.76	21.70	1.75	21.18	1.75
64	57	23.98	1.84	23.25	1.82	23.02	1.82	22.79	1.80	22.61	1.80	22.16	1.78	21.63	1.78
70	61	24.43	1.86	23.69	1.84	23.45	1.84	23.22	1.83	23.04	1.83	22.58	1.81	22.04	1.81
75	65	24.77	1.89	24.02	1.87	23.78	1.87	23.54	1.85	23.36	1.85	22.89	1.83	22.35	1.83

## Heating Capacity Table for LA240HSV3 (LAU240HSV3 + LAN240HSV3)

Table 19: LAU240HSV3 / LAN240HSV3 Heating Capacities.

Outdoor Air Temp.		Indoor Air Temperature (°F DB/ °F WB)													
°F DB	°F WB	60		64		68		70		72		75		86	
		TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
-3	-4	14.08	1.78	13.65	1.76	13.51	1.76	13.38	1.74	13.28	1.74	13.01	1.73	12.70	1.73
0	-1	15.33	1.96	14.86	1.94	14.71	1.94	14.57	1.92	14.45	1.92	14.16	1.90	13.83	1.90
6	5	16.22	2.04	15.73	2.02	15.57	2.02	15.41	2.00	15.29	2.00	14.99	1.98	14.63	1.98
10	9	16.93	2.11	16.42	2.09	16.25	2.09	16.09	2.07	15.97	2.07	15.65	2.05	15.27	2.05
16	14	17.47	2.13	16.94	2.11	16.76	2.11	16.60	2.09	16.47	2.09	16.14	2.07	15.76	2.07
19	17	17.82	2.20	17.28	2.18	17.11	2.18	16.94	2.15	16.81	2.15	16.47	2.13	16.08	2.13
24	23	19.55	2.28	18.95	2.26	18.76	2.26	18.58	2.23	18.43	2.23	18.06	2.21	17.64	2.21
32	30	23.43	2.46	22.72	2.44	22.49	2.44	22.27	2.41	22.10	2.41	21.65	2.39	21.14	2.39
41	38	26.88	2.62	26.07	2.60	25.80	2.60	25.55	2.57	25.35	2.57	24.84	2.55	24.25	2.55
43	40	27.75	2.66	26.91	2.64	26.63	2.64	26.37	2.61	26.17	2.61	25.64	2.58	25.03	2.58
47	43	29.04	2.72	28.16	2.70	27.88	2.70	27.60	2.67	27.39	2.67	26.84	2.64	26.20	2.64
53	50	29.33	2.75	28.44	2.72	28.15	2.72	27.88	2.70	27.66	2.70	27.11	2.67	26.46	2.67
59	53	30.00	2.78	29.09	2.75	28.80	2.75	28.51	2.72	28.29	2.72	27.72	2.70	27.07	2.70
64	57	30.64	2.83	29.71	2.80	29.41	2.80	29.12	2.78	28.90	2.78	28.32	2.75	27.64	2.75
70	61	31.22	2.87	30.27	2.85	29.97	2.85	29.67	2.82	29.44	2.82	28.85	2.79	28.17	2.79
75	65	31.66	2.91	30.70	2.89	30.38	2.89	30.08	2.86	29.85	2.86	29.25	2.83	28.56	2.83

DB: Dry Bulb Temperature (°F) WB: Wet Bulb Temperature (°F) TC: Total Capacity (kBtu/h)  
 PI: Power Input (kW) (includes compressor, indoor fan motor, and outdoor fan motor)  
 1. All capacities are net, evaporator fan motor heat is deducted.  
 2. Direct interpolation is permissible. ⚠ Do not extrapolate.  
 Nominal capacity as rated: 0 ft. above sea level with 25 ft. of refrigerant piping.

0 ft. level difference between outdoor and indoor units.  
 Nominal heating capacity rating obtained with air entering the indoor unit at 70°F dry bulb (DB) and 60°F wet bulb (WB), and outdoor ambient conditions of 47°F dry bulb (DB) and 43°F wet bulb (WB).

# PERFORMANCE DATA

## Maximum Heating Capacity

### LA090HSV5, LA120HSV5

## Maximum Heating Capacity Table for LA090HSV5 (LAU090HSV5 + LAN090HSV5)

Table 20: LA090HSV5 Maximum Heating Capacities.

Outdoor Air Temp.		Indoor Air Temperature (°F DB / °F WB)													
		60		64		68		70		72		75		86	
°FDB	°FWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
-3	-4	8.43	0.92	8.38	0.93	8.34	0.93	8.31	0.93	8.26	0.94	8.13	0.96	7.74	1.02
0	-1	8.90	0.93	8.84	0.94	8.78	0.95	8.75	0.95	8.68	0.96	8.54	0.98	8.10	1.05
1	0	9.10	0.94	9.03	0.95	8.96	0.96	8.93	0.96	8.86	0.97	8.70	0.98	8.21	1.02
6	5	10.10	0.97	10.00	0.98	9.92	0.99	9.57	1.00	9.77	0.99	9.55	0.98	8.52	0.94
10	9	10.63	0.98	10.52	0.99	10.42	1.00	10.37	1.01	10.23	1.00	9.94	0.99	8.68	0.94
16	14	11.12	0.99	10.99	1.00	10.89	1.01	10.83	1.02	10.65	1.01	10.25	0.99	9.03	0.92
17	15	11.25	0.99	11.12	1.00	11.01	1.02	10.95	1.02	10.76	1.01	10.33	0.98	9.04	0.90
19	17	11.39	0.99	11.25	1.00	11.14	1.01	11.08	1.02	10.87	1.00	10.39	0.97	8.96	0.86
24	23	12.48	1.14	12.34	1.14	12.22	1.14	12.15	1.14	11.85	1.12	11.19	1.08	9.19	0.94
32	30	14.23	1.35	14.07	1.36	13.93	1.36	13.86	1.36	13.44	1.32	12.49	1.26	9.65	1.05
41	38	16.20	1.54	16.02	1.57	15.86	1.60	15.78	1.61	15.25	1.55	14.06	1.45	10.50	1.10
43	40	16.64	1.60	16.45	1.63	16.29	1.66	16.21	1.67	15.64	1.60	14.37	1.49	10.55	1.10
47	43	17.53	1.75	17.32	1.80	17.15	1.86	17.06	1.89	16.43	1.80	15.02	1.66	10.77	1.17
53	50	17.98	1.78	17.76	1.83	17.58	1.89	17.48	1.91	16.79	1.81	15.24	1.65	10.58	1.08
59	53	18.21	1.74	18.19	1.81	18.18	1.87	18.17	1.91	17.42	1.80	15.74	1.65	10.69	1.09
64	57	18.35	1.70	18.08	1.73	17.86	1.76	17.74	1.77	17.02	1.68	15.41	1.55	10.58	1.06
70	61	18.42	1.63	18.10	1.63	17.84	1.62	17.69	1.62	16.98	1.54	15.39	1.42	10.62	0.98
75	65	18.37	1.49	18.00	1.53	17.70	1.57	17.53	1.59	16.81	1.50	15.18	1.38	10.32	0.91

## Maximum Heating Capacity Table for LA120HSV5 (LAU120HSV5 + LAN120HSV5)

Table 21: LA120HSV5 Maximum Heating Capacities.

Outdoor Air Temp.		Indoor Air Temperature (°F DB / °F WB)													
		60		64		68		70		72		75		86	
°FDB	°FWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
-3	-4	10.27	1.31	10.21	1.31	10.16	1.31	10.36	1.36	10.06	1.33	9.91	1.36	9.43	1.44
0	-1	10.85	1.32	10.77	1.33	10.70	1.34	10.66	1.36	10.58	1.36	10.40	1.39	9.87	1.48
1	0	11.09	1.33	11.00	1.34	10.92	1.35	11.13	1.41	10.79	1.37	10.60	1.39	10.01	1.45
6	5	12.31	1.37	12.19	1.38	12.08	1.40	11.93	1.47	11.90	1.40	11.63	1.39	10.38	1.33
10	9	12.96	1.38	12.81	1.40	12.69	1.42	12.63	1.47	12.47	1.42	12.11	1.40	10.57	1.33
16	14	13.55	1.40	13.39	1.41	13.27	1.43	13.19	1.47	12.98	1.42	12.48	1.40	11.01	1.29
17	15	13.71	1.39	13.55	1.41	13.41	1.43	13.34	1.48	13.11	1.42	12.58	1.39	11.01	1.27
19	17	13.87	1.40	13.71	1.42	13.57	1.43	13.81	1.50	13.24	1.41	12.66	1.37	10.92	1.21
24	23	15.46	1.50	15.28	1.51	15.13	1.51	15.05	1.51	14.68	1.48	13.86	1.43	11.39	1.24
32	30	18.00	1.63	17.80	1.63	17.62	1.64	17.53	1.64	17.00	1.59	15.80	1.52	12.21	1.26
41	38	20.86	1.71	20.62	1.74	20.43	1.77	20.32	1.79	19.64	1.72	18.11	1.61	13.52	1.22
43	40	21.50	1.74	21.25	1.77	21.05	1.81	20.94	1.82	20.21	1.74	18.56	1.63	13.63	1.20
47	43	22.78	1.80	22.52	1.86	22.30	1.92	22.18	1.97	21.36	1.86	19.52	1.72	14.00	1.20
53	50	23.37	1.83	23.08	1.89	22.85	1.95	22.72	1.97	21.82	1.87	19.80	1.71	13.76	1.12
59	53	23.67	1.80	23.65	1.87	23.63	1.93	23.62	1.97	22.65	1.86	20.46	1.70	13.89	1.12
64	57	23.86	1.76	23.51	1.79	23.22	1.81	23.06	1.83	22.13	1.74	20.03	1.60	13.75	1.10
70	61	23.94	1.68	23.52	1.68	23.19	1.68	23.00	1.67	22.08	1.59	20.01	1.47	13.81	1.01
75	65	23.88	1.53	23.40	1.58	23.00	1.62	22.78	1.64	21.85	1.55	19.74	1.42	13.41	0.94

DB: Dry Bulb Temperature (°F) WB: Wet Bulb Temperature (°F) TC: Total Capacity (kBtu/h)

PI: Power Input (kW) (includes compressor, indoor fan motor, and outdoor fan motor)

1. All capacities are net, evaporator fan motor heat is deducted.

2. Direct interpolation is permissible. ⚠ Do not extrapolate.

Nominal capacity as rated: 0 ft. above sea level with 25 ft. of refrigerant piping.

0 ft. level difference between outdoor and indoor units.

Nominal heating capacity rating obtained with air entering the indoor unit at 70°F dry bulb (DB) and 60°F wet bulb (WB), and outdoor ambient conditions of 47°F dry bulb (DB) and 43°F wet bulb (WB).



# PERFORMANCE DATA

Maximum Heating Capacity  
LA180HSV5, LA240HSV3

## Maximum Heating Capacity Table for LA180HSV5 (LAU180HSV5 + LAN180HSV5)

Table 22: LA180HSV5 Maximum Heating Capacities.

Outdoor Air Temp.		Indoor Air Temperature (°F DB / °F WB)													
		60		64		68		70		72		75		86	
°FDB	°FWB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
-3	-4	16.99	2.30	16.89	2.30	16.81	2.31	16.76	2.31	16.65	2.34	16.39	2.38	15.61	2.54
0	-1	17.95	2.32	17.81	2.34	17.70	2.35	17.63	2.36	17.50	2.39	17.21	2.44	16.33	2.60
1	0	18.35	2.33	18.19	2.35	18.07	2.38	18.00	2.39	17.86	2.41	17.53	2.44	16.56	2.55
6	5	20.37	2.40	20.16	2.43	19.99	2.46	19.30	2.48	19.70	2.46	19.25	2.43	17.18	2.34
10	9	21.44	2.43	21.20	2.46	21.00	2.49	20.90	2.51	20.63	2.49	20.03	2.45	17.49	2.33
16	14	22.43	2.45	22.17	2.48	21.95	2.52	21.83	2.53	21.47	2.50	20.66	2.45	18.21	2.27
17	15	22.68	2.44	22.41	2.48	22.20	2.52	22.08	2.54	21.69	2.50	20.82	2.44	18.22	2.23
19	17	22.96	2.47	22.68	2.49	22.46	2.52	22.34	2.53	21.91	2.48	20.95	2.40	18.07	2.12
24	23	25.99	2.72	25.69	2.73	25.44	2.73	25.30	2.74	24.68	2.67	23.30	2.58	19.14	2.24
32	30	30.84	3.08	30.48	3.09	30.19	3.10	30.03	3.10	29.12	3.01	27.07	2.88	20.92	2.38
41	38	36.30	3.36	35.88	3.42	35.54	3.48	35.35	3.51	34.17	3.37	31.51	3.17	23.52	2.40
43	40	37.52	3.45	37.08	3.52	36.73	3.58	36.53	3.62	35.26	3.46	32.39	3.23	23.79	2.38
47	43	39.96	3.68	39.49	3.80	39.11	3.92	38.90	3.98	37.46	3.79	34.24	3.50	24.56	2.46
53	50	41.00	3.75	40.49	3.86	40.07	3.97	39.84	4.03	38.27	3.81	34.74	3.48	24.13	2.28
59	53	41.52	3.67	41.48	3.81	41.45	3.95	41.43	4.02	39.73	3.80	35.89	3.48	24.37	2.29
64	57	41.85	3.59	41.23	3.65	40.72	3.70	40.44	3.73	38.81	3.54	35.14	3.26	24.12	2.24
70	61	41.99	3.43	41.26	3.43	40.67	3.42	40.33	3.42	38.72	3.25	35.10	2.99	24.21	2.06
75	65	41.89	3.13	41.04	3.22	40.35	3.30	39.96	3.35	38.32	3.17	34.62	2.90	23.53	1.92

## Maximum Heating Capacity Table for LA240HSV3 (LAU240HSV3 + LAN240HSV3)

Table 23: LA240HSV3 Maximum Heating Capacities.

Outdoor Air Temp.		Indoor Air Temperature (°F DB/ °F WB)													
		60		64		68		70		72		75		86	
°F DB	°F WB	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI	TC	PI
-3	-4	21.31	3.48	21.20	3.49	21.08	3.49	21.03	3.50	20.84	3.54	20.57	3.61	19.58	3.84
0	-1	22.52	3.52	22.36	3.54	22.19	3.56	22.12	3.58	21.90	3.62	21.60	3.69	20.49	3.94
1	0	23.01	3.55	22.84	3.58	22.66	3.61	22.58	3.62	22.34	3.65	22.00	3.69	20.79	3.84
6	5	24.79	3.65	24.56	3.70	24.32	3.75	24.22	3.77	23.89	3.74	23.44	3.70	21.78	3.56
10	9	26.21	3.67	25.94	3.72	25.67	3.77	25.55	3.80	25.11	3.76	24.51	3.71	22.30	3.53
16	14	27.86	3.70	27.56	3.75	27.26	3.80	27.13	3.82	26.51	3.77	25.68	3.69	22.63	3.43
17	15	28.11	3.73	27.80	3.78	27.49	3.83	27.35	3.86	26.73	3.78	25.88	3.67	22.75	3.27
19	17	28.79	3.74	28.48	3.78	28.16	3.82	28.02	3.84	27.29	3.76	26.30	3.64	22.67	3.22
24	23	30.50	3.77	30.17	3.78	29.84	3.79	29.69	3.80	28.71	3.70	27.37	3.57	22.46	3.10
32	30	32.25	3.65	31.90	3.66	31.55	3.67	31.39	3.67	30.10	3.56	28.34	3.40	21.87	2.82
41	38	33.89	3.41	33.53	3.47	33.16	3.54	33.00	3.56	31.50	3.41	29.46	3.20	21.96	2.43
43	40	34.24	3.26	33.87	3.32	33.50	3.39	33.34	3.42	31.76	3.26	29.61	3.04	21.71	2.25
47	43	34.72	3.14	34.34	3.25	33.97	3.35	33.80	3.40	32.10	3.22	29.80	2.98	21.34	2.10
53	50	35.62	3.20	35.21	3.30	34.80	3.40	34.62	3.44	32.76	3.24	30.24	2.96	20.97	1.95
59	53	36.07	3.14	36.04	3.26	36.01	3.38	36.00	3.43	33.99	3.23	31.24	2.96	21.17	1.96
64	57	36.36	3.07	35.86	3.11	35.36	3.16	35.14	3.19	33.21	3.01	30.58	2.78	20.96	1.91
70	61	36.48	2.93	35.90	2.93	35.31	2.92	35.05	2.92	33.14	2.76	30.55	2.55	21.04	1.76
75	65	36.39	2.68	35.71	2.75	35.03	2.83	34.72	2.86	32.78	2.69	30.14	2.47	20.44	1.64

DB: Dry Bulb Temperature (°F) WB: Wet Bulb Temperature (°F) TC: Total Capacity (kBtu/h)

PI: Power Input (kW) (includes compressor, indoor fan motor, and outdoor fan motor)

1. All capacities are net, evaporator fan motor heat is deducted.

2. Direct interpolation is permissible. Ⓣ Do not extrapolate.

Nominal capacity as rated: 0 ft. above sea level with 25 ft. of refrigerant piping.

0 ft. level difference between outdoor and indoor units.

Nominal heating capacity rating obtained with air entering the indoor unit at 70°F dry bulb (DB) and 60°F wet bulb (WB), and outdoor ambient conditions of 47°F dry bulb (DB) and 43°F wet bulb (WB).

# EQUIPMENT SELECTION PROCEDURE

## Correction Factors

### Cooling / Heating Correction Factors

For Single Zone Art Cool Mirror Wall Mounted systems, calculate the equivalent length of the liquid line from the outdoor unit to the indoor unit. Also, determine the elevation difference of the indoor unit above or below the outdoor unit. Find corresponding cooling or heating capacity correction factors as shown below. Multiply the correction factors by the cooling or heating capacity obtained from the capacity tables using design conditions. The resultant is the NET cooling or heating capacity.

### Refrigerant Line Length Derates

For air-cooled systems, a capacity correction factor may have to be applied to account for the length of the system's refrigerant pipe. Rate of change in capacity due to increased piping lengths is shown below.

### Cooling Capacity Coefficient Factors

Table 24: Single Zone Art Cool Mirror Wall Mounted Unit Cooling Capacity Coefficient Factors.

Piping Length (ft.)		16.4	24.6	32.8	49.2	65.6	82.0	98.4	114.8	131.2	147.6	164.0
Rate of Capacity Change (%)	LSU090HSV5 (9,000 Btu/h)	100	100	98.2	94.6	91.1	87.5	-	-	-	-	-
	LSU120HSV5 (12,000 Btu/h)	100	100	98.2	94.6	91.1	87.5	-	-	-	-	-
	LSU180HSV5 (18,000 Btu/h)	100	100	99.1	97.3	95.5	93.6	91.8	90.0	-	-	-
	LAU240HSV3 (24,000 Btu/h)	100	100	98.9	96.7	94.4	92.2	90.0	-	-	-	-

### Heating Capacity Coefficient Factors

Table 25: Single Zone Art Cool Mirror Wall Mounted Unit Heating Capacity Coefficient Factors.

Piping Length (ft.)		16.4	24.6	32.8	49.2	65.6	82.0	98.4	114.8	131.2	147.6	164.0
Rate of Capacity Change (%)	LSU090HSV5 (9,000 Btu/h)	100	100	99.1	97.3	95.6	93.8	-	-	-	-	-
	LSU120HSV5 (12,000 Btu/h)	100	100	99.1	97.3	95.6	93.8	-	-	-	-	-
	LSU180HSV5 (18,000 Btu/h)	100	100	99.5	98.6	97.7	96.8	95.9	95.0	-	-	-
	LAU240HSV3 (24,000 Btu/h)	100	100	99.4	98.3	97.2	96.1	95.0	-	-	-	-

### Equivalent Piping Length for Piping Components

Table 26: Equivalent Piping Length for Elbows.

Component	Size (Inches)													
	1/4	3/8	1/2	5/8	3/4	7/8	1	1-1/8	1-1/4	1-3/8	1-1/2	1-5/8	1-3/4	2-1/8
Elbow (ft.)	0.5	0.6	0.7	0.8	1.2	1.3	1.5	1.6	1.8	2.0	2.1	2.3	2.5	2.8

### Altitude Correction Factor

The impact of air density must be considered on systems installed at a significant altitude above sea level, therefore, locally accepted altitude correction factors must be applied.

# EQUIPMENT SELECTION PROCEDURE

## Correction Factors

### Defrost Correction Factor for Heating Operation

The outdoor unit heating capacity may need to be adjusted for frost accumulation on air-cooled systems. If design day conditions are below the dewpoint of the surrounding air, frost may not be a problem and no correction factor is needed. In certain weather conditions, however, frost may form and accumulate on the air-cooled outdoor unit coil and impact the coils ability to transfer heat. If significant frost accumulates on the outdoor unit coil, a defrost algorithm will start automatically. The timing between defrost periods is determined by the system's ability to achieve a target head pressure value.

Capacity and AHRI ratings tables do not factor in capacity reduction when frost has accumulated on the condenser coil, nor during defrost operation.

Integrated heating capacity values can be obtained using the formula:

$$A = B \times C$$

Where:

A = Integrated Heating Capacity.

B = Value found in the Capacity Table.

C = Correction Factor for Frost Accumulation Factor (from table at right).

Table 27: Outdoor Unit Frost Accumulation Factor (Heating)<sup>1</sup>.

Entering DB (°F)	19.4	23.0	26.6	32.0	37.4	41.0	44.6
Derate factor	0.98	0.95	0.93	0.86	0.93	0.96	1.0

<sup>1</sup>At 85% outdoor air relative humidity.

The frost accumulation factor does not account for effects of snow accumulation restricting airflow through the outdoor unit coil.

### Note:

There will be a temporary reduction in capacity when frost / ice accumulates on the outside surface of the outdoor unit heat exchanger. The level of capacity reduction depends on a number of factors, for example, outdoor temperature (°F DB), relative humidity (RH), and the amount of frost present.

### Check the Indoor and Outdoor Unit Selection(s)

Compare the corrected cooling and heating capacities to the load calculations. Is each capacity sufficient for the zone it serves?

For each indoor unit, the corrected capacity must be at least equal to the total of the cooling design load (plus ventilation load, if applicable) for the space served by the indoor unit. For each indoor unit, the corrected capacity also must be at least equal to the total of the heating design load (plus ventilation load, if applicable) for the space(s) and / or thermal zones served by the indoor unit.

The outdoor unit selected must be large enough to offset the total cooling load for all spaces it serves (account for ventilation air cooling load if the ventilation air has not been pretreated to room neutral conditions). The outdoor unit must also be large enough to offset the total heating load for all spaces it serves.

If the corrected heating capacity ratio exceeds 100%, reselect the equipment, or change the system design by moving some of the load to another system.

### System Sizing Check Formulas

#### 1. Outdoor Unit Rated Capacity.

$Q_{odu(rated)}$  (From capacity tables).

#### 2. Outdoor Unit Capacity at $T_i$ , $T_o$ Temperature.

$Q_{odu(T_i, T_o)}$  (From capacity tables).

#### 3 Outdoor Unit Capacity Coefficient Factor.

$$F_{(T_i, T_o)} = Q_{odu(T_i, T_o)} / Q_{odu(rated)}$$

#### 4. Piping Correction Factor (From Capacity Coefficient Factor Tables).

$F_{(length)}$  for each piping length

#### 5. Individual Indoor Unit Combination Capacity.

$$Q_{idu( combi)} = Q_{odu(rated)} \times Q_{idu(rated)} / Q_{idu(rated-total)}$$

#### 6. Individual Indoor Unit Actual Capacity.

$$Q_{idu( actual)} = Q_{odu( combi)} \times F_{(T_i, T_o)} \times F_{(length, altitude)}$$

### Conclusions and Recommendations

- Understand the design safety factors.
- Reference load calculations for actual cooling and heating capacities (applies in 99% of applications – consider total load when latent load is greater than 30%).
- Verify that the sensible load of the zone is satisfied.
- Use caution when sizing to meet listed capacity specifications for the scheduled manufacturer's equipment.

If further system design assistance is needed, or you have a unique application you would like to discuss, contact your LG sales rep.



# ART COOL™ MIRROR APPLICATION GUIDELINES

**“Placement Considerations” on page 53**

**“Installing Outdoor Units Indoors” on page 58**

**“Refrigerant Piping Design” on page 61**

# PLACEMENT CONSIDERATIONS

## Indoor Unit

### Selecting the Best Location for the Indoor Unit

#### Note:

Follow recommended best practices when choosing an indoor location for the single zone indoor unit.

#### Dos

- Follow the table at right for minimum clearance of indoor unit from the top of the unit to the ceiling.
- Clearance gap between any wall or enclosure and the left or right side of the unit must be greater than 4 inches. Ensure there is sufficient maintenance space.
- Unit must be at least 6.5 feet from the floor for adequate clearance.
- Place the unit where drainage can be obtained easily. Condensation drain must be conveniently routed away from the unit.
- Locate the indoor unit in a location where it can be easily connected to the outdoor unit within allowable limits.
- Use a metal detector to locate studs in the walls. Anchor unit following stud location to prevent damage to the wall.

#### ⊘ Dont's

- Do not install the unit near a heat or steam source, or where considerable amounts of oil, iron powder, or flour are used. (These materials may generate condensate, cause a reduction in heat exchanger efficiency, or the drain to malfunction. If this is a potential problem, install a ventilation fan large enough to vent out these materials.)
- Ensure there are no obstacles to air circulation around the unit; keep proper distances from ceilings, doorways, floor, walls, etc.
- Do not install in an area where operation sound will disturb occupants--place the unit where noise prevention is taken into consideration
- Do not install near doorway.
- Avoid installing the unit near high-frequency generators.

#### ⚠ WARNING

The unit must not be installed where sulfuric acid and flammable or corrosive gases are generated, vented into, or stored. There is risk of fire, explosion, and physical injury or death.

The unit may be damaged, may malfunction, and / or will not operate as designed if installed in any of the conditions listed.

#### Note:

- ⊘ Indoor units (IDUs) must not be placed in an environment where the IDUs may be exposed to harmful volatile organic compounds (VOCs) or in environments where there is improper air make up or supply or inadequate ventilation. If there are concerns about VOCs in the environment where the IDUs are installed, proper air make up or supply and/ or adequate ventilation must be provided. Additionally, in buildings where IDUs will be exposed to VOCs consider a factory-applied epoxy coating to the fan coils for each IDU.
- If the unit is installed near a body of water, the installation parts are at risk of corroding. Appropriate anti-corrosion methods must be taken for the unit and all installation parts.

#### Installing in an Area Exposed to Unconditioned Air

In some installation applications, areas (floors, walls) in some rooms may be exposed to unconditioned air (room may be above or next to an unheated garage or storeroom). To countermeasure:

- Verify that carpet is or will be installed (carpet may increase the temperature by three [3] degrees).
- Add insulation between the floor joists.
- Install radiant heat or another type of heating system to the floor.



Figure 43: Single Zone Art Cool Mirror Wall Mount Indoor Unit Clearance Requirements.


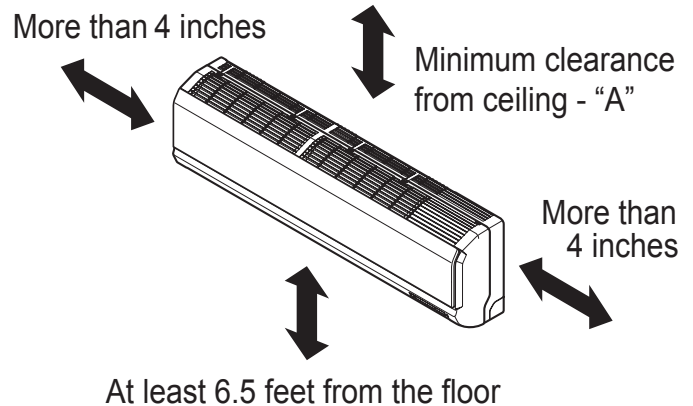


Table 28: Single Zone Art Cool Mirror Indoor Unit Ceiling Clearances.

"A" Ceiling Clearance (inches)	Indoor Unit Model(s)
5	LAN090HSV5, LAN120HSV5
8	LAN180HSV5, LAN240HSV3

Figure 44: Installing Near a Heat or Steam Source.

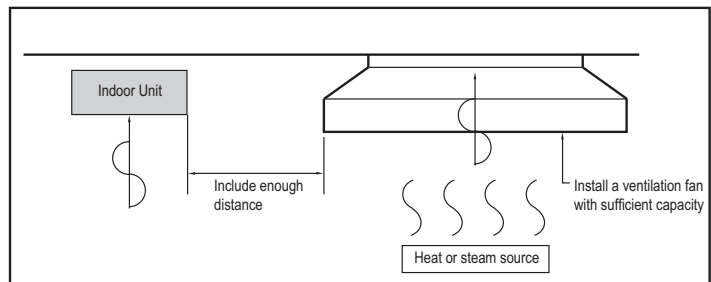

# PLACEMENT CONSIDERATIONS

## Outdoor Unit

### Selecting the Best Location for the Outdoor Unit

#### **⚠ DANGER**

⊘ Do not install the unit in an area where combustible gas may generate, flow, stagnate, or leak. These conditions can cause a fire, resulting in bodily injury or death.

- ⊘ Do not install the unit in a location where acidic solution and spray (sulfur) are often used as it can cause bodily injury or death.
- ⊘ Do not use the unit in environments where oil, steam, or sulfuric gas are present as it can cause bodily injury or death.

#### **⚠ CAUTION**

When deciding on a location to place the outdoor unit, be sure to choose an area where run-off from defrost will not accumulate and freeze on sidewalks or driveways, which may create unsafe conditions. Properly install and insulate any drain hoses to prevent the hose from freezing, cracking, leaking, and causing unsafe conditions from frozen condensate.

#### **⚠ WARNING**

Install a fence to prevent vermin from crawling into the unit or unauthorized individuals from accessing it. Follow the placement guidelines set forth in "Clearance Requirements".

Select a location for installing the outdoor unit that will meet the following conditions:

- Where there is enough strength to bear the weight of the outdoor unit.
- A location that allows for optimum air flow and is easily accessible for inspection, maintenance, and service.
- Where piping between the outdoor unit and indoor unit(s) are within allowable limits.
- Include space for drainage to ensure condensate flows properly out of the unit when it is in heating mode. Avoid placing the outdoor unit in a low-lying area where water could accumulate.
- If the outdoor unit is installed in a highly humid environment (near an ocean, lake, etc.), ensure that the site is well-ventilated and has a lot of natural light (Example: Install on a rooftop).

#### **⊘ Don'ts**

- Where it will be subjected to direct thermal radiation from other heat sources, or an area that would expose the outdoor unit to heat or steam like discharge from boiler stacks, chimneys, steam relief ports, other air conditioning units, kitchen vents, plumbing vents, and other sources of extreme temperatures.
- Where high-frequency electrical noise / electromagnetic waves will not affect operation.
- Where operating sound from the unit will disturb inhabitants of surrounding buildings.
- Where the unit will be exposed to direct, strong winds.
- Where the discharge of one outdoor unit will blow into the inlet side of an adjacent unit (when installing multiple outdoor units).

### Outdoor Unit Condensate Drain Piping

Outdoor unit requires condensate drain piping. Condensate drain pipe is constructed with materials approved by local code. See Placement Considerations for information in reference to outdoor unit placement.

### Planning for Snow and Ice

To ensure the outdoor unit operates properly, certain measures are required in locations where there is a possibility of heavy snowfall or severe windchill or cold:

1. Prepare for severe winter wind chills and heavy snowfall, even in areas of the country where these are unusual phenomena.
2. Position the outdoor unit so that its airflow fans are not buried by direct, heavy snowfall. If snow piles up and blocks the airflow, the system may malfunction.
3. Remove any snow that has accumulated four (4) inches or more on the top of the outdoor unit.
4. In climates that may experience significant snow buildup, mount the outdoor unit on a raised, field-provided platform or stand. The raised support platform must be high enough to allow the unit to remain above possible snow drifts, and must be higher than the maximum anticipated snowfall for the location.
5. Design the mounting base to prevent snow accumulation on the platform in front or back of the unit frame.
6. Provide a field fabricated snow protection hood to keep snow and ice and/or drifting snow from accumulating on the coil surfaces.
7. To prevent snow and heavy rain from entering the outdoor unit, install the condenser air inlets and outlets facing away from direct winds.
8. Consider tie-down requirements in case of high winds or where required by local codes.

# PLACEMENT CONSIDERATIONS

## Outdoor Unit

### Planning for Snow and Ice, continued.

#### ⚠ CAUTION

When deciding on a location to place the outdoor unit, be sure to choose an area where run-off from defrost will not accumulate and freeze on sidewalks or driveways, which may create unsafe conditions. Properly install and insulate any drain hoses to prevent the hose from freezing, cracking, leaking, and causing unsafe conditions from frozen condensate.

### Underground Refrigerant Piping

Refrigerant pipe installed underground must be routed inside a vapor tight protective sleeve to prevent insulation deterioration and water infiltration. Refrigerant pipe installed inside underground casing must be continuous without any joints. Underground refrigerant pipe must be located at a level **below the frost line**.

Table 29: Utility Conduit Sizes (Inches).

Liquid Pipe <sup>1</sup>	Vapor Pipe <sup>1</sup>		
	3/8 (1-1/8 <sup>2,3</sup> )	1/2 (2.0 <sup>2,4</sup> )	5/8 (2-1/8 <sup>2,4</sup> )
1/4 (1.0) <sup>4</sup>	4	4	4
3/8 (1-1/8) <sup>4</sup>	4	4	4

<sup>1</sup>OD pipe diameter in inches; Values in parenthesis ( ) indicate OD of pipe with insulation jacket.

<sup>2</sup>Diameter of pipe with insulation. Thickness of pipe insulation is typical. Actual required thickness may vary based on surrounding ambient conditions and must be calculated and specified by the design engineer.

<sup>3</sup>Insulation thickness (value in parenthesis) = 3/8 inch.

<sup>4</sup>Insulation thickness (value in parenthesis) = 3/4 inch.

### Tie-Downs and Lightning Protection

#### Tie-Downs

- The strength of the roof must be checked before installing the outdoor units.
- If the installation site is prone to high winds or earthquakes, when installing on the wall or roof, securely anchor the mounting base using a field-provided tie-down configuration approved by a local professional engineer.
- The overall tie-down configuration must be approved by a local professional engineer.

#### Note:

Always refer to local code when using a wind restraint system.

#### Lightning Protection

- To protect the outdoor unit from lightning, it must be placed within the specified lightning safety zone.

Table 31: Safety Zone Specifications.

Building Height (feet)	66	98	148	197
Protection Angle (°)	55	45	35	25

- Power cable and communication cable must be installed five (5) feet away from lightning rod.
- A high-resistance ground system must be included to protect against induced lightning or indirect strike.

#### Note:

If the building does not include lightning protection, the outdoor unit may be damaged from a lightning strike. Inform the customer of this possibility in advance.

Figure 45: Typical Arrangement of Refrigerant Pipe and Cable(s) in a Utility Conduit.


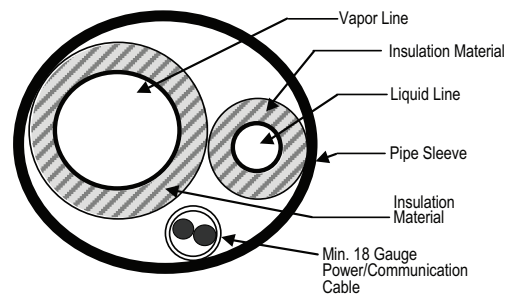


Table 30: Outdoor Unit Refrigerant Pipe Connections (All Brazed Type).

Model	Liquid Conn. (inches)	Vapor Conn. (inches)
LSU090HSV5, LSU120HSV5	1/4	3/8
LSU180HSV5, LAU240HSV3	3/8	5/8

Figure 46: Lightning Protection Diagram.

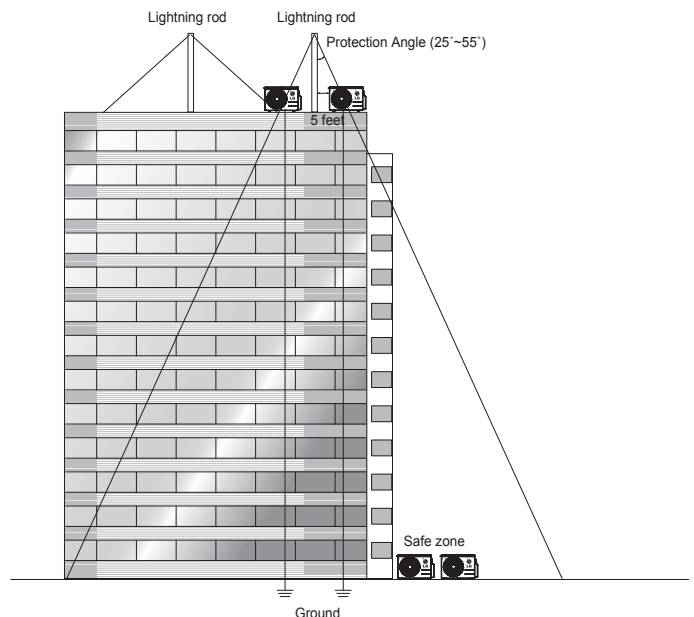

# PLACEMENT CONSIDERATIONS

## Outdoor Unit

### Oceanside Applications

#### Use of a Windbreak to Shield from Sea Wind

##### Note:


Ocean winds may cause corrosion, particularly on the condenser and evaporator fins, which, in turn could cause product malfunction or inefficient performance.

- ⚠ Avoid installing the outdoor unit where it would be directly exposed to ocean winds.
- Install the outdoor unit on the side of the building opposite from direct ocean winds.
- Select a location with good drainage.
- Periodically clean dust or salt particles off of the heat exchanger with water.
- If the outdoor unit must be placed in a location where it would be subjected to direct ocean winds, install a concrete windbreak strong enough to block any winds.
- Windbreak must be more than 150% of the outdoor unit's height. There must be 2 to 3-1/2 inches of clearance between the outdoor unit and the windbreaker for purposes of air flow.

#### Use of a Building to Shield from Sea Wind

If a windbreak is not possible, a building or larger structure must be used to shield the outdoor unit from direct exposure to the sea wind. The unit must be placed on the side of the building directly opposite to the direction of the wind as shown in the Figure on the right.


Figure 47: Oceanside Placement Using Windbreak.

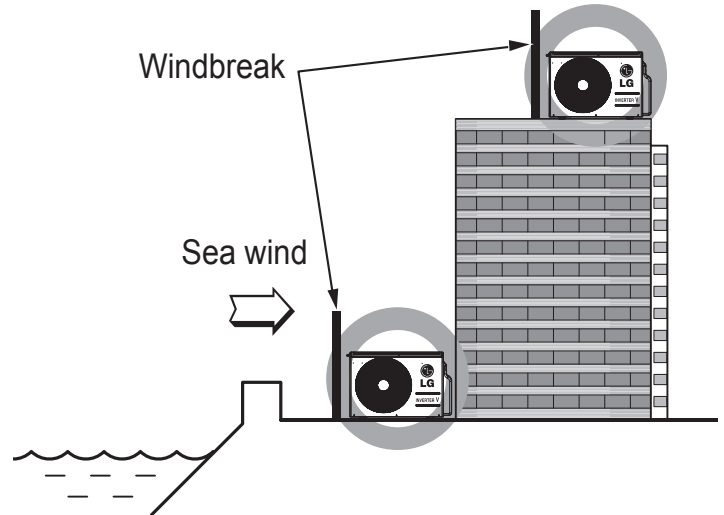

##### Note:

Additional anti-corrosion treatment may need to be applied to the outdoor unit at oceanside locations.

Figure 48: Placement Using Building as Shield.

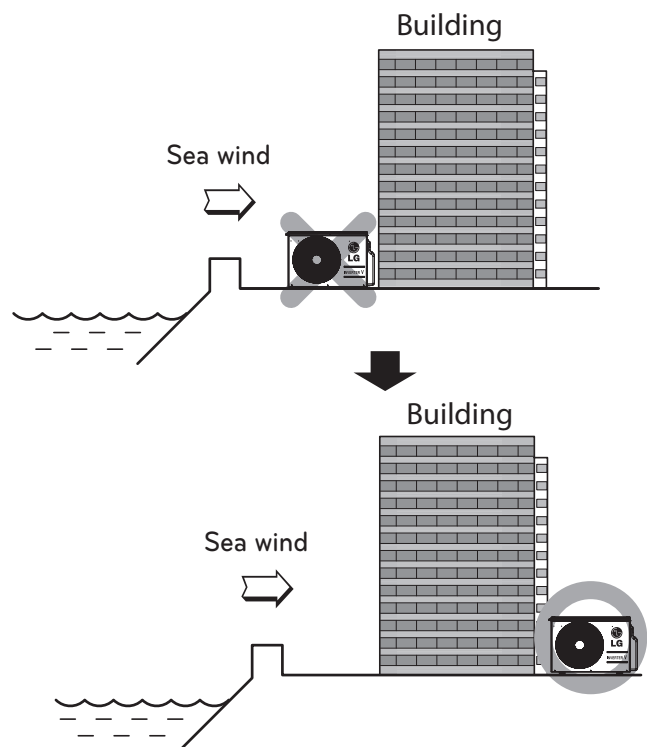



# PLACEMENT CONSIDERATIONS

## Outdoor Unit

### Minimum Allowable Clearance and Service Access Requirements

Proper clearance for the outdoor unit coil is critical for proper operation. When installing the outdoor unit, consider service, inlet and outlet, and minimum allowable space requirements as illustrated in the diagrams below.

- Include enough space for airflow and for service access. If installing multiple outdoor units, avoid placing the units where the discharge of one unit will blow into the inlet side of an adjacent unit.
- If an awning is built over the unit to prevent direct sunlight or rain exposure, make sure that the discharge air of the outdoor unit isn't restricted.
- ⚠ No obstacles to air circulation around the unit; keep proper distances from ceilings, fences, floor, walls, etc. (Install a fence to prevent pests from damaging the unit or unauthorized individuals from accessing it.)

### Single Zone Art Cool Mirror Wall Mount Outdoor Unit (9,000, 12,000, 18,000, 24,000 Capacities) Service Access and Allowable Clearances

Specific clearance requirements in the diagram below are for 9,000, 12,000, 18,000, and 24,000 Btu/h capacities. Figure below shows the overall minimum clearances that must be observed for safe operation and adequate airflow around the outdoor unit.

When placing the outdoor unit under an overhang, awning, sunroof or other "roof-like structure", observe the clearance requirements (as shown in Cases 1 and 2) for height in relation to the unit. To have successful service access to the outdoor unit, see the Figure below for minimum spacing. When installing multiple outdoor units, see Cases 4 and 5 for correct spacing requirements.

#### Note:

If the outdoor unit is installed between standard and minimum clearances, capacity decreases approximately 10%.

Figure 49: Single Zone Art Cool Mirror 9,000, 12,000, 18,000, 24,000 Capacity Outdoor Unit Service Access and Allowable Clearances Diagram.

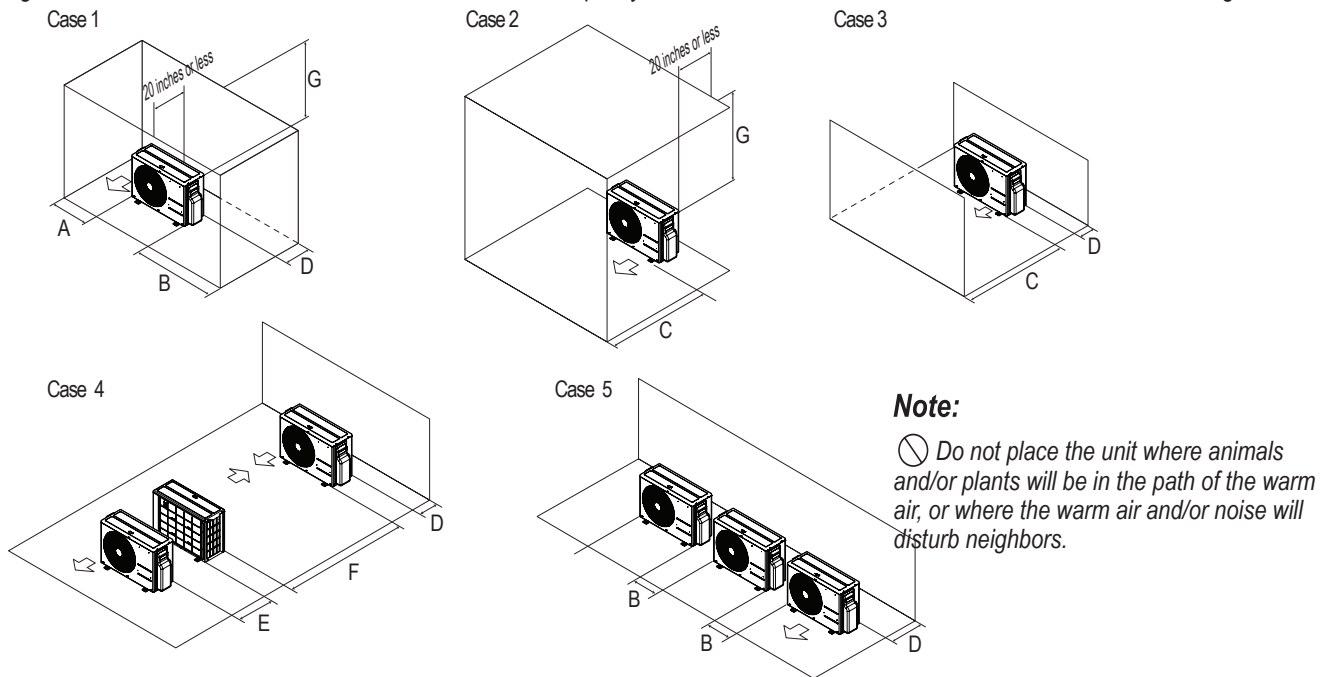


Table 32: Single Zone Art Cool Mirror 9,000, 12,000, 18,000, 24,000 Outdoor Unit Service Access and Allowable Clearances Diagram Legend.

Unit: Inch		A	B	C	D	E	F	G
Case 1	Standard	12	24	-	12	-	-	-
	Minimum	4	10	-	4	-	-	40
Case 2	Standard	-	-	20	-	-	-	-
	Minimum	-	-	14	-	-	-	40
Case 3	Standard	-	-	20	12	-	-	-
	Minimum	-	-	14	4	-	-	-
Case 4	Standard	-	-	-	12	24	-	-
	Minimum	-	-	-	4	8	79	-
Case 5	Standard	-	24	-	12	-	-	-
	Minimum	-	10	-	4	-	-	-

# PLACEMENT CONSIDERATIONS

## Installing Outdoor Units Indoors

### Installing Outdoor Units Indoors

Single Zone Art Cool Mirror Wall Mount outdoor units are engineered to be mounted outdoors and include technology designed to minimize the negative effects of winter weather's freezing rain, sleet, and snow. Some building projects, however, necessitate placing the HVAC outdoor units indoors:

- Lack of ground space.
- Lack of an appropriate outdoor location that meets system design requirements.
- When mounting on the roof is not an option due to a lack of roof space.
- Roof warranty will be voided if mechanical equipment is placed on the membrane.
- On retrofit projects, a former chiller / boiler / air handler equipment room, mechanical area, or penthouse already exists.
- To curtail the potential need for redundant zone heating devices such as wall-fin radiators or duct heaters.
- In extremely cold environments where there is a significant amount of run-time at temperatures well below freezing outside the outdoor unit ambient air temperature range published in this engineering manual.

### Benefits of Installing Outdoor Units Indoors

- Shelters the outdoor unit from direct exposure to prevailing winds that decrease the heating capability of the outdoor unit.
- Protects equipment from freezing precipitation and / or potential ice build-up that could hinder unit operation.
- Maintains coil heat transfer efficiency by reducing the number of and shortening the cycle time for defrost operation.
- Easier maintenance and servicing during inclement weather.
- When mounted in a fully enclosed space, limiting the ambient air temperature may allow the Single Zone Art Cool Mirror Wall Mount system designer to eliminate oversizing.
- The outdoor unit to compensate for loss of capacity at low ambient temperatures.
- May also curtail the need to provide inefficient redundant zone heating devices such as wall-fin radiators and second-stage ancillary heating devices.

### Design Considerations Include:

- Enclosure types and elements such as louvers (see next page), rain hoods, dampers and controls, heating methods and sizing of heating devices.
- Heating strategies.
- Duct design.
- Condensate handling.

### General Guidelines

- Follow ASHRAE 62.1 design guidelines.
- Depending on the project / application, a roof over the outdoor units in combination with a wind break may be all that is necessary.
- Consider the potential for snow accumulation near louvers / roof openings. Outside air intakes and discharge ducts/louvers must be engineered to clear anticipated snow accumulation levels by at least one (1) foot.
- In situations where operation is anticipated at temperatures lower than the product's minimum operating temperature, ancillary heat must be provided to heat the outdoor unit coils to ensure continuous compressor operation and heating.

It may be necessary to use a field-fabricated air guide to prevent discharge air from short-cycling back to the coil inlet.

- Consider the direction of prevailing winds and opening placement. If possible, locate inlet openings upwind of discharge openings and other exhaust outlets.
- When inlet and outlet openings are placed on the same wall, minimum distance between the two openings must be approximately three (3) feet (minimum distance varies significantly with variations in outlet opening face velocity).
- If roof-mounted ventilation openings are used, strategically locate the inlet ventilation opening(s) upwind of the outlet opening(s).
- Discharge and supply ductwork must be designed to avoid weather related long periods of water entrainment and the potential for microbial growth.

# PLACEMENT CONSIDERATIONS

## Installing Outdoor Units Indoors

Provide a means to drain the condensate generated during heating mode and defrost cycle in addition to rainwater that infiltrates the inlet louver enclosed area.

- Install a field-provided drain pan under the outdoor units and provide a path to a nearby floor drain.
- If the ambient air temperature is expected to drop below 32°F in the enclosure, heat the bottom surface of the pan, drain line, and floor drain so that the condensate does not freeze before reaching the drain.

### ⚠ CAUTION

When deciding on a location to place the outdoor unit, be sure to choose an area where run-off from defrost will not accumulate and freeze on sidewalks or driveways which may create unsafe conditions.

Allow for ventilation intake and exhaust air based on maximum outdoor unit fan capacity.

- Select the size, type and orientation of architectural louvers with adequate “net free area” face velocity to ensure the total external static pressure from the outdoor unit fan does not exceed design limitations (see specification data tables).
- No obstructions must be placed in front of the louver that could hamper the free flow (throw) of air.
- Roof top openings and / or discharge and supply louvers must be equipped with screens to prevent bird and insect infiltration.

### Note:


For louver recommendations, see below and on the next page.

As always, the best solution for each project balances acceptable heating performance (considering local weather conditions), capital costs, life cycle energy consumption, and limitations set forth by local building codes.

## Louver Recommendations for Outdoor Unit Enclosure

1. Outdoor Unit Enclosure: Manual Door Open Type.
2. Louver Angle: No More Than 15° Horizontally.
3. Space Between Louvers: More than 4 inches (Recommend).
4. Louver Shape: Wing or Plane Type.

### Note:

- Open Rate and Inlet must be taken into consideration when designing the louvered outdoor unit enclosure.
-  Do not use “S” type louvers.

### Note:

#### If the Louver Open Rate is Too Small

1. Noise can occur because of the increased air velocity passing through the louver blade.
2. Noise can occur from louver blade vibrations.
3. A drop in outdoor unit fan performance (excess static pressure can cause a drop in outdoor unit performance and heat exchanger efficiency).
4. If the louver open rate is too small or there is insufficient air flow exchange, the air conditioner might stop operating.

Figure 50: Louver Recommendations.


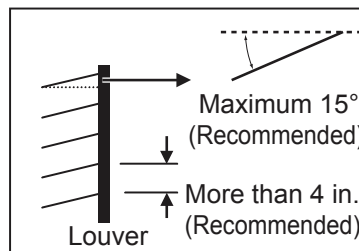


Figure 51: Using “S” Type Louvers.

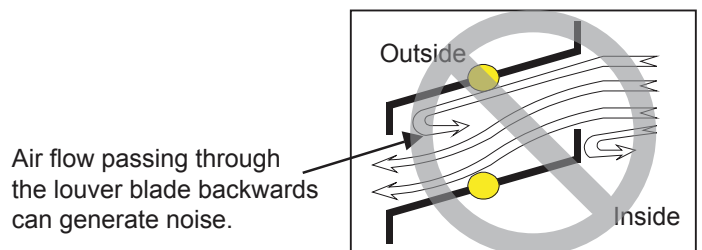


# PLACEMENT CONSIDERATIONS

## Installing Outdoor Units Indoors

### Open Rate by Louver Radian

Figure 52: Open Rate by Louver Radian Formula.

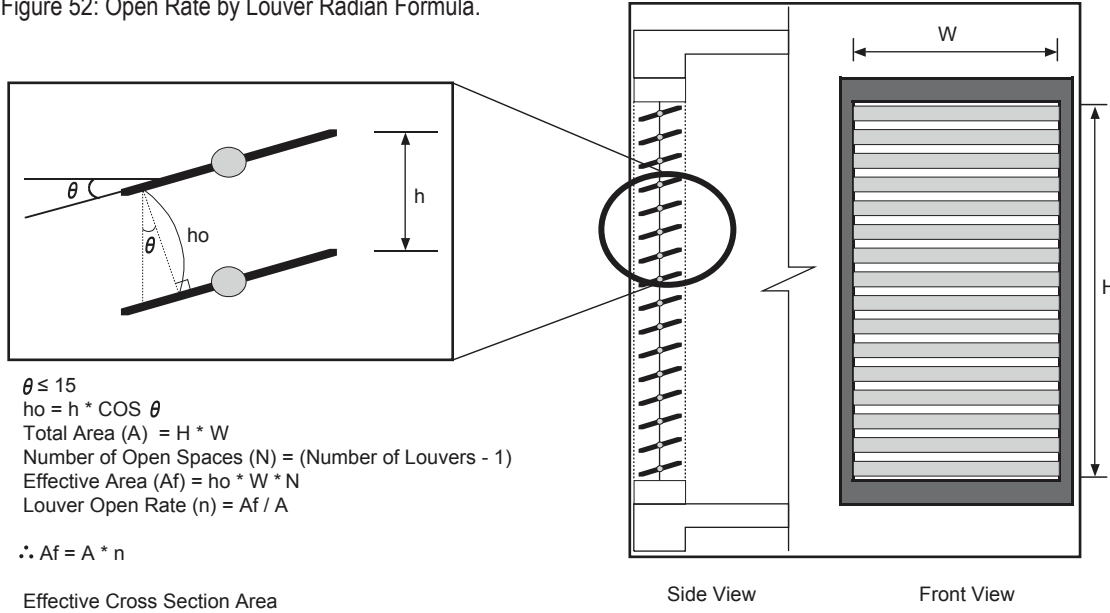

### Confirming Air Flow Rate / Total Opening Rate

- Example: LSU180HSV5.
  - Discharge Airflow Rate: 2,119 ft.<sup>3</sup>/min.
  - Velocity of Outlet Air: 16.4 ft./s
  - Velocity of Inlet Air: 8.2 ft./s
  - Open Rate = 80% or More
- Open Rate =  $\frac{\text{Effective Face Area (Af)}}{\text{Total Face Area (A)}}$


- Inlet airflow must match or exceed discharge airflow.
- Separate inlet airflow from discharge airflow to prevent recirculation.

### Formula

- Total Louver Dimension (Excluding Frame) (A) = 3.9 feet x 6.2 feet = 24.2 ft.<sup>2</sup>
- Area Blocked by Outdoor Unit (Discharge) (B) = 2.6 feet x 2.8 feet = 7.41 ft.<sup>2</sup>
- Inlet Louver Dimension (A - B) = 16.8 ft.<sup>2</sup>
- Equivalent Inlet Dimension (Open Rate 80%) = 16.8 ft.<sup>2</sup> x 0.8 = 13.44 ft.<sup>2</sup>
- Equivalent Inlet Airflow = 13.44 ft.<sup>2</sup> x 8.2 ft./s x 60 sec./min. = 6,612 ft.<sup>3</sup>/min.
- Equivalent Inlet Airflow / Discharge Airflow = 6,612 ft.<sup>3</sup>/min. / 2,119 ft.<sup>3</sup>/min. = 312% (Within Allowable Limits)


Figure 53: Example of Installing Outdoor Unit Indoors.

### Louver Dimensions

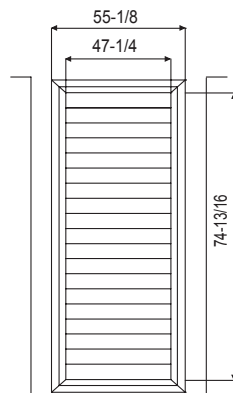


Unit: Inch

### Air Guide Duct on Outdoor Unit

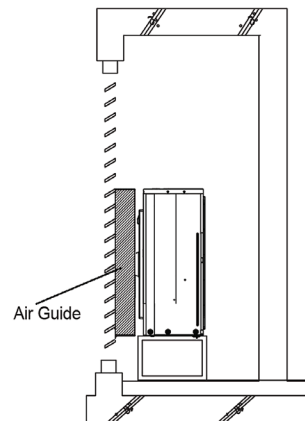

### Outdoor Unit Dimensions

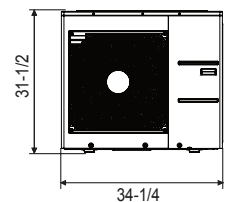

# REFRIGERANT PIPING DESIGN

## Design Guideline Summary

### Device Connection Limitations

A single-zone system consists of one outdoor unit and one indoor unit. One of the most critical elements of a single-zone system is the refrigerant piping. If the connection piping is not within allowable limits, there will be reliability, performance, noise, and vibration issues.

Table 33 below lists pipe length limits that must be followed in the design of a Single Zone Art Cool Mirror Wall Mount refrigerant pipe system.

Table 34 includes additional refrigerant charge necessary for longer piping lengths. Refer to the Figure on the right for maximum length and elevation of piping.

Figure 54: Single Zone Art Cool Mirror Wall Mount System Layout.

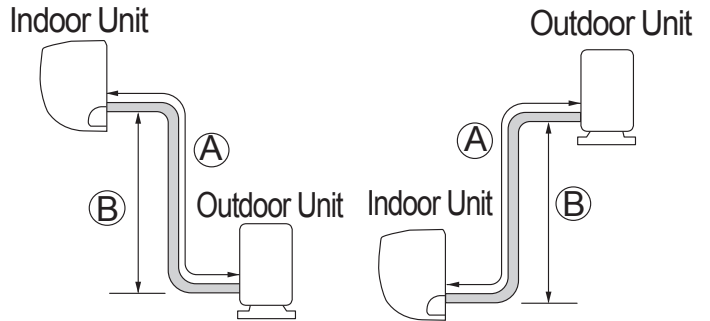


Table 33: Single Zone Art Cool Mirror Refrigerant Piping System Limitations.

Model Numbers		LA090HSV5 (LAN090HSV5/ LSU090HSV5)	LA120HSV5 (LAN120HSV5/ LSU120HSV5)	LA180HSV5 (LAN180HSV5/ LSU180HSV5)	LA240HSV3 (LAN240HSV3/ LAU240HSV3)
Pipe Sizes	Vapor	Ø3/8	Ø3/8	Ø5/8	Ø5/8
	Liquid	Ø1/4	Ø1/4	Ø3/8	Ø3/8
Pipe Length (ELF = Equivalent Length of pipe in Feet)	Standard Piping Length	24.6	24.6	24.6	24.6
	Piping Length with No Additional Refrigerant	41	41	24.6	24.6
	Longest total equivalent piping length	82	82	114.8	98.4
	Shortest total equivalent piping length	9.8	9.8	9.8	9.8
	Distance between fittings and indoor units or outdoor units	≥20 inches	≥20 inches	≥20 inches	≥20 inches
Elevation (All Elevation Limitations are Measured in Actual Feet)	If outdoor unit is above indoor unit	49.2	49.2	49.2	49.2
	If outdoor unit is below indoor unit	49.2	49.2	49.2	49.2
Additional Refrigerant Needed (oz/ft)		0.22	0.22	0.38	0.38

Table 34: Single Zone Art Cool Mirror Refrigerant Piping System Additional Refrigerant Charge.

Model Numbers		Refrigerant Piping Length (ft.)											
		16.4	24.6	32.8	41.0	49.2	65.6	82.0	98.4	114.8	131.2	147.6	164.0
LA090HSV5 (LAN090HSV5 / LSU090HSV5)	Additional Refrigerant Charge (oz.)	0	0	0	0	1.8	5.4	9.0	-	-	-	-	-
LA120HSV5 (LAN120HSV5 / LSU120HSV5)		0	0	0	0	1.8	5.4	9.0	-	-	-	-	-
LA180HSV5 (LAN180HSV5 / LSU180HSV5)		0	0	3.1	6.2	9.3	15.6	21.8	28.0	34.3	-	-	-
LA240HSV3 (LAN240HSV3 LAU240HSV3)		0	0	3.1	6.2	9.3	15.6	21.8	28.0	-	-	-	-

### Note:

- Capacity is based on standard length.
- Equivalent Pipe Length = Actual Pipe Length + Number of Bends x 0.3.
- Additional Refrigerant Charge Calculation :  $X (g) = [ (Refrigerant\ Pipe\ Length) - (No\ Charge\ Pipe\ Length) ] \times (Additional\ Refrigerant)$ .
- There is no need to add refrigerant if equivalent pipe is less than the "piping length with no additional refrigerant" in the table above.

*Inverter*



LG Electronics, U.S.A., Inc.  
Air Conditioning Technologies  
4300 North Point Parkway  
Alpharetta, Georgia 30022  
[www.lghvac.com](http://www.lghvac.com)

LG Electronics Commercial Products Support  
1-888-865-3026 USA  
Follow the prompts for commercial A/C products.

EM\_SZ\_ArtCoolMirror\_HSV5\_HSV3\_03\_18  
Supersedes: EM\_SZ\_ArtCoolMirror\_HSV4\_HSV3\_12\_15