Ultra-Aire™ XT205H Ventilating Dehumidifier

The Ultra-Aire XT205H is the largest capacity whole house residential dehumidifier on the market. The unit removes up to 205 pints of water per day and retains the same cabinet size as the XT105H and the XT155H. Ideally suited for large homes with high ceilings, the XT205H effectively conditions inside humid air and provides the proper amount of fresh air ventilation for homes up to 5,000 square feet.





D570,988 8,069,681

Ultra-Aire XT205H Specifications

Part Number:	4031560	
Blower:	526 CFM @ 0.0" WG	
	495 CFM @ 0.2" WG	
	458 CFM @ 0.4. WG	
Power:	1525 Watts @ 80°F and 60% RH	
Supply Voltage:	115 VAC - 1 Phase - 60 Hz.	
	Unit requires dedicated 20 Amp circuit	
Current Draw:	13.2 Amps	
Energy Factor:	2.7 L/kWh	
Operating Range:	56°F Min, 95°F Max (Inlet Air Temperature)	
Sized for:	5,000 Square Foot Typical	
Minimum Perform	ance at 80°F and 60% RH	
Water Removal:	205 pints/day	
	5.7 Pints/kWh	

6" Round Inlet; 10" Round Inlet; 10" Oval Outlet

Air Filter: MERV-11, Standard Pleat Efficiency: 65% ASHRAE Dust Spot

Size: 16" x 20" x 2"

Optional Air Filter: MERV-14, Embossed Pleat (will need filter housing)

Efficiency: 95% ASHRAE Dust Spot

Size: 20" x 24" x 4"

Power Cord:

, ,

Drain Connection: 3/4" Threaded Female NPT

Refrigerant Type: R410A (Refer to manufacturers label for more

10', 115 VAC, Ground

information)

Refrigerant Amount: 2 lbs. 1 oz.

Dimensions:	Unit With Collars	Unit Without Collars	Shipping
Width:	20 1/4"	20 1/4"	25"
Height:	21 3/4"	21 3/4"	28"
Length:	41 1/2"	37 3/4"	42"
Weight:	140 lbs.	139 lbs.	173 lbs.



One of the best Limited Warranties in the industry today –

1 YEAR 100% – All Parts and Labor 5 YEARS 100% – Condenser, Evaporator, and Compressor only (with certain limitations)

Optional	Accessories	
4028539	DEH 3000 Control	
4028407	DEH 3000R Control (with remote)	
4021475	MERV 11 Filter (16"x20"x2")	
4027420	MERV 11 Filters 4-Pack	
4027424	MERV 11 Filters 12-Pack	
4028614	Pump Kit	
4025287	MERV 14 Filter Housing	
4024370	MERV 14 Filter (20"x24"x4")	
4029087	MERV 14 Filters 3-Pack	
4023672	6" Motorized Damper	
4026859	6" Flex Duct 25'	
4020128	6" Flex Insulated Duct 25'	
4020656	6" Inlet/Exhaust Hood	
4024375	10" Gravity Damper	
4026969	10" Flex Duct 25'	
4022126	10" Flex Insulated Duct 25'	
4028399	10" Oval to Round Adapter	











Ultra-Aire™ XT205H Installation Options

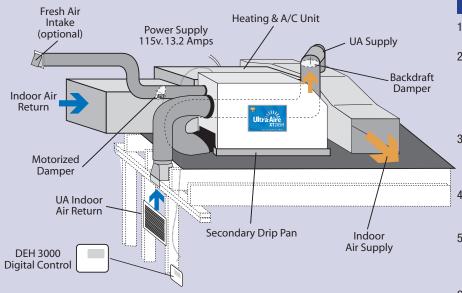

Ultra-Aire XT205H Attic Installation

- The indoor air return should come from an open area on the first floor or main level of the home / building.
- The Ultra-Aire supply can be ducted into the forced air system
 past the air conditioning coil. The duct connection should be
 perpendicular to the air flow. You may also run an independent
 supply directly from the dehumidifier into a large open room.
 Depending on the application, multiple returns and or supplies may
 be needed.
- The optional six inch fresh air intake should be located at least six feet away from any exhaust ports, such as, dryer, range hood, or combustion device exhaust. Intake location should be consistent with local codes.
- A section of flex duct or vibration absorbing duct should be located between the connections of the Ultra-Aire ductwork and the forced air system ductwork. (When ducting into the forced air systems)
- A back draft damper should be installed when ducting into the forced air system. This prevents counter-flow of the A/C supply air through the UA XT205H. A back draft damper is not needed when ducted independently.
- 6. If placed over a finished area, a secondary drip pan is recommended

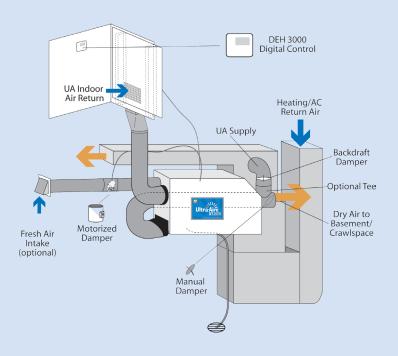

Ultra-Aire XT205H Basement Or Crawlspace Installation

- Indoor air return should come from an open area of the first or second floor.
- The Ultra-Aire supply should be ducted into the forced air system supply beyond the air conditioning coil. The duct connection should be perpendicular to the air flow.
- An optional ten inch tee fitting with an adjustable blade damper on the straight run may be attached at the Ultra-Aire supply. This allows for increased air flow to the basement/crawlspace during the summer months.
- The optional six inch fresh air intake should be located at least six feet away from any exhaust ports, such as, dryer, range hood, or combustion device exhaust. Intake location must be consistent with local codes.
- A section of flex duct or vibration absorbing duct should be located between the connections of the Ultra-Aire ductwork and the forced air system ductwork.
- The backdraft damper prevents counter-flow of the A/C supply air through the Ultra-Aire XT205H.

Please Note: Therma-Stor does not recommend drawing air from the return ducting system and discharging into the supply, because it could reduce the capacity and may cause potential counterflow through the unit. Preferred installation is to draw air from a separate intake duct located in the central part of the home. Duct the outlet air into the supply duct for distribution throughout the home. A backdraft damper prevents air from the supply duct from being pushed backward through the Ultra-Aire XT205H when central (A/C) fan is on and the Ultra-Aire fan is off.